 


# decakila



KMHR001W  
NOSE AND EYEBROW TRIMMER



 
# TO TRIM YOUR NOSE AND EAR HAIR

Attach the nose and ear trimmer head to the trimmer handle. Turn unit on. Gently insert trimmer head into nostril. Gently move trimmer in and out of the nostril to remove unwanted hair. Avoid inserting the trimmer more than ¼" to ensure safe trimming.

Turn unit on. Gently insert trimmer head no more than ¼" into outer ear canal. Gently move trimmer.

around the outer ear to remove unwanted hair extending beyond the outer ear. Guide the trimmer around the outer surface of ear to trim protruding hairs. Never insert trimmer more than ¼" into ear canal.

# GET TO KNOW YOUR TRIMMER

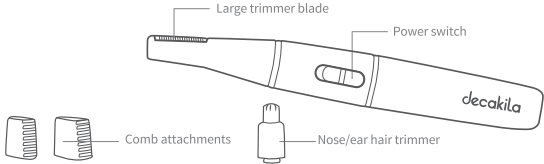

# IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, especially when children are present, basic precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING. FOR HOUSEHOLD USE ONLY. KEEP AWAY FROM WATER

DANGER – To reduce the risk of electrical shock:


- Do not use while bathing or in the shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in, or drop into water or other liquids.

WARNING – To reduce the risk of burns, fire, electrical shock, or injury to persons:

- This appliance should not be used by, on, or near children or individuals with certain disabilities.
- Never operate this appliance if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Do not place appliance on any surface while it is operating.
- Do not use this appliance with a damaged or broken comb or with teeth missing from the blades, as injury may occur.
- This appliance is not a toy. Keep away from children.

# PERSONAL GROOMING KIT

- To insert battery, remove compartment cover at the back of the unit by pulling straight down (Fig.1). Insert one AAA battery (not included), negative end up. If you are not going to use the unit for a long period of time, or if the battery is dead, remove the battery from the unit. Remove used battery promptly. This will increase the life of your trimmer.
- After inserting the battery, replace the battery compartment cover. Now your unit is ready to be used.
- \* Do not use in the shower. To clean, simply rinse trimmer blade under faucet.

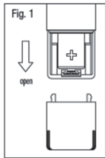

- To use your trimmer, push ON/OFF switch upward to the ON position.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the battery is installed correctly with regard to polarity (+ and -).
- Never short-circuit batteries. Store unused batteries in their original packaging away from any metal objects, as that could cause a short circuit.
- Never dispose of batteries in fire, except under conditions of controlled incineration. Failure to observe this precaution may result in an explosion. Never attempt to recharge primary batteries as this may cause leakage, fire, or explosion.

# TO OPERATE TRIMMER

This trimmer comes with a large trimming blade that can be used for trimming all body hair and eyebrows. It also comes with two attachment combs that help you achieve an even cut when you do not want to completely remove the hair. The larger attachment comb leaves hair longer, approximately 7mm (see Fig. 1).



The smaller attachment comb leaves hair shorter, approximately 4mm (see Fig. 2).



To use the attachment combs, be sure the unit is in the OFF position and slide the comb over the trimming blade. Make sure that the teeth of the



comb are facing in the same direction as the trimming blade, and that the top of the comb is even with the top of the trimmer.

If you want to completely remove hair, use the trimmer without any attachment combs. To operate the trimmer, slide the ON switch toward the trimming blades. When you are finished trimming, slide the ON switch away from the blades. To store the trimmer, slide one of the attachment combs over the trimming blade for added

## TO SWITCH TRIMMER HEADS

And lock into position (see Fig. 4).

To shape and define, move the trimmer slowly so as not to cut any hair you do not intend to trim.



Fig. 3



Fig. 4

# TRIMMING TIPS

- Place the trimmer at a slight right angle to the skin and trim in the direction of hair growth.
- Continue trimming in the direction of growth. Be careful not to apply excess pressure to the blade. This may damage the blade, and can result in injury to the skin during trimming.
- Pull the skin firmly with one hand during the trimming process to ensure the closest possible shave.

# REPLACING THE BATTERY

To replace battery, remove the lower housing and remove/replace battery and reassemble to cover housing. Dispose of battery properly after removal. Do not incinerate.

- Be sure appliance is off and hold the upper part of the trimmer firmly and pull off battery cover.
- Insert 1 AAA battery. Pay close attention, making sure that the battery is inserted in the correct direction (+ / - poles). If you expect that the trimmer will go unused for some time, please remove the battery.
- Do not use in the shower or submerge unit in water.

# **TAKING CARE OF YOUR TRIMMER**

## **BLADE CARE**

Because the trimmer blades are precision made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take a cleaning brush and brush away any loose hair that has collected in the blades, then rinse blades under water only, dry thoroughly and store the trimmer in its storage stand until the next use.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer.

# TO CLEAN YOUR TRIMMER

Make sure trimmer is off.

1. To remove the trimmer head for cleaning, turn the head counterclockwise until the “I” mark aligns with the “I” mark, then lift the head gently (Fig. 5).
2. Only rinse the head under water (Fig. 6). For proper functioning of the unit, the handle cannot touch or be immersed in water.
3. After cleaning, make sure to shake dry the head before replacing it to the body.
4. To reassemble the head onto the body, align the “I” mark on the



Fig. 5

head with the “I” mark on the body and then turn clockwise until the “I” marks are aligned and lock into position (Fig. 7).

**CAUTION:** When removing the blade or comb attachment, be careful not to cut your fingers.



Fig. 7