

NAME OF EACH PARTCH



CHARGING METHOD

- · When the machine cannot be started or the power Is low, it indicates that the power is insufficient and needs to be charged.
- Turn the switch to off state and turn on ihs USB charging interface at the bottom of the body to prevent water soft rubber cover, USB power cord tail plug into the body, and then insert the other end wtUiln 5V power supply.
- · Charge for about 10 hours. During the charging pnxess, the red light wil always be on and filly charged after that, the green light is always on, and it can be used for about 45 minutes after chargen.







Do not use wet hands to pull the power adapter out of the socket Otherwise It will be easy to get electric shock.

After the purchase of the firat use or more than half a year has n« been used, please charge fix 8 hours (to stimulate tha activity of the rechargeable battsry) if charged wtien the battery is fully discharged, the charging Indcator may not be on kninadlat-Bly, and it will be normal after a few mkiutes of continuous diarging.

AFTER CHARGING

- · Unplug the USB power cord from the 5V power supply.
- · Unplug the connector from the fuselage.
 - ·Please pull out the connection plug by hand. It is possible to pull the wire part damage to the power adapter may occur.
 - ·Long time continuous charging (≤12hours) should be avoided as far as possible shorten battery life.



TO TRIM YOUR NOSE AND EAR HAIR



Turn off tie pcwwfirat.
Rotate the head counter dockwtee
Pull the cover up.



2.The fuselage can be washed as a whole,and the head and fuselage can ente before washing and flushing,make sure the bottom USB waterproof soft rubber cover has been covered to prevent water from USB port into the body.

MATTERS NEEDING ATTENTION

Please do not use [gasoline][alcohol][Tianna water] to clean the fuselage.

·Will cause the fuselage to change color.

Use diluted soapy water to wipe the fuselage.



·The indoor temperature should not be lower than 0°C or higher than 40 °C medium charge.







SPECIFICATION PARAMETERS

Working voltage: 1.2V	Charging time: 10h
Working current: 0.3A	Input: 5V==-600mA
Speed: 8500±200rpm	Output: 600mA
Specified voltage: 1.2V	Power: 2W



decakila

Made in China Jiangsu China. 2021.D02 www.decakila.com Global Links Technology Co. Pte. Ltd.