


decakila

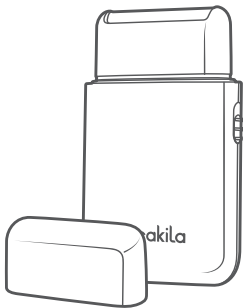

**KMHR005W
FOIL SHAVER**





Fig.1



Fig.2



Fig.3



Fig.4



Fig.5



Fig.6



Fig.7



Fig.8



Fig.9



Fig.10



Fig.10



Fig.11



Fig.12



Fig.13



Fig.14



Fig.15



Fig.16



Fig.17



Fig.18

IMPORTANT PRESENTATION

- Please read this booklet carefully before using the shaver.
- Please don't wash the shaver by water (fig.1). Keep dry of the shaver.
- Please take good care of the instruction for future reference.
- Executive standard: GB 4706.1-2005 GB 4706.9.2008

CHARGING

- The switch must be turned off when charging
- Charge the shaver at the temperature of 5°C ---- 35°C . Please don't charge it in the sun or beside a warmer (fig.2).
- The applicable voltage is DC 5V 100mA.
- To guarantee a long life for the appliance, please take it off from the wall socket when the battery has been fully charged, and charge it when it is empty. Do not connect it with power continuously after finishing the charging.

- Insert the end of power line into the socket of shaver, and then put the plug into power socket. This time indicator lamp will flash (fig. 3.4).
- The normal charging will take 8 hours, and the longest shaving time is 45 minutes with full charge.
- Please do not charge the shaver in a closed pouch.
- After charging, please take good care of the power line for spare use.
- Once the power cord is damaged, it must be replaced from the manufacturer or DECAKILA after-service center.

SHAVING

- Press the power switch and so the shaver can work (fig. 5).
- Rapidly move the shaver back and forth against the growing direction of beard (fig. 6).
- The shaving is the best when the face is dry, so please shave before or some time after the face washing.

It will take some time for your skin to get used to the DECAKILA shaving device.

- Hair on the neck can also be shaved in this way.
- Turn off the shaver, put on the protect cover to avoid damage (fig.7).
- Don't use it in case that shaving heads is damaged, as it may hurt your skin.

TRIMMER

- Use to trim the beard on the temple and other long beard. Slide the trimmer upwards to push in out (fig.8).
- Turn on the shaver to trim the beard (fig.9). Please turn off the trimmer after using.
- Lubricate the trimmer teeth every two months with a drop of sewing machine oil (fig.10).

CLEANING

- Turn off the shaver when start cleaning.
- Regular cleaning guarantees optimal shaving performance.
- Cleaning for the shaving unit:
 - Clean the shaving unit every week.
 - Clean the top of the appliance with the supplied brush.
 - Pinch the sides of the fixed tool carrier by hand, and pull up the fixed tool carrier parts upward (fig.11). Brush the hair chamber (fig.12).
 - Reinstall the tool holder components onto the shaver.
- Cleaning for the shaving heads:
 - Clean the shaving heads every two months.
 - Pinch the sides of the fixed tool carrier by hand, and pull up the fixed tool carrier parts upward (fig.12).
 - Remove the fixed blade mesh (fig.13).
 - Take off the moving knife (fig.14).

- Clean the cutters with brush(fig.15).
- Clean the guards with brush(fig.16).
- You can also clean the shaving heads with a de-greasing liquid (e.g.Alcohol) when needed.If you do,lubricate the shaving heads with a drop of sewing machine oil after cleaning.This prevents wear of the shaving heads(fig.17).
- According to the order of disassembly, install the knife and the knife mesh to the shaver.

SHAVING HEADS REPLACEMENT

- Replace the shaving heads every two years for optimal shaving performance.
- use DECAKILA shaving heads to replace damaged or old one.That makes you get the better shaving performance

DISPOSING OF THE BATTERY

- The battery used in this shaver contains material that will pollute the environment. If you need to dispose of the shaver, please dismantle the battery and turn it to the government designated collection places.
- Before dismantling the battery, you must be sure that you turn off the power of the appliance without remaining electricity. If there is remaining electricity, turn on the shaver until the motor stops.
- You also can dismantle the battery out of the shaver. Loosen the rear cover with a screwdriver and dismantle the battery with an electric iron (fig 18.19).
- After dismantling the battery, do not connect the shaver and its charging plug to the AC outlet.