


# decakila

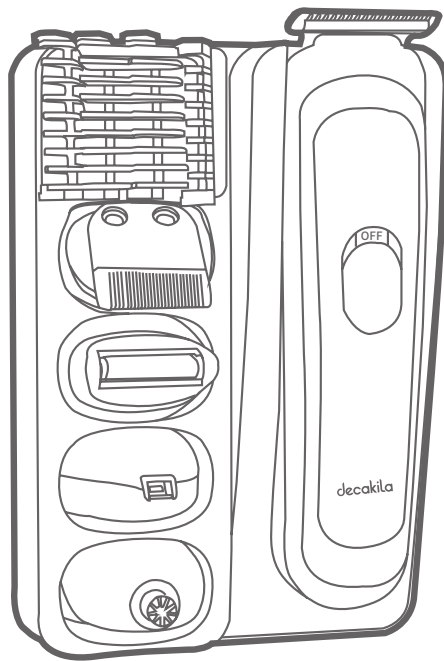

KMHR017W  
GROOMING KIT CE



# CONTENTS

GENERAL INFORMATION AND SAFETY INSTRUCTIONS	01
PARTS LIST DIAGRAM	03
BEFORE FIRST USE	04
INSTRUCTIONS	04
CLEANING, CARE AND MAINTENANCE	08

## GENERAL INFORMATION AND SAFETY INSTRUCTIONS

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Please keep this user manual in a safe place along with your purchase receipt and carton for future reference. If applicable, pass these instructions and packaging on to the next owner of the appliance. Always follow basic safety precautions and accident prevention measures when using an electrical product.


- Before connecting the power adaptor to the Cordless Grooming Set, ensure the electrical voltage and frequency of the circuit corresponds to those indicated on the rating label of the product.
- To protect against fire and electric shock, do not immerse the product, cord set or plug in water or any other liquid.
- Do not use an extension cord unless completely necessary with the Cordless Groomer. If an extension cord is used, please ensure that it has a rating equal or exceeding the rating of this product.
- Do not pull or carry by the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Keep the cord away from heated surfaces.
- Do not bend or damage the power cord.
- Never force the power adaptor into an outlet.
- Always unplug the power adaptor when not in use. To disconnect from the power supply, grip the plug and pull from the power outlet. Never pull by the cord.
- The power adaptor must be removed from the charging base or base of the Cordless Groomer before cleaning, servicing, or maintaining.
- To avoid a hazard, do not use the Cordless Groomer if the plug, power adaptor or the Cordless Groomer itself is damaged. Please contact the After Sales Support for further advice.
- The Cordless Groomer is not intended to be operated by means of an external timer or any type of separate remote control system.
- Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.

- The Cordless Groomer is only to be used with the power supply unit provided with the appliance.
- The Cordless Groomer should be turned off when not in use or when being charged.
- Do not handle the plug, power adaptor or the Cordless Groomer with wet hands.
- If the power adaptor is damaged it must be replaced by the manufacturer or it's service agent only.
- The appliance is intended for indoor domestic use only. Do not use it outdoors. Do not use it for anything other than its intended purpose, and only use it as described in this manual.
- This unit is only intended for shaving dry human hair. Do not use the Cordless Groomer for any other purpose than its intended use.
- Children should be supervised to ensure that they do not play with the Cordless Groomer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not leave the Cordless Groomer unattended when plugged in. Always switch off and unplug when you are not using the Cordless Groomer.
- This unit has no user-serviceable parts contained within. Do not attempt to repair, disassemble, or modify the Cordless Groomer. This will void the warranty.
- The manufacturer is not responsible for any eventual damage caused by improper or faulty use.
- The use of attachments not sold or recommended by the manufacturer may cause fire, electric shock, or injury.
- To reduce the risk of electrocution, never touch the power supply unit when you are standing in water.
- To reduce the risk of electrocution, never operate this product with wet hands, submerge in water or spill liquids into the product.
- Do not use the Cordless Groomer near a window as rain may cause electric shock.
- Do not use the Cordless Groomer in an area where it may come into contact with water or other liquids.
- Never place the Cordless Groomer in a position where it could fall or be pulled into a bath, basin, or sink.
- Do not use the Cordless Groomer near bathtubs, showers or other vessels containing water.
- Do not take hold of the device if it falls into water. In the event where the appliance is dropped into water, turn off the power at the power outlet and remove the plug immediately.

- Do not use the Cordless Groomer without all parts securely in place, including the attachments.
- WARNING:** This product has not been designed for any uses other than those specified in this booklet.

## PARTS LIST DIAGRAM

1. Large Clipper Head
2. On/Off Switch
3. Interchangeable Large Clipper Head Combs 3mm to 12mm
4. Detail Clipper Head
5. Small Clipper Head
6. Foil Shaving Head
7. Ear and Nose Trimmer Head
8. Cordless Groomer
9. Charging Base
10. Charging Base Adaptor Port

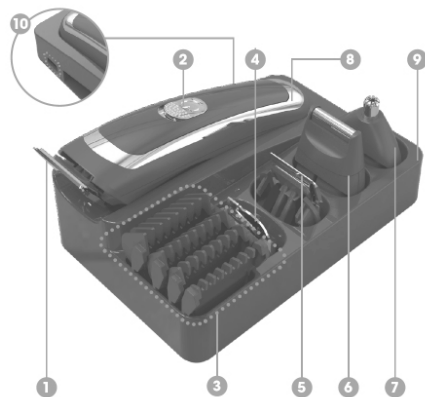

## BEFORE FIRST USE

Prior to using your Cordless Grooming Set, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using this appliance. We recommend you keep the original packaging for storing your Cordless Grooming Set when not in use.

- Unpack the appliance but keep all packaging material until you have made sure your new Cordless Grooming Set is undamaged and in good working order. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
- Ensure you have all attachments listed in the parts list diagram of this instruction manual.
- Remove the twist-tie which is securing the power adaptor. Uncoil the cord and straighten it to remove any kinks. Do not use this product if these parts are damaged. In case of damage, phone the After Sales Support Line for advice.
- Inspect the power adaptor for damage or wear before each use.

## INSTRUCTIONS

### Charging the Cordless Groomer

There are two ways to charge your Cordless Groomer for use. To correctly charge your Cordless Groomer, follow the steps below.

- Making sure your hands are dry, connect the power adaptor pin directly into the base of the Cordless Groomer or connect it into the charging base adaptor port.

**NOTE: The adaptor pin is directional and will only connect to the charging base or base of the Cordless Groomer if it is aligned correctly. Do not force the adaptor pin into the charging base or Cordless Groomer.**

- If charging in the charging base, place the Cordless Groomer in the charging base groove, ensuring the bottom of the Cordless Groomer aligns correctly with the charging pins and push down gently.
- Switch the power outlet on. The LED indicator light will illuminate red on the Cordless Groomer, indicating that the battery is being charged. It takes approximately 9 hours to fully charge the battery.

**NOTE:** The red light will remain on while it is plugged into a power source. It will not turn off when it is fully charged.

**NOTE:** Never place the Cordless Groomer in a position where it could fall or be pulled into a bath, sink or other water vessel while being charged.

**WARNING:** Do not charge the Cordless Groomer for longer than a 9 hour period. Extended charging may damage the internal battery and shorten the life of the Cordless Groomer.

**NOTE:** A fully charged Cordless Groomer has an operating time of up to 1 hour.

### Fitting the Groomer Heads and Accessories

There are 5 different grooming heads supplied with the Cordless Grooming Set.

All perform different functions but attach to the Cordless Groomer the same way.

- Hold the Cordless Groomer with the On/Off switch facing away from you.
- Selecting your preferred grooming head, align the recessed channel of the grooming head to the top of the Cordless Groomer. See the recessed channel in Fig.1.
- Align the recessed channel with the connector pin found in the body of the Cordless Groomer (see Fig.2).
- Once the grooming head is aligned correctly, firmly push the grooming head into place until you hear a click. Your Cordless Groomer is now ready for use.



Fig.1



Fig.2

### **Removing the Groomer Heads and Accessories**

- Hold the Cordless Groomer with the On/Off switch facing towards you.
- Using your thumb, push back on the grooming head gently. The grooming head will start to lift off from the body of the Cordless Groomer.
- Keep pushing gently back until the grooming head can be lifted away from the body of the Cordless Groomer.

**CAUTION: Ensure great care is taken when removing the groomer heads as sharp blades may cause injury**

### **Grooming Heads and Accessories**

#### **Foil Shaving Head**

The foil shaving head is designed to provide a close shave for facial or body hair. Install the foil shaving head following the instructions above. For best results use the foil shaving head against the grain of hair growth in slow slightly overlapping passes with a light pressure against the skin. Longer hair should be trimmed first before using the foil shaving head.

Follow cleaning instruction on page 12 for cleaning of this grooming head.

#### **Ear and Nose Trimmer**

The ear and nose trimmer head is perfect for removing unwanted nose or ear hair as its small tip is ideal for tight spaces. Install the ear and nose trimmer following the instructions on page 9.

Follow cleaning instruction on page 13 for cleaning of this grooming head.

**CAUTION: Only insert the silver tip of the ear and nose trimmer into your nostril or ear canal. Do not push the trimmer in any further or use any force as this may cause injury.**

#### **Large Clipper Head**

The large clipper head is ideal for removing large quantities of hair in passes up to 3cm wide. The large clipper head can also be fitted with 4 different comb attachments to control the length of the hair you are cutting. Follow the instructions on page 9 to fit and remove the large clipper head.

Follow cleaning instruction on page 13 for cleaning of this grooming head.

**CAUTION: Take great care when using the large clipper head. Direct contact on the skin may cause injury,**



### Small Clipper Head

The small clipper head is perfect for detail hair removal work in passes up to 2.4cm wide at a time. The detail trimmer head can also be fitted with an adjustable combs to finely control the length of the hair you are cutting. Follow the instructions on page 9 to fit and remove the compatible comb accessories.

Follow cleaning instruction on page 13 for cleaning of this grooming head.

**CAUTION: Do not use the small clipper head directly on the skin. It is only to be used on fine hair. Attempting to trim thick or coarse hair could damage the trimmer. Do not use the small clipper head around the eye area.**

### Detail Clipper Head

The detail clipper head is built for the most detailed hair removal work. At 4mm wide you can tackle the finest hair in virtually any location. The detail clipper head is not compatible with any of the comb accessories.

Follow cleaning instruction on page 13 for cleaning of this grooming head.

**CAUTION: Attempting to trim thick or coarse hair could damage the trimmer. Do not use the detail clipper head around the eye area.**

### Fitting and Removing Comb Accessories

The large clipper head and small clipper head can be used with the adjustable comb attachments allowing you to control the length of the hair you are trimming. The detail clipper head, foil shaving head and ear and nose trimmer are not compatible with any of the comb accessories.

Follow the instructions on page 9 to fit your preferred clipper head to the Cordless Groomer. Once this is completed follow the steps below to attach the comb accessories.

- Select your preferred comb to attach to the clipper head of the Cordless Groomer.
- Slide the comb over the clipper head. The teeth of the clipper head will fit snugly under the lip on the comb accessory.
- Once the comb is aligned, gently push the bottom of the comb until the comb tab clicks into the groove found at the bottom of the clipper head.
- To remove the comb, turn the Cordless Groomer over so the On/ Off switch is facing away from you. Locate the tab on the bottom of the comb and gently pull up. The comb should lift and clear the Cordless Groomer easily.

## CLEANING, CARE AND MAINTENANCE

### Cleaning the Exterior

**NOTE:** Never clean this product with wet hands, submerge in water or spill liquids onto the product.

- Always ensure the unit is turned off and disconnected from the power adaptor before performing any cleaning.
- Wipe over the exterior of the unit with a soft, damp cloth then dry thoroughly with a dry cloth. Ensure the Cordless Groomer is completely dry before use.

### Cleaning the Foil Shaving Head

The foil shaving head should be emptied after each use to clean out the cut hair.

**NOTE:** Hair build up can shorten the life of the Cordless Groomer blades. Ensure that the cut hair is removed after each use.

- Always ensure the unit is turned off and disconnected from the power adaptor before performing any cleaning on the Cordless Groomer.
- Remove the foil shaving head from the Cordless Groomer by following the instructions on page 9.
- Holding the foil shaving head firmly, grip the top sides of the foil shaver head and pull upwards. The internal blade should now be exposed.
- Gently remove any loose cut hair by blowing, tapping, brushing and wiping out the inside of the foil shaving head and blade assembly.
- Once clean, reattach the top of the foil shaver to the blade assembly. You will hear a click once it is correctly in place. To re-fit the foil shaving head to the Cordless Groomer, follow the instructions on page 9.

**WARNING:** The shaving blades are sharp. Be careful during cleaning to not contact the blades directly as this may cause injury or damage to yourself or the blades.

### Cleaning the Ear and Nose Trimmer Head

The ear and nose trimmer head should be cleaned after each use to remove cut hair and debris.

- Always ensure the unit is turned off and disconnected from the power adaptor before performing any cleaning on the Cordless Groomer.

- Remove the ear and nose trimmer head from the Cordless Groomer by following the instructions on page 5.
- Gently remove any loose cut hair by blowing, tapping, and gently brushing the trimmer head.
- Wipe down the outer silver tip with a clean damp cloth and dry thoroughly.
- Once clean re-fit the ear and nose trimmer head to the Cordless Groomer following the instructions on page 5.

### **Cleaning the Large, Small and Detail Clipper Heads**

- The clipper heads should be cleaned after each use to remove cut hair and debris.
- Always ensure the unit is turned off and unplugged from the power adaptor before performing any cleaning on the Cordless Groomer.
- Remove the clipper head from the Cordless Groomer by following the instructions on page 5.
- Gently remove any loose cut hair by blowing, tapping, and gently brushing the clipper head.
- Once clean re-fit the clipper head to the Cordless Groomer following the instructions on page 5.

**WARNING: The shaving blades are sharp. Be careful during cleaning to not contact the blades directly as this may cause injury or damage to yourself or the blades.**

### **Storage**

Ensure the unit is completely cool and dry before storage.

- Do not wrap the cord around the Cordless Groomer, charging base or power adaptor, as this could cause damage to the cord.
- Keep the Cordless Grooming Set in a cool and dry place, out of children's reach.
- Do not place heavy objects on top of your Cordless Grooming Set during storage.
- Store in a safe, dry, and stable environment. We recommend storing the Cordless Grooming Set in its original carton to protect it from dust and scratches.



# decakila



decakila



decakila

Made in China Jiangsu China. 2021.

[www.decakila.com](http://www.decakila.com) Decakila Co., Limited