 


decakila

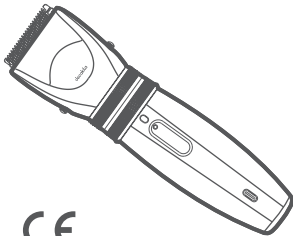


KMHS003W
HAIR CLIPPER



FIT A COMB ATTACHMENT

 - Fit one of the Comb attachments by sliding it onto the Clippers as shown. The comb will click into place when fully engaged.
- Fit the small Comb attachment to cut hair lengths in the range 4mm - 16mm or the large Comb attachment to cut hair lengths in the range 18mm- 30mm.



SAFETY GUIDE

- For your continued safety and to reduce the risk of injury or electric shock, please follow all the safety precautions listed below.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not use the appliance if the blade damaged.
- The appliance can become hot during use, only use for a maximum of 30 minutes then allow to cool for 30 minutes.

- Never use the appliance on any part of the body other than for shaving the face.
- Always check the appliance for damage prior to use. If any damage is observed, do not use the appliance.
- Do not place the appliance on or near a heat sensitive surface.
- Do not use the appliance or handle the USB cable with wet hands.
- Recharge the appliance using the supplied USB cable only connect to power supply (must be 5V 1A) .
- To protect against electric shock, never allow the appliance or USB cable with charger to come into contact with water or any other liquid.
- Never leave the appliance unattended when connected to the mains power supply. And keep the appliance dry.

- Do not attempt to replace the battery.
- Do not use for wet shaving - use the appliance only for shaving on dry skin.
- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

MAIN COMPONENTS



1. Short Cut Comb (4 mm - 16 mm cut)
2. Long Cut Comb (18mm - 30 mm cut)
3. Blade Assembly
4. Thinning Control
5. Cutting Length Control
- 6 On/Off Switch
7. Power / Charging Indicator
8. Cleaning Brush
9. Lubricating Oil
10. USB cable

CHARGING

- Before using the appliance charger, ensure that the voltage of your electricity supply is the same as that indicated on the appliance (5V 1A) or it will be broken or burned by wrong voltage.
- Your clippers contain re-chargeable batteries and may be used cordless for approximately 45 minutes when the batteries are fully charged.

IMPORTANT NOTE: The batteries must be charged for a minimum of 8 hours for the first charge cycle. This will ensure the maximum life for the batteries.

CHARGING THE CLIPPERS

- Connect the USB cable which is already with adapter to the charging socket or only connect it to computer or power bank for charging
- The Power/Charging indicator on the Clippers will illuminate green.
- Leave the Clippers until fully charged for 8 hours.
- After charging, disconnect the USB cable from the mains to conserve power and store it in a safe place.
- The Clippers are now ready for use.

NOTE: The clippers will only show the green light while in charging or fully charged, there is no light change function, so please carefully calculate the full charge time 8 hours for disconnection.

BATTERY CARE

To ensure maximum life from the batteries in your Rechargeable clippers, follow these guidelines:

- Do not recharge the Clippers between sessions. Wait until the batteries are exhausted before recharging.
- Discharge the appliance completely twice a year (switch on and run until the Clippers stop).
- If the Clippers haven't been used for a long period of time, discharge the appliance completely, then fully charge them for 8 hours before use.
- Never charge the Clippers for more than 24 hours.
- Do not use the Clippers while connected to the Charger, or may cause short life of battery

- Never recharge the appliance in a temperature below 10°C.
- Avoid recharging the appliance in direct sunlight or near a radiating heat source.


OPERATING INSTRUCTIONS

WARNING: Never use the appliance on wet hair. it is only designed for use on dry hair.

When using this appliance for the first time it is advisable to experiment initially on an area of light hair growth.

SETTING THE CUTTING LENGTH

- To set the cutting length, rotate the Cutting Length Control wheel to set for a shorter or longer cut.
- The cutting length is marked on the side of the comb.
- Set the Thinning Control to the left position to thin hair or to the right to cut hair.

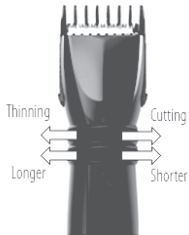

CUTTING HAIR

- Before starting, comb the hair in the direction of hair growth as shown
- Switch on the Clippers by sliding the On/off switch up toward the 'O' position.
- Pressing the Comb against the head, start by clipping the sides from the bottom of the head upwards.
- Slowly move the Clippers up towards the top of the head cutting small amounts at a time.
- Repeat step 6 around both sides and the back of the head.
- Clip the top of the head from front to back.

NOTE: Do not push the clippers or force the clippers through the hair.



CUTTING HAIR

WARNING: The Clipper blades are very sharp when unguarded.

CAUTION: Care should be taken when using the Clippers without the

- Clipping guide fitted as the Clippers will remove any hair that comes into contact with the blades.
- Switch off the Clippers.

- Remove the Comb attachment.
- Switch on the Clippers.
- Position the Clippers so that only one edge contacts the hair.
- Slowly shape the hair around the ears and contour the neckline by positioning the blades against the neck and moving downwards.
- For final trimming of the hair, fringe or beard, use scissors (not provided).

AFTER USE

- When you have finished, switch off the Clippers by setting the On/Off switch to the 'I' position.
- Always clean the blades after use with the brush provided.

CARE AND CLEANING

- The appliance must be unplugged before cleaning.
- The black plastic Comb Attachments should be cleaned in running water.
- Ensure they are completely dry before using them.
- Clean the housing of the Clippers with a soft, dry cloth.
- The cutting blades should be lightly oiled with the oil provided once every few haircuts.

NOTE: Do not use any harsh detergents, abrasives, solvents or cleaners. never immerse in water to clean. Dry thoroughly before use.

STORAGE

The appliance should never be stored whilst hot or whilst still connected to the mains. Always ensure the appliance is switched off, unplugged from the mains and has cooled down before storing.

DISPOSAL

Before disposing of this appliance, the internal rechargeable battery must be removed for separate disposal.

NOTE: This process is not reversible, please give it to the professional team

SPECIFICATIONS

- Model: KMHS003W
- Noise figure: 72 dB

STORAGE

- Power supply: 5 V 1A (NiMH rechargeable batteries)
- Charging time: approx.8hours
- Operating time with fully charged battery: approx. 45 minutes

CHARGER, COMPUTER OR POWER BANK

- Output rating: 5V 1A
- This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.
- For more information, please contact the local authority or your retailer where you purchased the product.





decakila



Made in China Jiangsu China. 2021.D02

www.decakila.com Global Links Technology Co. Pte. Ltd.