


decakila

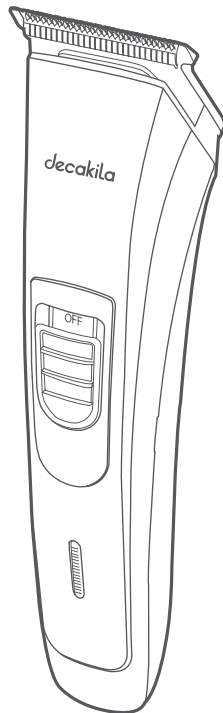

KMHS018B
HAIR CLIPPER



CONTENTS

PREPARING FOR USE	01
CLEANING AND MAINTEN-ANCE OF THE APPLIANCE	01
GUARANTEE	01
DISPOSING OF THE BATTERY	02

PREPARING FOR USE

- The appliance as supplied by the manufacturer is not yet ready for use. It must be electrically charged prior to use.
- This appliance must be charged at the specified voltage! A charging period of 8 hours is required before initial use. Take care to keep the charging contact clean, as soiled charging contacts can interfere with the charging process. Overcharging of the appliance is not possible.
- After charging the appliance is ready for use. It can be used with or without the clip-on comb attachment. To attach the clip-on comb attachment, slide it on to the cutting head until it clicks into position. The appliance must be switched off while the clip-on comb attachment is being attached or removed.
- The clip-on comb attachment is easily adjustable. Simply slide it up or down the cutting head. The hair can be cut to 3 different lengths ranging from approximately 3mm, 6mm, 9mm. The position of the clip-on comb attachment on the cutting head determines the length of the haircut.
- After using the appliance, switch it off. In order to retain the load capacity of the storage battery we recommend to use the storage battery until it is empty before reloading.
- **Switch the appliance off before replacing the cutting head!**
- If the performance of the appliance deteriorates after

extended use, despite regular cleaning and maintenance, the cutting head should be replaced (the cutting head can be ordered as a spare part from the Service Department).

- **Important: Remove the cutting head, Place the new cutting head on the main body of the appliance.**

CLEANING AND MAINTENANCE OF THE APPLIANCE

- Switch the appliance off before cleaning or carrying out maintenance!
- In order to ensure that the appliance remains in perfect working order, it is important to note the following instructions: In order to retain the load capacity of the storage battery we recommend to use the storage battery until it is empty before reloading.

GUARANTEE

This appliance is guaranteed against defects for a period of half a year from purchase. During that period the purchaser is entitled to free-of-charge correction of any defect. This guarantee excludes defects caused by improper handling during use and normal wear and tear.

DISPOSING OF THE BATTERY

When you discard your machine in due course, please remove the battery. Do not throw the battery away with the normal household waste. But hand it in separately at an officially assigned collection point.



decakila



decakila



decakila

Made in China Jiangsu China. 2021.D01

www.decakila.com Global Links Technology Co. Pte. Ltd.