

# decakila



**KUCF005B**  
**3PCS KITCHEN APPLIANCES SET**





# CONTENTS

## COFFEE MAKER

IMPORTANT SAFEGUARDS	01
KNOW YOUR COFFEE MAKER BEFORE FIRST USE	03
USING YOUR COFFEE MAKER	03
CLEANING AND MAINTENANCE	04
REMOVING MINERAL DEPOSITS	05
HINTS FOR GREAT-TASTING COFFEE	06
ENVIRONMENT FRIENDLY DISPOSAL	06

# **KETTLE**

<b>IMPORTANT SAFETY INSTRUCTIONS</b>	<b>07</b>
<b>KNOW YOUR KETTLE</b>	<b>09</b>
<b>BEFORE INITIAL USE</b>	<b>09</b>
<b>OPERATION</b>	<b>09</b>
<b>BOIL-DRY PROTECTION</b>	<b>10</b>
<b>CARE AND CLEANING</b>	<b>10</b>
<b>REMOVAL OF MINERAL DEPOSITS</b>	<b>11</b>
<b>ALTERNATIVELY</b>	<b>11</b>
<b>CLEANING EXTERNAL HOUSING</b>	<b>11</b>
<b>CLEANING THE FILTER</b>	<b>11</b>
<b>STORAGE</b>	<b>11</b>
<b>ENVIRONMENT FRIENDLY DISPOSAL</b>	<b>12</b>

# **TOASTER**

<b>IMPORTANT SAFEGUARDS</b>	<b>13</b>
<b>SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY</b>	<b>14</b>
<b>PRODUCT INTRODUCTION</b>	<b>15</b>
<b>FOR THE FIRST USE</b>	<b>15</b>
<b>OPERATION</b>	<b>15</b>
<b>CAUTION</b>	<b>16</b>
<b>CLEANING AND MAINTENANCE</b>	<b>16</b>

# COFFEE MAKER


## IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

- Read all instructions.
- Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
- Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse cord, plug, in water or other liquid.
- Remove plug from wall outlet before cleaning and when not in use. Allow appliance cool down completely before taking off, attaching components or before cleaning.
- The use of accessory is not recommended by the appliance manufacturer. It may result in fire, electric shock and/or person injury.
- The container is designed for use with this appliance. It can not be used on a range top.
- Do not clean container with cleansers, steel wool pads, or other abrasive materials.
- Do not hang power cord over the edge of table or counter, or touch hot surface.
- Do not place the coffee maker on hot surface or beside fire in order to avoid to be damaged.
- To disconnect, remove plug from wall outlet. Always hold the plug. But never pull the cord.
- Do not use appliance for other than intended use and place it in a dry environment.
- Close supervision is necessary when your appliance is being used near children.
- Be careful not to get burned by the steam.
- To disconnect, turn any control to “Off”, then remove plug from wall outlet.
- Do not let the coffee maker operate without water.
- Never use the appliance if the carafe shows any signs of cracks. Only use the carafe with this appliance. Use carefully as the carafe is very fragile.

- The container is designed for use with this appliance, it must never be used on a range top.
- Do not set a hot container on a wet or cold surface.
- Do not use a cracked container or a container having a loose or weakened handle.
- Do not clean container with cleansers, steel wool pads, or other abrasive material.
- Scalding may occur if the cover is removed during the brewing cycles.
- Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
- Never leave the empty carafe on the warming plate otherwise the carafe is liable to crack.
- Do not set a hot container on a hot or cold surface.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- Do not use outdoors.
- Save these instructions.

## KNOW YOUR COFFEE MAKER

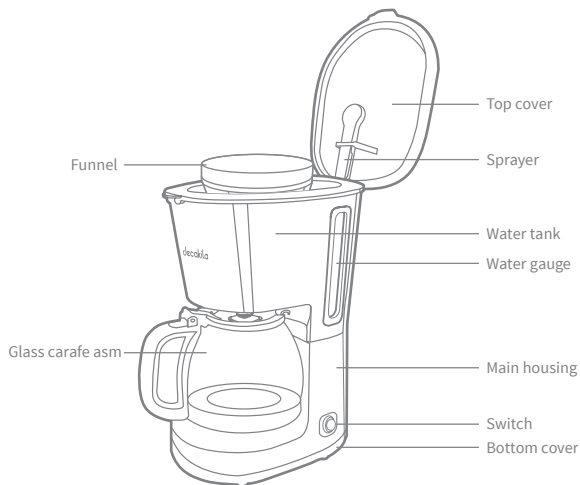

## BEFORE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add clean water up to maximum level to brew several times without coffee powder according to the steps below, and then discard the water. Wash the detachable parts thoroughly with warm water.

## USING YOUR COFFEE MAKER

- Open the top cover and fill the water tank with cold drinking water.  
**NOTE: Do not fill water tank with water to exceed max level as indicated on water gauge. The appliance can brew max 10 cups of coffee every brewing cycle.**
- Place the funnel into funnel holder and make sure the funnel is assembled in place, and then put a paper filter into funnel correctly.
- Add proper coffee powder into paper filter. Usually a cup of coffee need a level spoon of coffee powder, but you may adjust according to personal taste, and then replace the top cover.
- Insert glass carafe with lid in place onto warming plate horizontally, ensure center line of carafe aligns with that of funnel.
- Plug the unit into an outlet.



- Press power switch to the “I” position, the indicator in it will be illuminated and the appliance will begin working. The brewing process can be interrupted by pressing the switch to the “O” position at any time and the indicator in it will go off, indicating your coffee maker is off. Once the switch is pressed again to the “I” position, the appliance will continue to brew.

**NOTE: the appliance is designed with a pause-and-serve feature, if you wish, at any time during brewing cycle, you can temporarily remove carafe to pour and serve a cup of hot coffee. The brewing cycle will not be interrupted and no coffee will drip from the appliance, simply replace glass carafe onto warming plate to restart the brewing cycle, But do not remove glass carafe for longer than 30s, never return empty carafe onto warming plate when it is still warm.**

- Remove carafe to serve when finish brewing

**NOTE: the coffee you get will be less than the water you have added as some water is absorbed by coffee powder.**

**CAUTION: When pour coffee, the momentary inclined angle of carafe shall not be more than 45 degree from the vertical position, you shall pour the coffee slowly until the carafe is empty, otherwise the coffee in the carafe will rush to the bottom of carafe lid, and the coffee will flow out from two edges of lid and hurt person!**

- After brewing, the appliance will automatically switch to the warming mode, which will continue to keep your coffee warm until you turn off the appliance. It is suggested that warming time shall be not more than 1 hour. For an optimum coffee taste, serve it just after brewing.
- Always turn the coffee maker off and unplug the appliance when not in use.

## **CLEANING AND MAINTENANCE**

**CAUTION: Be sure to unplug this appliance before cleaning and let the appliance cool down completely. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid.**

- Clean all detachable parts after each use in hot sudsy water.
- Wipe external surface of product with a soft, damp cloth to remove stains.  
**NOTE: Do not attempt to clean the inside of water tank, as this will leave a residue of lint and may clog your coffee maker, simply rinse with cold water periodically.**
- Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.
- Replace all parts and keep for next use.

## REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, periodically you should clean away the mineral deposits left by the water according to the water quality in your area and the use frequency, we recommend removing mineral deposits as follows:

- Fill the tank with water and descaler to the max level as indicated on water gauge (the scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use “household descaler”), you may also use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid).
- Insert glass carafe onto the warming plate.
- Make sure without coffee powder and funnel are assembled in place.
- Switch on the appliance and allow it to “brew” de-scaling solution.
- After “brew” one-cup solution, switch off the appliance.
- Leave the solution stay for 15 minutes and repeat step 3-5.
- Switch on the appliance and run off the solution until the water tank is completely empty.
- Rinse by operating the appliance with water at least 3 times.

## HINTS FOR GREAT-TASTING COFFEE

- A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “CLEANING AND MAINTENANCE” section. Always use fresh, cold water in the coffee maker.
- Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
- For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
- Do not reuse coffee powder since this will greatly reduce the coffee’ flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
- Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
- Oiliness may occur more frequently if heavily roasted coffees are used.

## ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.



# KETTLE

## IMPORTANT SAFEGUARDS

- Read all instructions before using.
- Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
- The attached base can not be used for other than intended use.
- Do not operate the appliance without load to avoid damaging the heat elements.
- Unplug from the outlet when not in use.
- Do not let the cord hang over edge of table counter or touch hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
- Ensure that kettle is used on a firm and flat surface where the children can't touch, this can prevent from overturning the kettle to damage the person or kettle.
- To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.12.Be careful when opening the lid for refilling when the kettle is hot.
- Close supervision is necessary when any appliance is used by or near children.
- Do not touch the hot surface. Use the handle or the button.
- Extreme caution must be used when moving an appliance containing hot water.
- The appliance is not a toy. Do not let the children play it.
- The use of attachments that are not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.

- While boiling water, avoid to contact steam from the spout when water is boiling or just after it has switched off. Do not be anxious to uncover the lid.
- Unplug from outlet when not in use and before cleaning; Allow it to cool before putting on or taking off parts and before cleaning the appliance.
- Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not use the appliance for other than intended use.
- Do not move the unit while the kettle is switched on.
- The kettle can only use with the stand provided.
- If the kettle is overfilled, boiling water may be ejected.
- Do not use the kettle outdoors.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.
- Save these instructions.
- This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed

## KNOW YOUR KETTLE



## BEFORE INITIAL USE

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

## OPERATION

- To fill water into the kettle, remove it from the power base and open the lid by lifting the lid handle, fill with the desired amount of water to the kettle. Always fill the kettle between the minimum (0.5L) and maximum (1.7L.) marks. Too little water will result in the kettle switching off before the water has boiled.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.

- Close the lid. Position the kettle on the power base in place. Make sure the kettle contact with the power base completely.
- Connect the plug into a power outlet. Press down the switch to “I” position and the switch light illuminates. Then start to boil the water. The kettle will switch off automatically once the water has boiled and the switch light extinguishes.

You can shut off the power by pressing the switch at any moment during boiling water.

**NOTE: Ensure that switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is constrained or if the lid is left open.**

- Lift the kettle from the power base and then pour the water.

**NOTE: Operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, don't open the lid while the water in the kettle is hot.**

- The kettle will not re-boil until the switch is uplifted. Allow to cool for 15~20 seconds before reopening to boil water. The kettle may be stored on the power base when not in use.

**NOTE: Ensure power supply is turned off when kettle is not in use.**

## **BOIL-DRY PROTECTION**

Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.

## **CARE AND CLEANING**

Always disconnect the appliance from the power outlet and leave it to cool down completely before cleaning. Never immerse the kettle or cord in water, or allow moisture to contact with these parts.

## REMOVAL OF MINERAL DEPOSITS

Mineral deposits in tap water may cause the kettle interior to discolor .To remove this build-up, use non-toxic Liquid Descaler.

## ALTERNATIVELY

1. Fill the kettle with 3 cups of white vinegar and the remainder of water and be allowed to stand overnight. Do not boil.
2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth, fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use.

## CLEANING EXTERNAL HOUSING

Wipe the external housing with a wild and damp cloth or cleaner.

**CAUTION:** Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle.

## CLEANING THE FILTER

Remember to clean the filter with a wild and damp cloth at intervals.

## STORAGE

When not in use or storage, the power cord may be wound around the cord storage under the base of kettle.



## ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!

Please remember to respect the local regulations:

hand in the non-working electrical equipments to an appropriate waste disposal center.



# TOASTER

## IMPORTANT SAFEGUARDS

When using electrical appliance. Basic safety precautions should always be followed including the following:

- Read all Instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- WARNING-To prevent electrical shock, unplug before cleaning.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.

## **ENVIRONMENT FRIENDLY DISPOSAL**

- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.
- When heating toaster pastries, always use the lightest toast color setting.
- Household used only.

## **SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY**


### **NOTES ON THE CORD PLUG**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way, If the plug does not fit fully into the outlet, reverse the plug, If it still does not fit, contact a qualified electrician, Do not attempt to modify the plug in any way .

### **NOTES ON THE CORD**

- A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a longer detachable power-supply cord or extension cord is used:
  - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
  - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
  - If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord

## PRODUCT INTRODUCTION

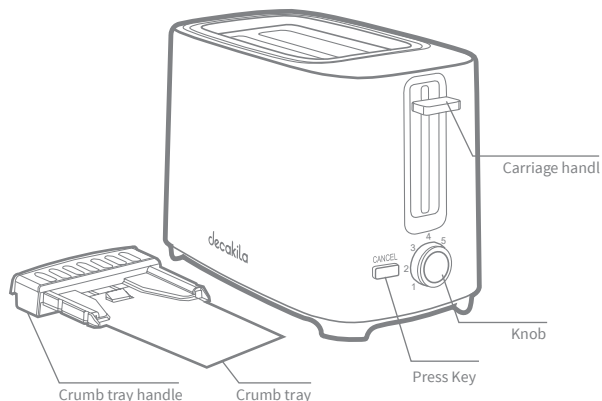

## FOR THE FIRST USE

As there is manufacturing residue or oil remained in the toaster or heat element, it usually emits the odor for the first use. It is normal and will not occur after several times use. Before toasting the first slice of bread it is strongly suggested to operate the appliance following below instructions, except without bread.

## OPERATION

- Put bread slice into the bread slot, it can be inserted two slices at most every time. Only the regular slice can be placed into the bread slot.

**Note:** Make sure the crumb tray is completely positioned in place before using.

- Plug the power cord into the outlet.
- Set color control knob to your desired color. There is 7-position level, the lowest is white and the highest is puce. The bread slice can be toasted to golden color at the position of “4”.

**Note:** 1) Toasting color for one side is darker than that for double bread at the same level.

2) If toasted continuously, toasting color for the latter bread is darker than the color of previous cycle at the same level.

- Press carriage handle down vertically until it is positioned in place, the indicator of Cancel will be illuminated and toasting begins. Once the bread has been toasted to the preset color, the carriage handle will be automatically sprung up, and you can remove the bread readily.

Note: The carriage handle can only be latched when the appliance connects to the power supply.

- During the toasted process, you may observe the toasting color. If it is satisfactory, you may interrupt the toasting process by pressing the Cancel button at any time.

## **CAUTION**

1. Remove all protective wrapping prior to toasting.
2. If toaster starts to smoke, press Cancel button to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice.

## **CLEANING AND MAINTENANCE**

1. Disconnect the power supply before cleaning.
2. Wipe the outside with soft dry cloth after toaster cools down, never use metal polish.
3. Pull out the crumb tray on the bottom of toaster by crumb tray handle and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not in use or storage, the power cord may be wound under the bottom of the toaster.







# decakila

---



decakila



decakila

Made in China Jiangsu China. 2021.D02

[www.decakila.com](http://www.decakila.com) Global Links Technology Co. Pte. Ltd.