

decakila



KUCF011B
COFFEE GRINDER



CONTENTS

 
IMPORTANT SAFEGUARDS	01
KNOW YOUR COFFEE GRINDER	02
COFFEE GRINDER OVERVIEW	03
ELECTRIC PARAMETER	04
USING THE COFFEE GRINDER	04
SETTING AND RUNNING THE GRINDER	05
COFFEE GRINDER USE TIPS	07
CARE AND CLEAN	07
TROUBLESHOOTING	09

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

- Read all instructions.
- Before use please check that the voltage of wall outlet corresponds to the one shown on the rating plate.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, electrical or mechanical adjustment.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Do not let cord hang over edge of table or hot surface.
- Do not immerse the motorized base in liquid, or place in dishwasher.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Ensure fingers are kept well away from the moving parts.
- Do not remove the lid until the blade has completely stopped.
- Do not attempt operation without the lid being in place.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Check the bean box for the presence of any foreign objects before using.
- To protect against risk of electrical shock, do not put the Coffee Grinder in water or other liquid.
- Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Misuse may cause potential injury.
- Care shall be taken when handling the sharp cutting blades and during cleaning.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

- Make sure appliance is OFF when not in use, before putting on or taking off parts, and before cleaning.
 - Avoid contacting moving parts.
 - Do not operate the appliance for other than its intended use.
- Do not use outdoors.

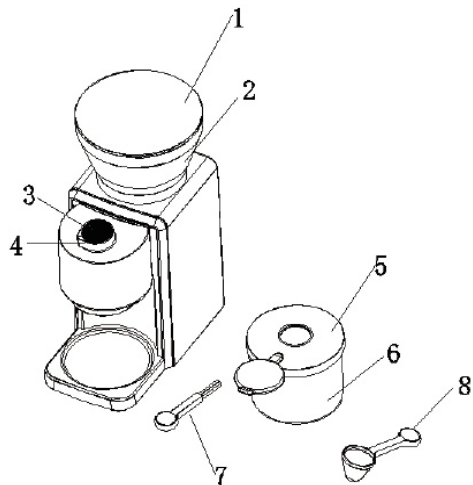

SAVE THE INSTRUCTIONS

HOUSEHOLD USE ONLY

This appliance incorporated a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug can not fit fully into the socket, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way as this is a safety feature.

KNOW YOUR COFFEE GRINDER

NOTE: The Bean box holds a maximum of 250g of coffee beans, the Ground Coffee Container holds a maximum of 130g of ground coffee.

NOTE: The cleaning brush can be only used for cleaning the appliance after use.

- | | |
|------------------------|----------------------------|
| 1. Bean box lid | 5. Container lid |
| 2. Bean box | 6. Ground Coffee Container |
| 3. Start/Stop Button | 7. Cleaning brush |
| 4. Dose Selection Knob | 8. Coffee spoon |

COFFEE GUIDER OVERVIEW

Your Coffee Grinder has 35 unique grind size settings that are suitable for a range of brewing methods, from the finest setting for espresso to the coarsest setting for french press. By adjusting the Dose Selection Knob, you can choose from 2 to 12 cups of coffee as desired.

Coffee Grind Setting Chart			
Coffee Type	French Press	Drip coffee	Espresso
Grind size	Coarse	Medium	Fine
Grind size range			
Dose Selection	2-12 cups	2-12 cups	2 cups
Default maximum grind time	55S (12 cups)	55S (12 cups)	18S (2 cups)
Use setting with	Ground coffee container	Ground coffee container	Ground coffee container

ELECTRIC PARAMETER

 
 
 
Rated voltage: AC120V;

Rated frequency: 60Hz;

Rated power: 200W;

USING THE COFFEE GRINDER

 
 
1. Before first use, clean all parts and accessories. (See “Cleaning the Coffee Grinder” section).
2. Place the Coffee Grinder on a dry, flat, level surface such as a countertop or table.

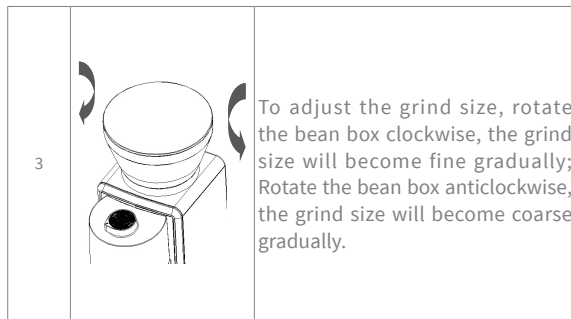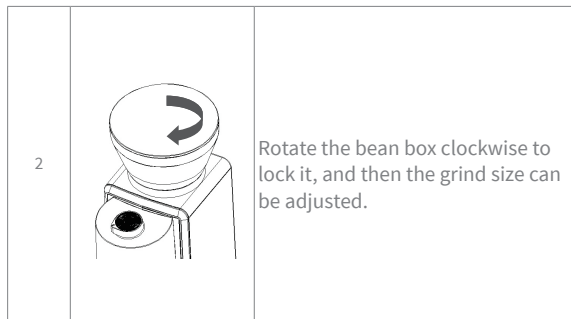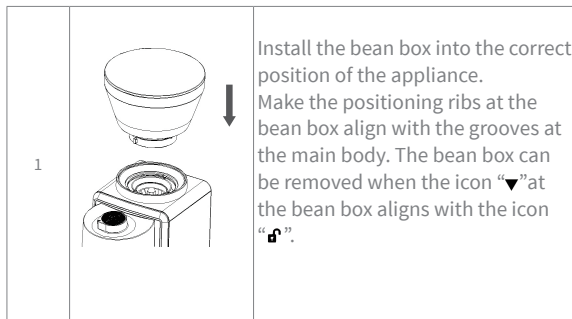 



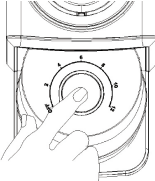 
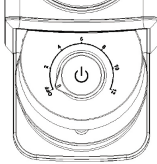 
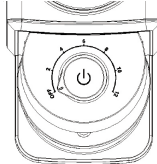 
SETTING AND RUNNING THE GRINDER

TIP: Refer to the “Coffee Grind Setting chart” for preset settings. Experiment with the different grind size, dose and time settings to achieve your desired taste.

WARNING: The appliance can not work for 3 minutes continuously within 10 minutes, and it must rest for 30 minutes if the working time exceeds 3 minutes.

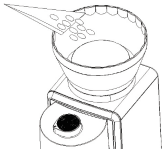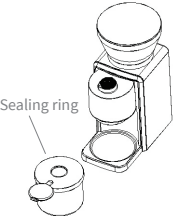

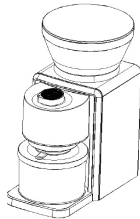4		Open the bean box lid and add coffee beans (freshly roasted). Replace the lid.
5	 <p>Sealing ring</p>	Use with ground coffee container: Put the ground coffee container (with the sealing ring opened) under the ground coffee outlet to collect ground coffee in the ground coffee container.

1		Plug into a power outlet. Rotate the bean box to select the grind size ranging from 1 (Fine) to 35 (Coarse) . Refer to the “Coffee Grind Chart”.
---	---	--

2		<p>Rotate the Dose Selection Knob to select the number of cups or shots (rotate clockwise to increase; rotate counterclockwise to decrease). French press, Drip coffee: You can select between 2 - 12 cups. Espresso: You can select between 2 shots. NOTE: The maximum grinding time is the time for grinding 12 cups of ground coffee.</p>
3		<p>Press Start/Stop button to begin grinding operation as per selected grind size and dose. Grinder will stop automatically when the selected dose is finished grinding.</p>
4		<p>You can pause the Coffee Grinder by pressing the Start/Stop button, if desired. This helps to settle coffee grounds in the Ground Coffee Container.</p>
5		<p>The coffee grinder will not work when the Dose Selection Knob turns to "OFF" .</p>

COFFEE GRINDER USE TIPS

1. Freshly ground coffee is the key to making coffee with more flavor and body.
2. Use freshly roasted coffee beans with a 'roasted on' date to maximize flavor, not a use-by or best before date.
3. Use coffee beans between 5 and 20 days after the 'roasted on' date for optimal freshness.
4. Coffee flavor and strength is a personal preference. Vary the type of coffee beans, amount of coffee and fineness of grind to achieve the flavor you prefer.
5. Store coffee beans in a dark, cool and dry place. Vacuum seal if possible.
6. Buy whole beans in small batches to reduce the storage time of coffee beans.
7. Once coffee is ground, it quickly loses its flavor and aroma. For the best results, grind beans immediately before brewing.
8. When storing the appliance, run grinder empty to clear ground beans left in chamber.
9. Run grinder for 10-15 seconds to purge some coffee before each use, for maximum freshness.
10. Clean the bean box and conical burrs regularly.
It is best to change the grind size while the Coffee Grinder is running.

1		The bean box, bean box lid, ground coffee container and container lid can be cleaned with warm, soapy water, then rinse with clean water and dry thoroughly.
2		Wipe clean the main body of Coffee Grinder with a soft, damp cloth. Dry thoroughly with a soft dry cloth.

 
 

CARE AND CLEAN

 
 
 
NOTE: Unplug the Coffee Grinder before cleaning.

IMPORTANT: To avoid damage, never wash or immerse the main body of Coffee Grinder, burrs, or power cord in water, or place in the dishwasher.

CLEANING THE BURRS

If the Coffee Grinder is used frequently, the burrs should be cleaned regularly for the best performance and especially important when grinding for espresso coffee. Cleaning enables the burrs to achieve the finest, most consistent grinds possible every time.

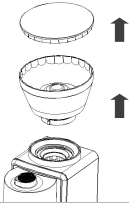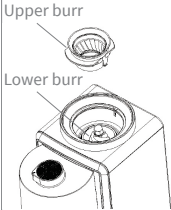1		Empty the bean box. Remove the lid and the bean box.
2		Remove the upper burr.
3		Clean the upper burr with the cleaning brush.

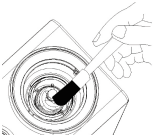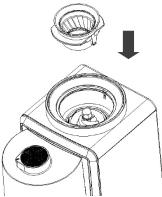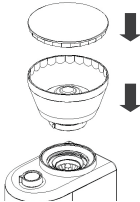4		Clean the lower burr with the cleaning brush or use a vacuum cleaner to remove coffee residue.
5		Install the upper burr well in position.
6		Install the bean box and bean box lid well in position.

TROUBLESHOOTING

IF YOUR COFFEE GRINDER MALFUNCTIONS OR FAILS TO OPERATE.



Problem	Solution
If the Coffee Grinder does not turn on.	--Plug the Coffee Grinder into a power outlet. --If you have a circuit breaker box, make sure the circuit is closed. Try unplugging the Coffee Grinder, then plug it back in. --The grinding time exceeds 3 minutes within 10 minutes, suggest making the appliance rest for 30 minutes for cooling down. Try unplug the Coffee Grinder, then plug it back in.
If the Coffee Grinder runs when switched on, but coffee does not grind.	The burrs require cleaning or are worn. Refer to “Care and Cleaning” section for detailed information on cleaning the burrs.
If the Coffee Grinder is operating normally, but stops abruptly.	Immediately turn off the Coffee Grinder. A coffee bean, may have jammed the burrs. Refer to “Care and Cleaning” section for detailed information on cleaning the burrs.
If the problem cannot be corrected.	Contact the after-sale service department.



decakila

 decakila  decakila

Made in China Jiangsu China. 2021.D01

www.decakila.com Global Links Technology Co. Pte. Ltd.