


decakila



KUCF012B
DRIP COFFEE MAKER

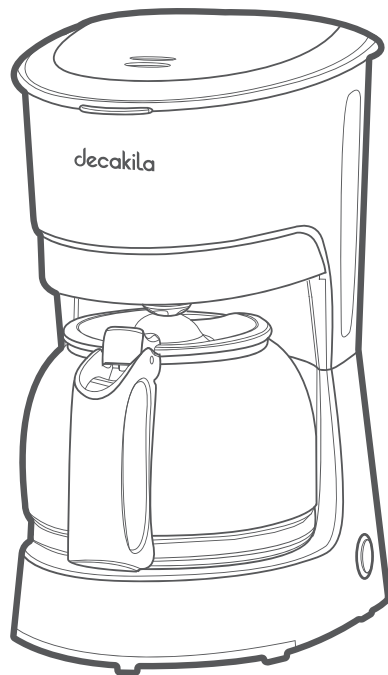

CONTENTS

IMPORTANT SAFEGUARDS	01
KNOW YOUR COFFEE MAKER	02
BEFORE FIRST USE	03
USING YOUR COFFEE MAKER	03
CLEANING AND MAINTENANCE	03
REMOVING MINERAL DEPOSITS	04
ENVIRONMENT FRIENDLY DISPOSAL	04


IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

- Read all instructions.
- Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
- Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
- To protect against fire, electric shock and injury to persons do not immerse cord, plug, in water or other liquid.
- Remove plug from wall outlet before cleaning and when not in use. Allow appliance cool down completely before taking off, attaching components or before cleaning.
- The use of accessory is not recommended by the appliance manufacturer. It may result in fire, electric shock and/or person injury.
- The container is designed for use with this appliance. It can not be used on a range top.
- Do not clean container with cleansers, steel wool pads, or other abrasive materials.
- Do not hang power cord over the edge of table or counter, or touch hot surface.
- Do not place the coffee maker on hot surface or beside fire in order to avoid to be damaged.
- To disconnect, remove plug from wall outlet. Always hold the plug. But never pull the cord.
- Do not use appliance for other than intended use and place it in a dry environment.
- Close supervision is necessary when your appliance is being used near children.
- Be careful not to get burned by the steam.
- To disconnect, turn any control to “Off”, then remove plug from wall outlet.
- Do not let the coffee maker operate without water.
- Never use the appliance if the carafe shows any signs of cracks. Only use the carafe with this appliance. Use carefully as the carafe is very fragile.
- Scalding may occur if the cover is removed during the brewing cycles.
- Some parts of appliance is hot when operated, so do not touch with hand. Use handles or knobs only.

KNOW YOUR COFFEE MAKER

- Never leave the empty carafe on the keeping warm plate otherwise the carafe is liable to crack.
- This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
- Do not set a hot container on a hot or cold surface.
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Do not use outdoors.
- Save these instructions.

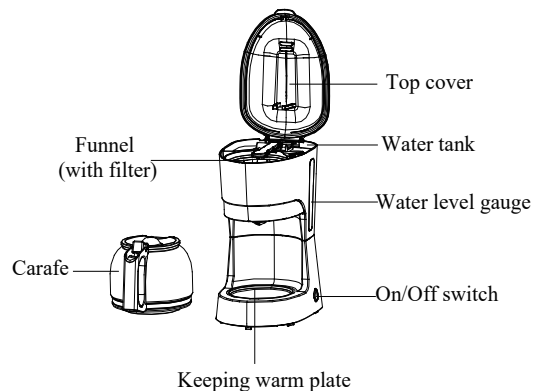

BEFORE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add water into water tank to the MAX level and brew water for several times without coffee powder, then discard the water. Clean all detachable parts thoroughly with water.

USING YOUR COFFEE MAKER

1. Open the top cover and fill the water tank with fresh water. The water level should not exceed MAX level as indicated on the water level gauge.
2. Add coffee powder into filter. Usually a cup of coffee need a level spoon of coffee powder, but you may adjust according to personal taste. Then assemble the filter with coffee powder into the funnel, and maker sure the funnel is fitted properly, otherwise the top cover can not be closed. Finally, close the top cover.
4. Insert the carafe on the keeping warm plate horizontally.
5. Plug the power cord into the outlet.
6. Press ON/OFF switch to the “I” position, the indicator will be illuminated. The appliance will begin working.
7. The brewing process can be interrupted by pressing ON/OFF switch to the “O” position at any time. The appliance will continue brewing once the ON/OFF switch is pressed to the “I”

position.

Note: you can take out carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds.

7. Remove out carafe to serve when finish brewing (about one minute later after the coffee stops dripping out.)

Note: The coffee you get will less than the water you have added, as some water is absorbed by coffee powder. DO NOT touch cover, keeping warm plate and so on when operating as they are very hot.

8. When the process is finished, if you do not want to serve immediately, keep the coffee maker is energized, the coffee can be kept warm in the keeping warm plate. If you want to stop keeping warm, you shall unplug the power cord manually. For an optimum coffee taste, serve it just after brewing.

9. Always turn the coffee maker off and disconnect the power supply when not use.

Note: Pay attention to pour the coffee out, otherwise you may be hurt as the temperature of coffee just finished is high.

CLEANING AND MAINTENANCE

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug

is first removed from wall outlet.

1. Clean all detachable parts after each use in hot, sudsy water.
2. Wipe the product's exterior surface with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.
4. Use a damp cloth to gently wipe the keeping warm plate. Never use abrasive cleaner to clean it.
5. Replace all parts and keep for next use.

REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water regularly according to the water quality in your area and the frequency of use. If the mineral deposit is excessive, the appliance will represent the following signs:

1. Fill the tank with water and descaler to the MAX level (the proportion of water and descaler is 4:1, details refers to the instruction of descaler. Please use "household descaler", you can use the citric acid (obtainable from chemist's or drug stores) instead of the descaler (one hundred parts of water and three parts of citric acid).

2. Make sure the filter is free of coffee powder.
3. Press the ON/OFF switch to "1" position. The indicator will be illuminated. The appliance will begin working.
4. Make about two cups of coffee (about 20z).
5. Press the ON/OFF switch to the "0" position to stop the unit immediately, make the descalers deposit in the unit at least 15 minutes.
6. Restart the unit and repeat the steps of 4-6 at least 3 times.
7. Then brewing coffee (no coffee powder) with tap water, repeat the steps of 4-6 for 3 times (it is not necessary to wait 15 minutes in step of 6), then brewing until no water is left in the tank.

ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.





decakila



decakila



decakila

Made in China Jiangsu China. 2021.D01

www.decakila.com Global Links Technology Co. Pte. Ltd.