


decakila

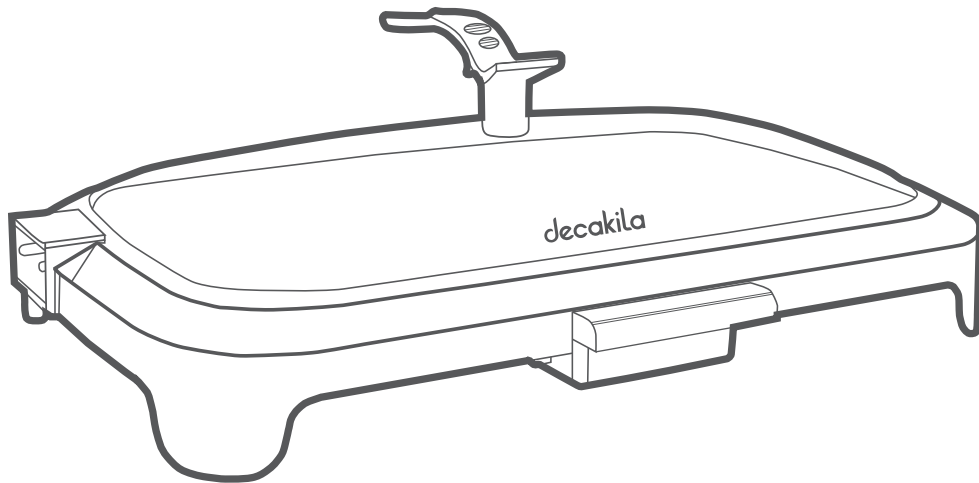

KUEC002B
GRIDDLE



CONTENTS


IMPORTANT SAFETY INSTRUCTIONS	01
KNOW YOUR GRIDDLE	03
BEFORE FIRST USE	03
HOW TO USE GRIDDLE	03
CLEANING AND MAINTENANCE	04
ENVIRONMENT FRIENDLY DISPOSAL	05

IMPORTANT SAFEGUARDS

Fire and electric shock will be at the risk of user injury, so please read and follow the below safety precautions

- Before use, make sure that your outlet voltage corresponds to the voltage stated on the rating label
- Children or the disabled should be supervised to ensure that they do not play with the appliance
- Do not immerse the appliance, cord, temperature-controlling plug or plug in water or other liquid, other wet areas.
- Appliance stably place near the heat resistance surface of power socket during use.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner.
- Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- The unit can be used only after cooking plates being assembled correctly.
- Do not directly touch cooking plates with hands but use gloves or washcloth because the cooking plates will become hot during working..
- The use of accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Power cable needs to be well put away to avoid cable hanging or people tripping.
- Do not let cord hang over edge of table or hot surface.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be paid when moving an appliance containing hot oil or other hot liquids. as the appliance may be of oil splashing during cooking, it is suggest to use oven mitt or pot holder.
- Bread, oil or other food may cause fire. Do not make the appliance be close to curtain, other inflammable material, fire stove, baking oven or other high temperature surface.
- Do not use plastic film, polybag or metal foil to remove the food on the cooking plate after finish wokring to avoid the appliance being damaged or fire danger. And do not let the food be cooled down on the cooking plate, move the food out as soon as possible.
- Unplug from outlet when not in use and before cleaning
- Never using sharp fork or knife to remove the food as this would damage the non-stick coating of cooking surface. Use heat-resistant wood or plastic utensils only.

- Be careful for the heating food, water or other liquid in cooking plates when moving appliance
- Do not use appliance for other than its intended use.
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Do not move the appliance during operation to avoid being scalded.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Do not use outdoors.
- Close supervision is necessary when any appliance is used by or near children
- Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Save these instructions.

•Remark(only for CSA): The height of symbol ‘hot surface’  is 20 mm on appliance enclosure.

KNOW YOUR GRIDDLE



BEFORE FIRST USE

PLASTICIZER WARNING The surface of appliance is possible to become very hot during operation, which is likely to cause blemishes, discolor or stains on the tabletop. It is recommended to place non-plastic pads between the appliance and table top.

- Unpack the unit and place it in a flat horizontal countertop and wipe the outer surface and non-stick plate with wet soft cloth. Then connect the appliance to the rated supply and preheating. It is recommended to coat a layer of vegetable oil when preheating. This helps to protect the non-stick surface. Some odor may be smelled during initial preheating; this is normal and would disappear after one or two use.
- Before use check the cooking plate is clean and free from dust and food particles. Wipe with a damp cloth if necessary.

HOW TO USE GRIDDLE

- Connect the appliance with rated voltage and adjust the temperature according to your requirement, the power indicator turns on in red and the appliance starts to preheat. When reach the preset temperature, the red indicator turns off.
- Usually it will take for approximately 10 minutes to reach the

preset temperature. Now you can put the food and fillings onto the cooking plate.

- Make sure the drip tray is assembled in position and then put the prepared food on the cooking plate. It is recommended to use oven mitts and pot holder to reduce the risk of being hurt by touching hot surface.
- The grilling time should be approximately 20 minutes. Exact grill time vary according to your personnel taste and the fillings.
- Once the cooking process has finished, remove the grilled food with a plastic or wooden spatula. Never use metal utensils as this would do damage to the non-stick coating.
- Unplug the power cable after the food being cooked (note: if the socket is switch type, turn it off)
Note: The cooking plate shall be cooled down for some time as it may be very hot.
- Remove the drip tray for cleaning after it cooled down completely.

CLEANING AND MAINTENANCE

- Unplug the appliance from power supply and wait it completely cool down before cleaning or storage.
- Clean cooking plate and drip tray. Place cooking plate to the dishwasher, but the removable drip tray is not recommended to place in dishwasher as the plastic material is likely to deform and deteriorate through prolonged use of dishwasher cleaning. Immerse the drip tray into warm soapy water to clean, then rinse and dry.
- Wipe the lid, cooking plate, cover with absorbent paper, towel or soft cloth. Never use abrasive cleaner to wipe non-stick cooking plate.
WARNING: Never immerse the appliance into water for cleaning as electric shock may occur.
- Store the appliance in a safe and clean place.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

The appliances are not intended to be operated by means of an external timer or separate remote-control system.

ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.





decakila



decakila



decakila

Made in China Jiangsu China. 0122.D03

www.decakila.com Global Links Technology Co. Pte. Ltd.