


decakila

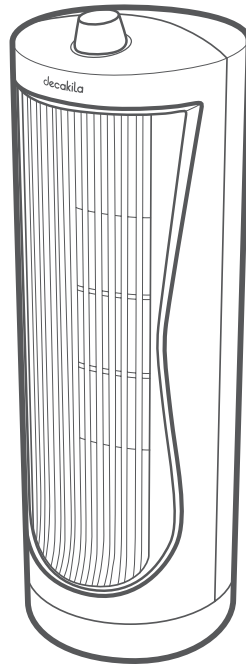

KUFC001B
TOWER FAN



CONTENTS

SAFETY INSTRUCTIONS	01
APPLIANCE OVERVIEW	02
OPERATING INSTRUCTIONS	02
CLEANING AND STORAGE	03
MAINS PLUG FUSE REPLACEMENT	03
DISPOSAL INFORMATION	04

SAFETY INSTRUCTIONS

Please read this user manual carefully to ensure proper use, maintenance and installation.

- This product is intended for domestic and light office use ONLY and not for commercial, industrial or outdoor use.
- Do not operate the unit with a damaged cord or plug, after it malfunctions or has been dropped or damaged in any way.
- All electrical repairs must be carried out by a qualified electrician. Inadequate repairs may result in a major source of danger for the user and invalidate the warranty.
- Make sure the voltage in your home corresponds to the one shown on the rating label of the appliance
- This unit should always be kept in an upright position especially during operation to avoid any damage. Locate the unit on a flat stable surface.
- Position the power cord where people will not step on or trip over it.
- Ensure that the air inlets and outlets are not blocked or covered.
- Do not place the unit too close to curtains or other objects - min 30cm.
- Make sure there are no objects near the unit which can prevent it from oscillating.
- Never insert fingers, pencils or other objects into the unit. Warn your children against these dangers.
- This appliance should only be used by adults.
- Keep the appliance and its cord out of reach of children.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
- Unplug the unit from the socket when not in use. Do not pull on the cord.
- Do not use the unit near a bath, shower, swimming pool or anywhere it could be splashed with water.
- Do not expose the unit to direct sunlight.
- Do not use the unit near flammable or explosive gases.
- Before cleaning or moving the unit, switch it off and unplug the power cord.

• Do not leave the unit unattended during operation. Always unplug the power cord when not in use.

APPLIANCE OVERVIEW



OPERATING INSTRUCTIONS

1. Take the unit out of the box, removing any packaging.

2. Turn the control dial to O symbol on the display panel and then connect the plug to a power socket.
3. To operate the fan only (without oscillation), turn the dial anticlockwise and select the desired speed (I = Low or II = High).
4. To operate the fan with oscillation, turn the dial clockwise and select the desired speed (I = Low or II = High).
5. To switch off the fan, turn the dial back to O symbol.

CLEANING AND STORAGE

Before cleaning the unit, turn the power off by selecting the O position and unplug the power cord from the plug socket. Wait until the fan has stopped running completely before cleaning.

- Important: Do not immerse the power cord, plug or the whole unit in water or rinse under a tap.
- Clean the outside of the unit using a damp cloth moistened with a mild soap solution, and then wipe it using a dry cloth.
- Dust can be cleaned from the air inlet and air outlet by using a soft brush
- We recommend cleaning the unit once a month.
- If you don't use the unit for a long period of time, please turn the unit off, unplug the power cord from the socket and then store in a dry, cool and safe place.

The fan does not work	Possible Cause	Solution
M.High	<ol style="list-style-type: none"> 1. Not properly plugged into the mains wall socket 2. Not switched on 3. No electricity in the mains wall socket 	<ol style="list-style-type: none"> 1. Plug in firmly 2. Switch on 3. Check fuse or breaker
The fan is too noisy	<ol style="list-style-type: none"> 1. Sitting unevenly 2. Not secured together correctly 	<ol style="list-style-type: none"> 1. Ensure fan is sitting on flat surface 2. Make sure all components are secured correctly
The air speed is too fast	<ol style="list-style-type: none"> 1. Fan setting is too high 	<ol style="list-style-type: none"> 1. Adjust setting accordingly

DISPOSAL INFORMATION

The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.





decakila



decakila



decakila

Made in China Jiangsu China. 2021.D02

www.decakila.com Global Links Technology Co. Pte. Ltd.