 


decakila

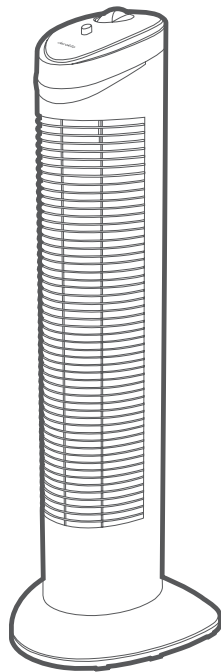

KUFC002B
TOWER FAN



CONTENTS

READ AND SAVE THESE INSTRUCTIONS	01
FUSED SAFETY PLUG	03
USER SERVICING INSTRUCTIONS	03
PRODUCT SPECIFICATIONS AND PARTS	04
ASSEMBLY	04
DIRECTIONS FOR USE	05
CLEANING AND MAINTENANCE	05
END OF SEASON STORAGE	05

TROUBLE SHOOTING GUIDE

06

LIMITED WARRANTY

06

READ AND SAVE THESE INSTRUCTIONS

Warnings:

- Failure to comply with the warnings listed below may result in electric shock or serious injury.
- This product should only be used in accordance with the specifications outlined in this manual. Usage other than what has been specified here may result in serious injury. Intended use: This product is intended to circulate the air in indoor living spaces only. This product is not intended for commercial or industrial uses. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.



When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions before using this appliance.
- To avoid fire or shock hazard, plug the appliance directly into a 120V AC electrical outlet.
- Keep the cord out of heavy traffic areas. To avoid fire hazard, NEVER put the cord under rugs, near heat registers, radiator, stoves or heaters.
- Carefully discard any plastic wrapping that was used for the packaging.
- To protect against electrical hazards, DO NOT immerse in water or other liquids. Do not use near water.
- Always unplug the appliance before moving it, cleaning or whenever it's not in use. Be sure to pull out of the outlet by the plug and not the cord.
- Avoid contact with moving parts.
- Do not operate in the presence of explosive and/or flammable fumes.
- Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Do not operate any appliance with a damaged cord or plug, if motor fan fails to rotate, after the appliance malfunctions, or if it has been dropped or damaged in any manner. Call Customer Service.
- The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.

- Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.
- To disconnect, grip lug and pull from wall outlet. Never yank on cord. • Extreme caution must be used when moving an appliance containing hot water.
- Always use on a dry, level surface.
- Do not operate fan until fully assembled with all parts properly in place.
- To reduce the risk of electrical shock and injury to persons, do not use in window.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do NOT play with the appliance.
- Warning: To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

IMPORTANT- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

WARNING: This product can expose you to chemicals including lead or lead compounds, which are known to the State of California to cause cancer or birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov.



FUSED SAFETY PLUG

This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

 
 
USER SERVICING INSTRUCTIONS

If your fan loses power and you suspect that the fuse on your fan has blown, grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.


- Slide fuse cover, located on the top of the plug, towards the prongs of the plug. (Fig. 1)
- Carefully remove the blown fuse and snap a new fuse into place. To reduce the risk of fire, replace fuse only with 2.5 Amp, 125 volt fuse. Fully close the fuse door by sliding back into place. (Fig. 2) Discard the blown fuse. The plug should now be ready for normal use.
- To reduce the risk of fire, do not replace attached plug. Contains a safety device (fuse) that should not be removed.


Discard product if the attached plug is damaged.

- If you need further information on how or when to replace the fuse in the safety plug, please contact Guardian Technologies customer service.

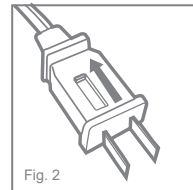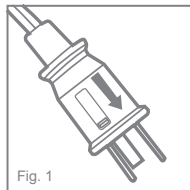


PRODUCT SPECIFICATIONS AND PARTS

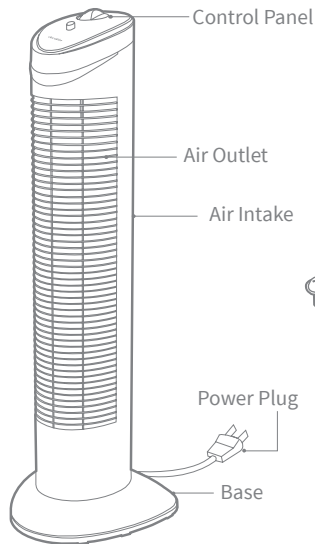 

 4 pack of screws included for base assembly


ASSEMBLY

 1. Carefully unpack your tower fan and the set of 4 screws. Remove all plastic bags.
2. Gently turn the fan upside down. Place the front base piece on the bottom of the unit.
3. Place the power cord through the notch on the back base piece.
4. Connect the back piece to the front piece by aligning the notches.
5. Put the power cord through the cord guides.
6. Secure base to the fan with the 4 provided screws.

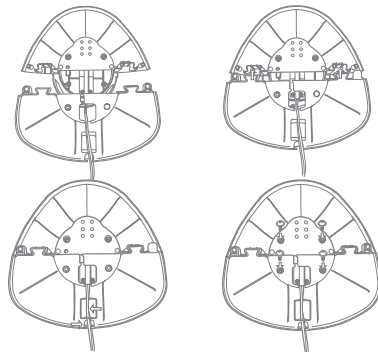

DIRECTIONS FOR USE

 1. Plug into a 120V electrical outlet based on the voltage indicated on the rating label.
2. Select a firm, level flat location – at least six inches (15 cm) from any wall or object for proper air flow. Point air outlet away from wall.
3. Turn “on” by turning control knob to preferred fan speed.
0 - Off
1 - Low Speed
2 - Medium Speed
3 - High speed
4. Press “Oscillation button” to make the tower fan oscillate back and forth.

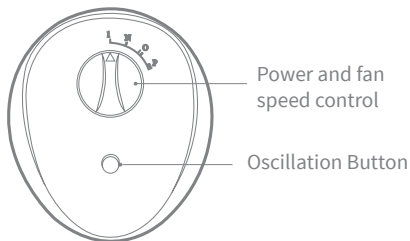

CLEANING AND MAINTENANCE

1. Turn the tower fan off and unplug it before cleaning.
2. The outside of the tower fan can be cleaned with a soft, clean dampened cloth.
3. The air inlet and outlet can be cleaned of dust with a small, soft brush.
4. Do not allow moisture to come in contact with the main body of the tower fan. Ensure that the fan is switched off from the supply mains before removing the guard.

END OF SEASON STORAGE

Follow the cleaning instructions if the fan will be stored at the end of the season. Pack the unit in its original carton and store in a cool, dry location.

TROUBLE SHOOTING GUIDE

PROBLEM	SOLUTION
Unit won't operate.	Check to make sure the unit is plugged in. Check to make sure the unit is on. Check the fuse in the power cord (page 3). Check to make sure the outlet is working properly. Check that the base is correctly assembled.
Decreased air flow.	Check to make sure nothing is blocking the air inlet or outlet. Be sure the plastic bag has been removed from the unit.



decakila



decakila



decakila

Made in China Jiangsu China. 2021.D02

www.decakila.com Global Links Technology Co. Pte. Ltd.