


decakila

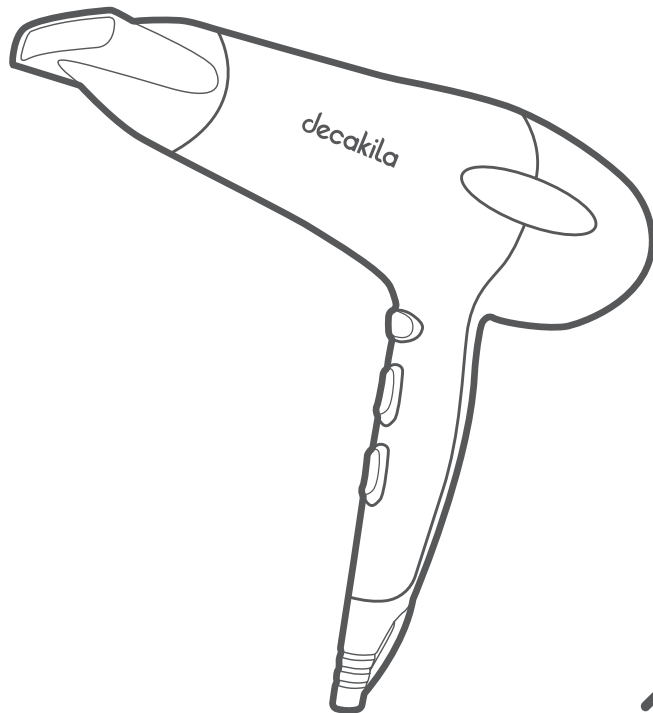

KUHS011W
HAIR DRYER



CONTENTS

| | |
|---|-----------|
| IMPORTANT SAFEGUARDS | 01 |
| DRYING | 02 |
| STYLING ATTACHMENTS | 03 |
| CLEANING | 03 |
| STORAGE | 03 |
| CORRECT DISPOSAL OF THIS PRODUCT | 04 |

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be observed, including the following:

- Check if the voltage indicated on the appliance corresponds to the local voltage before you connect the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

- **WARNING** – Do not use this appliance near water or bathtubs, basins or other vessels.
- When the hair dryer is used in a bathroom, unplug the appliance after use since the proximity of water presents a hazard, even when the hairdryer is switched off.
- For additional protection, we advise you to install a residual current device (RCD) with a rated residual operating current not exceeding 30mA in the electrical circuit supplying the bathroom. Ask your installer for advice.
- Close supervision is necessary when any appliance is used on or near children or some disabled people. Store out of children's reach.
- Never block the air grilles.
- If the appliance overheats, it will switch off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- Do not direct the airflow towards the eyes or other sensitive areas.
- Neither should the appliance be used with wet hands nor immersed in water, held in running water, or allowed to become wet.
- Do not use the hair dryer for purposes other than drying and styling human hair.
- Do not pull the cord with unnecessary force. Do not wrap the cord around the unit. Check cord regularly for any sign of damage. Damaged cords can be dangerous.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

- Always switch the appliance off before putting it down, even if it is only for a moment.
- Always unplug the appliance after use.
- Clean the appliance after use to avoid the accumulation of grease and other residues.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

DRYING

1. Put the plug in the socket.
2. Switch the appliance on by selecting the desired setting.

The airflow and temperature can be adjusted:

(1) after drying hair, can use the cool button to set style with a continuous flow of cool wind

(2) Dry your hair by making brushing movements while holding the dryer at a small distance from your hair.

INSTRUCTION FOR SWITCH

Cool: cool wind

A0=appliance off

A1+B1= low speed and low heating

A1+B2= low speed and moderate heating

A1+B3= low speed and high heating

A2+B1= high speed and low heating

A2+B2= high speed and moderate heating

A2+B3= high speed and high heating

STYLING ATTACHMENTS

1. Concentrator

The concentrator enables you to direct the airflow at your hair that you are styling.

Connect the concentrator by simply snapping it onto the appliance. Disconnect it by pulling it off.

CLEANING

1. The appliance can be cleaned with a dry cloth.

2. The attachments can be cleaned with a moist cloth or rinsed under a running tap. Remove the attachments from the appliance before cleaning them.

Make sure the attachments are dry before using or storing them.

Never rinse the appliance with water.

STORAGE

WHEN NOT IN USE “UNPLUG IT.”

Allow the appliance to cool and store it in a dry location. This hair dryer features a loop allowing it to be conveniently hung on a hook for easy access. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. If the supply cord of this appliance becomes damaged the appliance must be replaced by returning to the retailer from which the product was purchased or a similarly qualified person in order to avoid a hazard.


CORRECT DISPOSAL OF THIS PRODUCT

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.





decakila

 decakila  decakila

Made in China Jiangsu China. 2021.D02

www.decakila.com Global Links Technology Co. Pte. Ltd.