 


decakila

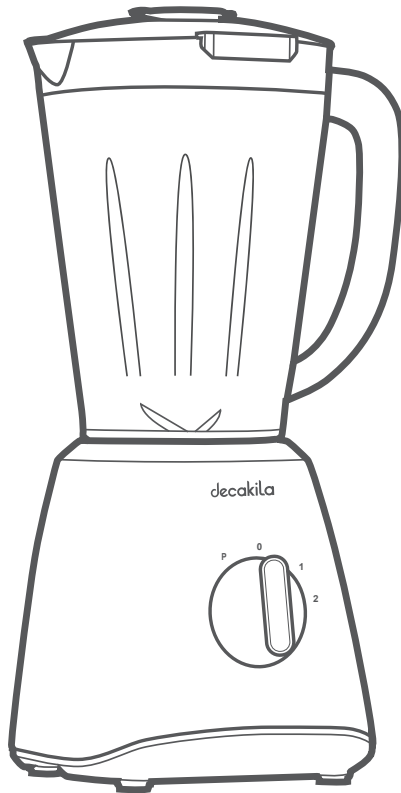

KUJB001W  
STAND BLENDER



# CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	01
POWER CORD INFORMATION	03
BLENDER OPERATION	03
WARNING	04
CLEANING AND MAINTENANCE	05
ENVIRONMENT FRIENDLY DISPOSAL	05

## IMPORTANT SAFEGUARDS

When using this electrical appliance, basic safety precautions should always be followed, including the following:

 
- Read all instructions.
- Before using check that the voltage indicated on the product corresponds with the voltage of your electrical outlet.
- Do not let cord hang on hot surface or over edge of table or counter.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner.
- Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contacting the moving parts.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
- The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To disconnect, turn any control to “0”, then remove plug from wall outlet by grasping the plug, not the cord.
- To reduce the risk of injury, never place blade assembly on motor unit without the jar properly attached.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- Do not leave the machine on unattended.
- When removing the blender from the motor unit, wait until the blades have completely stopped.

- Always operate blender with cover in place.
- Always use the appliance on a secure, dry level surface.
- Never place this appliance on or near a hot gas or an electric burner or where it could touch a heated appliance.
- Do not use outdoors.
- Do not use appliance for other than its intended use.
- Do not operate without this cover in place;
- Avoid any contact with blades or moveable parts.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Be careful if hot liquid is poured into the appliance as it can be ejected out of the appliance due to a sudden steaming.
- To protect against risk of electrical shock do not put (state specific part or parts in question) in water or other liquid.
- The use of attachments, including canning jars, not the manufacturer may cause fire, electric shock or injury.
- Do Not Blend Hot Liquids.

## SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

### POWER CORD INFORMATION

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

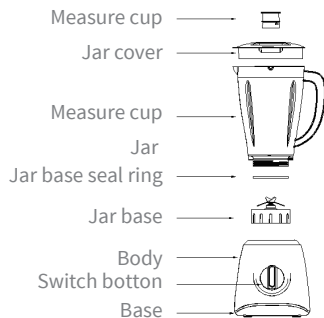

Check that all parts are complete and not damaged. Choose the appropriate attachment to perform your desired task. The blender attachment is suitable for blending fruits or vegetables or crushing ice, while the grinder attachment for grinding coffee beans. Clean the attachment according to the section “CLEANING AND MAINTENANCE”.

**WARNING:** The blade is sharp, handle with great care and ensure that unplug the appliance from outlet before assembling and removing parts.

### BLENDER OPERATION

•Lay the motor unit on the flat horizontal surface and make sure it is unplugged.

**NOTE:** There is a safety interlock device at the bottom of jar, if the jar is not assembled in place, the blender will not operate.

- Open the jar cover by turning anticlockwise and place it on the surface. Peel or core the fruits or vegetables and then cut it into small pieces, then put them into the jar. Usually certain amount of purified water has to be added to facilitate the smooth running of appliance. The amount of mixture should not exceed the max level as indicated on the jar, nor sit lower the min level. The best proportion of the fruits or vegetables and water is 2:3.

**NOTE: The blender is not applicable for beating egg white, mashing potatoes, mixing dough, extracting juice from fruit and vegetable.**

- Replace jar cover on the jar and turn it clockwise.

**NOTE: There is a safety interlock device at the side of jar cover, if the jar cover is not assembled in place, the blender will not operate.**

- You may add ingredients into the jar through the center opening of jar cover during operation, then replace measuring cup if necessary. Let the tabs of measuring cup aligns with the grooves of jar cover, put down and turn the measuring cup by clockwise until it in place.
- Ensure the Speed Selector to “ 0” Position, then plug into power outlet and set Speed Selector to your desired setting. You can press down the Pulse button without releasing it if want to accelerate the process of blending. The detailed information is shown in below Fig. 1

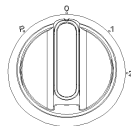 


Fig. 1

**NOTE: Make sure the jar cover is placed in position completely before operating, and never open the jar cover during operation.**

- Do not run the appliance for more than 2 minutes per time, and only wait until the unit is cooled to room temperature before performing next operation cycle.
- Turn the Speed Selector to “ 0” position once the mixture has been blended to your desired consistency.
- Turn the jar anti-clockwise and remove it from the motor unit, carefully take down the jar cover, then pour and serve.

## WARNING

- Never operate the appliance continuously for more than 2 minutes per time.
- Blades are very sharp. Handle with care.
- Do not operate without the jar cover in place.
- Do not disassemble the jar or bowl from the jar base or bowl base in general condition.

- This appliance can be used by children aged from 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

 
Blending maximum level load or hard fruits and vegetables must be sure that the speed selector is setting at highest speed (speed 2). If the speed is used too low, the motor will be damaged due to insufficient torque. When the motor speed is found to be too slow, you must immediately use a higher speed setting to blend or turn the speed selector to “0” to stop blend!

## CLEANING AND MAINTENANCE

Make sure to disconnect appliance from power supply before cleaning for blender.

The Auto Clean function can clean the blender easily and rapidly in complete safety.

Pour a little warm soapy water into the Jar and turn the Speed Selector to “1” position and press down the Pulse button without releasing it for a few seconds.

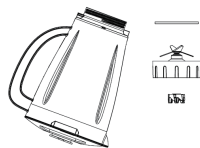

- Wipe the outer surface of motor unit and with a damp cloth.

**NOTE: Do not use abrasive cleanser and never immerse motor unit in water for cleaning**

- Dry all parts and then assemble them. The method of assembling blender attachment just is in opposite of its detaching sequence.

**NOTE: If any problem has been encountered during using, never disassemble the Motor Unit by yourself. There are no user serviceable parts inside. Only contact the authorized service facility for examination and repair.**

## ENVIRONMENT

### FRIENDLY DISPOSAL

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.





# decakila



decakila



decakila

Made in China Jiangsu China. 2021.D02

[www.decakila.com](http://www.decakila.com) Global Links Technology Co. Pte. Ltd.