 


# decakila

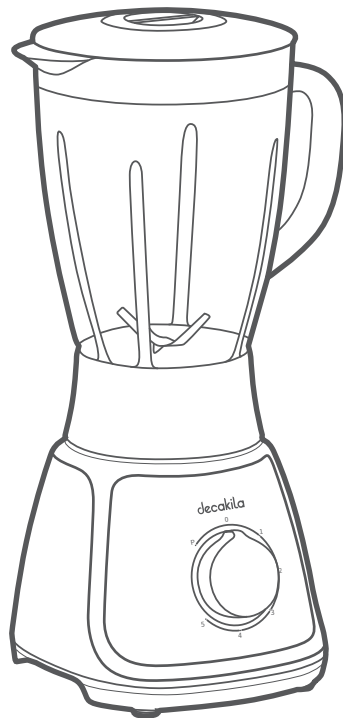

**KUJB002W**  
**STAND BLENDER**



# CONTENTS

IMPORTANT SAFEGUARDS	01
KNOW YOUR BLENDER	03
SPEED KNOB	03
BEFORE INITIAL USE	03
HOW TO USE	04
IMPORTANT OPERATING TIPS	05
CARE AND CLEANING	05
ENVIRONMENT FRIENDLY DISPOSAL	07

## IMPORTANT SAFEGUARDS

- When using this electrical appliance, basic safety precautions should always be followed, including the following:
- Read all instructions.
- Before using check that the voltage indicated on the product corresponds with the voltage of your electrical outlet.
- Do not let cord hang on hot surface or over edge of table or counter.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner.
- Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contacting the moving parts.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
- The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To disconnect, turn any control to “0”, then remove plug from wall outlet by grasping the plug, not the cord.
- To reduce the risk of injury, never place blade assembly on motor unit without the jar properly attached.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- Do not leave the machine on unattended.
- When removing the blender from the motor unit, wait until the blades have completely stopped.
- Always operate blender with cover in place.

- Always use the appliance on a secure, dry level surface.
- Never place this appliance on or near a hot gas or an electric burner or where it could touch a heated appliance.
- Do not use outdoors.
- Do not use appliance for other than its intended use.
- Do not operate without this cover in place;
- Avoid any contact with blades or moveable parts.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Be careful if hot liquid is poured into the appliance as it can be ejected out of the appliance due to a sudden steaming.

## KNOW YOUR BLENDER

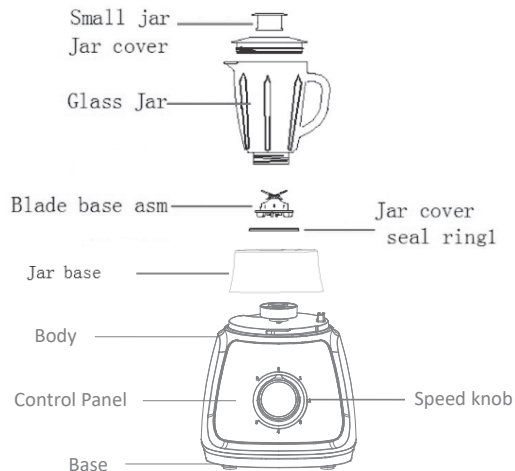 


FIG.1

## SPEED KNOB

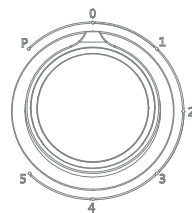 


FIG.2

## BEFORE INITIAL USE

- Before first use, unpack the appliance and place all parts on a horizontal surface.
- The jar assembly (including the measure cup, lid, seal ring 1, jar, seal ring 2, blade assembly and jar base) has already been assembled into the motor unit. Disassemble to wash all detachable parts except the motor unit. Refer to the latter chapter CARE AND CLEANING.
- Once all pieces have been cleaned and dry thoroughly, reassemble.

- Invert the jar onto a level surface, holding the jar handle, put the blade assembly onto the jar base bottom and secure the blade assembly by turning it anti-clockwise until tight. (See Fig.3)
  - Reposition the jar assembly with its opening upwards. Wrap the seal ring 1 around the lid bottom and put the lid onto the jar assembly. Place the measure cup exactly into the lid by fitting the small projection on the both sides of the cup into the slots of the lid and turning the cup clockwise until tight. (See Fig.4)
  - Finally, place the assembled jar onto the motor unit by aligning the strip on the assembled jar bottom. (See Fig.5)
- CAUTION:** Jar and jar base is now secure. Do not try to twist the jar and jar base onto motor unit .

 


FIG.3



FIG.4



FIG.5

## HOW TO USE

- Peeled or cored the fruit or vegetables and then cut it into small dices.
- Place the food to be blended into the jar (See Fig.6) . Usually, certain amount of purified water has to be added to facilitate the smooth running of appliance. The proportion of the food and water is 2:3. The amount of mixture should not exceed the max level as indicated on the jar.

### RECIPE

FOOD TYPE	SPEC	WEIGHT	SPEED
Carrot (apple, pear etc. )	Cut into 15mm*15mm*15mm	Carrot: 600g Water: 900g	High speed
Carrot (apple, pear etc. )	Cut into 6mm*6mm*6mm	Carrot: 50g Water: 150g	Low speed

**Note:** never use boiling liquids or run the appliance empty.

- Put the lid on the jar. Be sure the measuring cup is in place.
- Plug the power cord into a standard wall outlet.
- Turn the speed knob to the appropriate speed setting for your task (Please stir food at the highest speed, but not at low speed).
- For quick or delicate blending tasks, turn the speed knob to P position and hold for a few seconds and then release, the knob will reset to O position automatically. Operate several times until the consistence you want is obtained.

•If you want to add ingredients while the blender is working, remove the measuring cup and place through the lid opening. (See Fig.7)  
When crushing ice or hard food, keep one hand firmly on the lid.


•When the consistence you desire is obtained, turn the knob to O position.

**Note:**

•For each use, the consecutive operation time should not exceed 2 minutes. at least 10 minutes rest time must be maintained between two continuous cycles, let the unit cool to room temperature before performing next operation cycle.


•If you want to stop the machine during operation, turn the knob to O position anytime.

Before blending, add food to be blended into the jar.

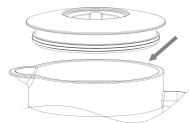 

**FIG.6**

During blending, add the ingredient through the lid opening.

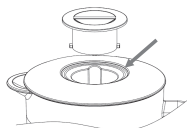 

**FIG.7**

## IMPOTANT OPERATING TIPS


- For best circulation of food that are to be blended with some liquid, pour the liquid into the jar first, then add solids.
- Some of the tasks that cannot be performed efficiently with a blender are: beating egg whites, whipping cream, mashing potatoes, grinding meat, mixing dough, extracting juice from fruit and vegetable
- The following items should never be placed in the unit as they may cause damage: bones, large pieces of solid, frozen food, or tough foods such as turnips.
- To crush ice, add up to 6 ice cubes. If more ice is needed, remove the cup and add cubes one by one through the lid opening.

## CARE AND CLEANING

**This product contains no user serviceable parts. Refer service to qualified service personal.**

- Before cleaning, unplug the blender.
- Always wash immediately after use for easier cleaning. Don't let food dry on the jar assembly as this will make cleaning difficult.
- Pour a little warm soapy water into the jar and turn the knob to P position for a few seconds. And then empty the jar.
- Dismantle all detachable parts. Lift the jar assembly off the

motor unit, To detach the blade assembly by turning it clockwise from the jar base bottom , and remove the blade assembly (see fig.8). In addition, detach the jar cover seal ring 1 from the jar cover.

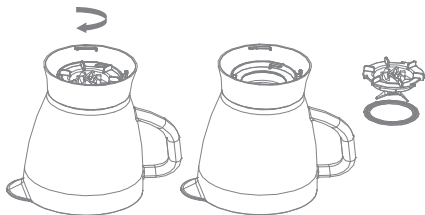 

**FIG.8**

- Rinse the measure cup, lid, seal ring 1, jar, seal ring 2 and blade assembly by hands or in a dishwasher and then dry. They are dishwasher safe components, but the temperature setting shall not exceed 70 °C .
- Brush the blade clean using warm soapy water, then rinse thoroughly under the tap. Don't touch the sharp blades, handle carefully. Don't immerse the blade assembly in water. Leave to dry upside down away from children.

- Wipe the motor unit with a damp cloth and dry thoroughly. Remove the stubborn spots by rubbing with non-abrasive cleaner. If liquids spill into the motor unit; first unplug the unit, then wipe with a damp cloth and dry thoroughly.

- Warning: Blending maximum level load or hard fruits and vegetables must be sure that the speed selector is setting at highest speed (speed 5). If the speed is used too low, the motor will be damaged due to insufficient torque. When the motor speed is found to be too slow, you must immediately use a higher speed setting to blend or turn the speed selector to "0" to stop blending!

**CAUTION:**

- Do not immerse the motor unit in liquid to prevent the risk of electric shock.
- Do not use rough scouring pads or cleansers on parts or finish.



## ENVIRONMENT FRIENDLY DISPOSAL

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.





# decakila



decakila



decakila

Made in China Jiangsu China. 2021.D02

[www.decakila.com](http://www.decakila.com) Global Links Technology Co. Pte. Ltd.