

decakila



KUJB006M
TABLE BLENDER



CONTENTS

IMPORTANT SAFEGUARDS	01
KNOW YOUR BLEANDER	03
BEFORE THE FIRST USE	04
BLENDER OPERATION	04
GRINDER OPERATION FOR COFFEE BEAN	06
GRINDER OPERATION FOR BEEF	07
CHOPPING OPERATION	08
CARE AND CLEANING	08
ENVIRONMENT FRIENDLY DISPOSAL	09

 
IMPORTANT SAFEGUARDS

When using this electrical appliance, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Before using check that the voltage indicated on the product corresponds with the voltage of your electrical outlet.
- Do not let cord hang on hot surface or over edge of table or counter.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- If the supply cord is damaged it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contacting the moving parts.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
- The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To disconnect, turn any control to “off”, then remove plug from wall outlet by grasping the plug, not the cord.
- To reduce the risk of injury, never place blade assembly on motor unit without the jar properly attached.
- Do not leave the machine on unattended.
- When removing the blender from the motor unit, wait until the blades have completely stopped.
- Always operate blender with cover in place.

- Always use the appliance on a secure, dry level surface.
- Never place this appliance on or near a hot gas or an electric burner or where it could touch a heated appliance.
- Do not use outdoors.
- Do not use appliance for other than its intended use.
- Be care of potential injury from misuse.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.

KNOW YOUR BLENDER

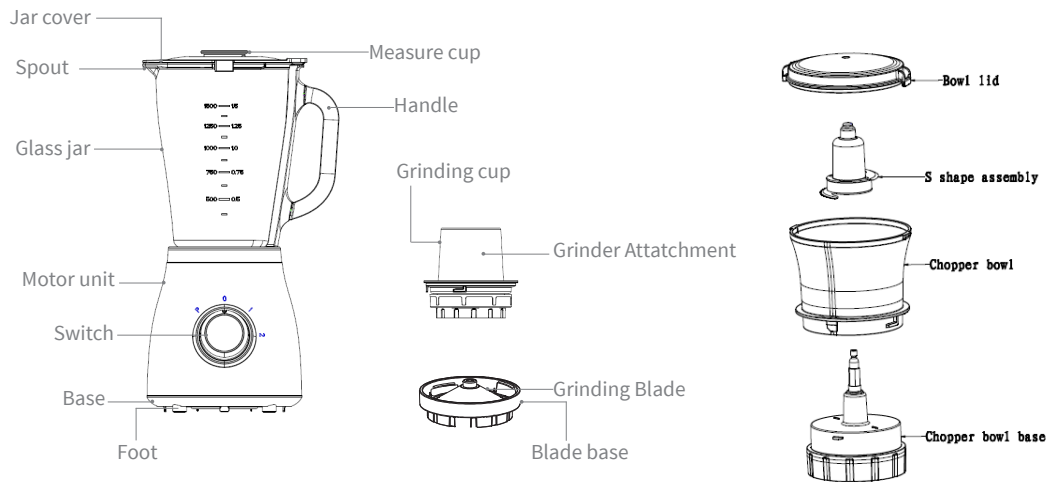

BEFORE THE FIRST USE

- Check that all parts are complete and not damaged. Choose the appropriate attachment to perform your desired task. The blender attachment is suitable for blending fruits or vegetables or crushing ice, while the grinder attachment for grinding coffee. Clean the attachment according to the section “CLEANING AND MAINTENANCE”.
- **WARNING:** The blade is sharp, handle with great care and ensure that unplug the appliance from outlet before assembling and removing parts.

BLENDER OPERATION

- Place the Jar on the Motor Unit, Turn the jar clockwise until a click will be heard when locked into position properly. Please see Fig.1.
- **NOTE:** There is a safety interlock device at the bottom of jar, if the jar is not assembled in place, the blender will not operate.


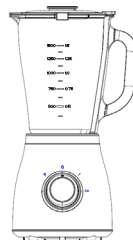 


Fig. 1

- Peel or core the fruits or vegetables and then cut it into small pieces, then put them into the jar. Usually certain amount of purified water has to be added to facilitate the smooth running of appliance. The amount of mixture should not exceed the max level as indicated on the jar, nor sit lower the min level. The best proportion of the fruits or vegetables and water is 2:3.
- **NOTE:** The blender is not applicable for beating egg white, mashing potatoes, mixing dough, extracting juice from fruit and vegetable.
- Replace jar cover on the jar.
- You may add ingredient into the jar through the center opening of jar cover during operation, then replace measuring cup if necessary. Let the tabs of measuring cup

aligns with the grooves of jar cover, put down the measuring cup.

 - Ensure the Speed Selector to “0” Position, then plug into power outlet and set Speed Selector to your desired setting. You can set Speed Selector to the “P” position if want to accelerate the process of blending. The detailed information is shown in below fig. 2
- **NOTE:** Make sure the jar cover is placed in position completely before operating, and never open the jar cover during operation.

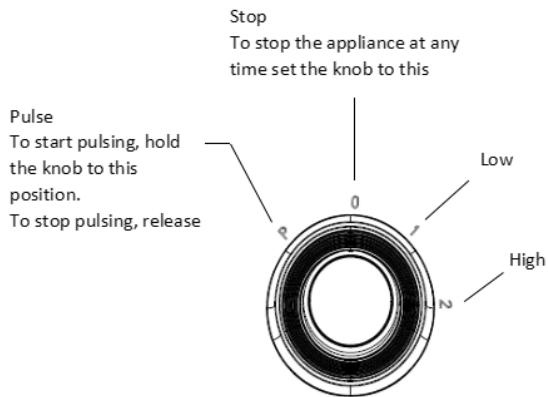

- Do not run the appliance for more than 3 minutes per time, and only wait until the unit is cooled to room temperature before performing next operation cycle.
- Turn the Speed Selector to “0” Position once the mixture has been blended to your desired consistency.
- Turn the jar by anti-clockwise and remove it from the motor unit, carefully take down the jar cover, then pour and serve.

GRINDER OPERATION FOR COFFEE BEAN

- Lay the motor unit on the flat horizontal surface and make sure it is unplugged.
- Fill the grinding bowl with proper coffee bean, then assemble the grinding blade assembly and grinding bowl together. Please see Fig.3
- **NOTE: The quantity of coffee bean the grinding bowl allows to grind is Max 60g.**
- Place the grinder attachment on the motor unit, Turn the bowl clockwise until a click will be heard when locked into position properly. Please see Fig. 4
- **NOTE: There is a safety interlock device at the bottom of**



Fig.3

 


Fig.4

bowl, If the bowl is not assembled in place, the chopper will not operate.

- Ensure the Speed Selector to “0” Position, then plug into power outlet.
- Ensure the Speed Selector to “0” Position, then plug into power outlet.
- Select the desired speed setting, the appliance will start grinding. During grinding, you can press down the Pulse button without releasing it if want to accelerate the process of grinding.
- Turn the Speed Selector to “0” Position once the coffee has been ground to your desired result.

 


Fig.5

- Disconnect from power supply once finished. Disassemble the grinder attachment from the unit, keep the grinding bowl downward and turn it anticlockwise (see fig.5), then empty the bowl and serve.
- Do not run the appliance for more than 30s per time, and only wait until the unit is cooled to room temperature before performing next operation cycle.

GRINDER OPERATION FOR BEEF

- Lay the motor unit on the flat horizontal surface and make sure it is unplugged.
- Fill the grinding bowl with proper beef, then assemble the grinding blade assembly and grinding bowl together. Please see Fig.3
- **NOTE: The quantity of beef the grinding bowl allows to grind is Max 60g, Beef block dimension do not be more than 20mm*20mm*20mm.**
- Place the grinder attachment on the motor unit, Turn the bowl clockwise until a click will be heard when locked into position properly. Please see Fig. 4
- **NOTE: There is a safety interlock device at the bottom of bowl, if the bowl is not assembled in place, the chopper will not operate.**
- Ensure the Speed Selector to “0” Position, then plug into power outlet.

- Select the desired speed setting, the appliance will start grinding. During grinding, you can press down the Pulse button without releasing it if want to accelerate the process of grinding.
- Turn the Speed Selector to “0” Position once the coffee has been ground to your desired result.
- Disconnect from power supply once finished. Disassemble the grinder attachment from the unit, keep the grinding bowl downward and turn it anticlockwise (see fig.5), then empty the bowl and serve.
- Do not run the appliance for more than 10s per time, and only wait until the unit is cooled to room temperature before performing next operation cycle.

CHOPPING OPERATION

- Place the prepared chopping food into the bowl. The food must be cut into small size firstly (such as 2cm*2cm*6cm for beef).
- **NOTE: The appliance allows you to chop the maximum quantity of beef or meat is 150g. Select the highest speed and operate for 60s.**
- For best circulation of food that are to be blended with some liquid, pour the liquid into the jar first, then add solids.
- Some of the tasks that cannot be performed efficiently with a blender are: beating egg whites, whipping cream, mashing potatoes, grinding meat, mixing dough, extracting juice from fruit and vegetable
- The following items should never be placed in the unit as they may cause damage: bones, large pieces of solid, frozen food, or tough foods such as turnips.
- To crush ice, Not more than 180g ice cubes.

CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

- Before cleaning, unplug the blender.

- Always wash immediately after use for easier cleaning. Don't let food dry on the jar assembly as this will make cleaning difficult.
- Pour a little warm soapy water into the jar and turn the knob to P position for a few seconds. And then empty the jar.
- Dismantle all detachable parts. Lift the jar assembly off the motor unit, To detach the blade assembly by turning it clockwise from the jar base bottom, and remove the seal ring 2 and blade assembly (see fig.8). In addition, detach the jar cover seal ring 1 from the jar cover.
- Rinse the measure cup, lid, seal ring 1, jar, seal ring 2 and blade assembly by hands or in a dishwasher and then dry. They are dishwasher safe components, but the temperature setting shall not exceed 70 C .
- Brush the blade clean using warm soapy water, then rinse thoroughly under the tap. Don't touch the sharp blades, handle carefully. Leave to dry upside down away from children.
- Wipe the motor unit with a damp cloth and dry thoroughly. Remove the stubborn spots by rubbing with non-abrasive cleaner. If liquids spill into the motor unit; first unplug the unit, then wipe with a damp cloth and dry thoroughly.

- CAUTION

- Do not immerse the motor unit in liquid to prevent the risk of electric shock.
- Do not use rough scouring pads or cleansers on parts or finish.

ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.





decakila



decakila



decakila

Made in China Jiangsu China. 2021.D02

www.decakila.com Global Links Technology Co. Pte. Ltd.