


decakila

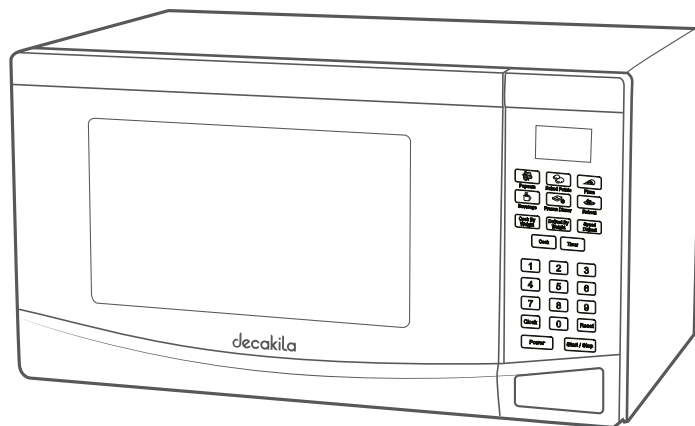

KUMC004W
MICROWAVE OVEN



CONTENTS

IMPORTANT SAFEGUARDS	01
INSTALLATION	01
CLEANING	01
TIPS FOR CLEANING	03
PRODUCT INSTRUCTION	03
OPERATION OF CONTROL PANEL	03
UTENSILS GUIDELINE	03
COOKING TIPS	04
MAINTENANCE	

IMPORTANT SAFEGUARDS

The following basic precautions should always be followed when using electrical appliance:

1. Read all instructions before using.
2. Make sure the voltage in your living area corresponding to the one shown on the rating label of the appliance. And the wall socket is properly grounded.
3. To reduce the risk of fire in the oven cavity:
 - a. Do not overcook the food.
 - b. Remove wire twist -ties from paper or plastic bags before placing bags in the oven.
 - c. Do not heat oil or fat for deep drying as the temperature of oil cannot be controlled.
 - d. After use wipe the waveguide cover with a damp cloth, followed by dry cloth to remove any food splashes and grease. Built -up grease may overheat and begin to cause smoke or catch fire.
 - e. If materials inside the oven should smoke or ignite, keep oven door closed, turn oven off and disconnect the power supply.
 - f. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
4. To reduce the risk of explosion and sudden boiling:
 - a. **WARNING:** Liquids and other foods must not be heated in sealed container since they are liable to explode; Baby bottles fitted with a screw cap or teat are considered to be sealed containers.
 - b. Use the wide -mouthed container to cook liquid, and the cooked liquid should not be removed out immediately. Several moments should be waited before removing. In order to avoid possible hazards caused by delayed eruptive boiling of liquids.
 - c. Potatoes, sausage and chestnut should be peeled or pierced before cooking. Eggs in their shell, whole hard -boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
 - d. The contents of feeding bottles and baby food jars are to be stirred or shaken and the temperature is to be checked before consumption, in order to avoid burns.
5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a qualified technician in order to avoid a shock hazard.
6. After cooking, the container is very hot. Using gloves to take out the food and avoid steam burns by directing steam away from the face and hands.

7. Slowly lift the furthest edge of dishes cover and microwave plastic wrap and carefully open popcorn and oven cooking bags away from the face.
8. To prevent the turntable from breaking:
 - a. Let the turntable cool down before cleaning.
 - b. Do not place hot foods or utensils on the cold turntable.
 - c. Do not place frozen foods or utensils on the hot turntable.
9. Make sure the utensils do not touch the interior walls during cooking.
10. Only use utensils that are suitable for use in microwave ovens.
11. Do not store food or any other things inside the oven.
12. Do not operate the oven without any liquid or food inside the oven. This would do damage the oven.
13. When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
14. Any accessories not recommended by the manufacturer may cause injuries to persons.
15. Do not use outdoors.
16. Save these instructions.
17. **WARNING:** If the door or door seals are damaged or the oven is malfunctioned, the oven must not be operated until it has been repaired by a competent person;
18. **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy;
19. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames;
20. Microwave heating of beverages can result in delayed eruptive boiling; therefore care must be taken when handling the container;
21. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
22. The lamp of microwave oven is not intended for other purposes.
23. The appliances are not intended to be operated by means of an external timer or separate remote -control system.
24. This appliance is intended to be used in household and similar applications, such as:

- Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential environments;
 - Bed and breakfast type environments.
25. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
 26. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
 27. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 28. Children should be supervised to ensure that they do not play with the appliance.
 29. A steam cleaner is not to be used.
 30. The door or the outer surface may get hot when the appliance is operating.
 31. **WARNING:** Accessible parts may become hot during use. Young children should be kept away.
 32. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
 33. The surfaces are liable to get hot during use.

**Caution: HOT SURFACE
HOUSEHOLD USE ONLY**



INSTALLATION

1. Take out all the packing. If there is a safe film over the oven, tear it off before use. Check carefully for damage. If any, immediately notify dealer or send to the manufacturer's service center.
2. Microwave ovens must be placed under dry and non-corrosiveness environments, kept away from heat and humidity, such as gas burner or water tank.
3. To ensure sufficient ventilation, the distance of the back of microwave to the wall should be at least 10 cm, the side to the wall should be at least 5 cm, the free distance above the top surface at least 20 cm. the distance of the microwave to the ground should be at least 85 cm.
4. The position of the oven shall be such that it is far from the TV, Radio or antenna as picture disturbance. The distance should be more than 5m.
5. The appliance must be positioned so that the plug is accessible, and must ensure a good grounding in case leakage, ground loop can be formed to avoid electric shock.
6. The microwave oven must be operated with the door closed.
7. The microwave oven must not be placed in a cabinet. The microwave oven is intended to be used freestanding.

8. As there is manufacturing residue or oil remained on the oven cavity or heat element, it usually would smell the odor, even a slight smoke, It is normal case and would not occur after several times use, keep the door or window open to ensure good ventilation. So it is strongly recommended to place a cup of water in the turntable, setting at high power and operate for several times.

CLEANING

MICROWAVE OVEN CARE



The oven should be cleaned regularly and any food deposits removed.

 **WARNING**

1. Remove the power cord from the wall outlet before cleaning. Don't immerse the appliance in water or other fluids when cleaning.
2. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation
3. Never use hard detergent, gasoline, abrasive powder or metal brush to clean any part of the appliance
4. Do not remove the waveguide cover
5. When the microwave oven has been used for a long time, there may be some strange odors exist in oven, Following 3 methods can get rid of them:
 - a. Place several lemon slices in a cup, then heat with high Micro Power for 2-3 min.
 - b. Place a cup of red tea in oven, then heat with high micro power.
 - c. Put some orange peel into oven, and then heat them with high Micro Power for 1 minute.
6. **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use;

TIPS FOR CLEANING

Details for cleaning door seals, cavity and adjacent parts:

Exterior:

Wipe the enclosure with a dampened soft cloth

Door:

Using a dampened soft cloth, wipe clean the door and window

Wipe the door seals and adjacent parts to remove any spill or spatter

Wipe the control panel with a slightly dampened soft cloth

Interior walls:

Wipe clean the cavity with a dampened soft cloth


Wipe clean the waveguide cover to remove any food splashed

Turntable/ Rotation ring/ Rotation axis:

Wash with mild soap water

Rinse with clean water and allow drying thoroughly

PRODUCT INSTRUCTION

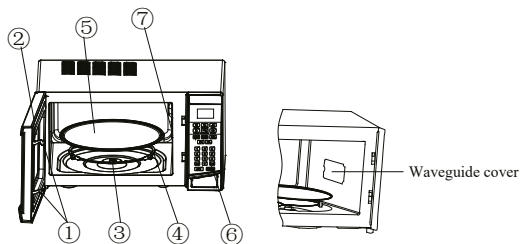

1) Door lock

Microwave oven door must be properly closed in order for it to operate

2) Viewing window

Allow user to see the cooking status

3) Rotating axis

The glass turntable sits on the axis; the motor underneath it drives the turntable to rotate

4) Rotating ring

The glass turntable sits on its wheels; it supports the turntable and helps it to balance when rotating

5) Turntable

The food sits on the turntable, its rotation during operation helps to cook food evenly

WARNING

- Place the rotating ring first
- Fit the turntable onto the rotating axis and make sure that it is geared in properly

6) Control panel

See below in details (the control panel is subject to change without prior notice)

7) Waveguide cover

It is inside the microwave oven, next to the wall of control panel.

WARNING

Never remove the waveguide cover

OPERATION OF CONTROL PANEL

1. BEEPS DURING OVEN SETTING

ONE BEEP: Oven accepts the entry.

TWO BEEPS: Oven does not accept the entry, check and try again.

2. NUMBER PADS (0-9)

Number pads are used for selecting the food kind and cooking time.

3. RESET


Clear all previous settings.

4. START/STOP

Touch to start or stop cooking.

5. COOK

Use for multi-stage cooking. It enable cooking at multiple power and time settings automatically.

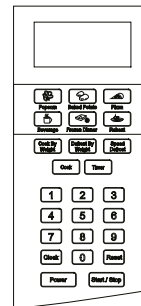

6. SETTING THE CLOCK

1) On standby state, touch Clock key.

Note: on the state of setting clock the step can be omitted.

2) Use the number keys to enter the correct time. You must touch at least three numbers to set the clock (one for hour and two for minutes).

3) Touch Clock key again. The system will enter clock state.

Note: This is a 24 hour clock. When the oven is first plugged in or when power resumes after a power interruption, the display will show ENTER, CLOCK, TIME, if you prefer to not have the clock displayed, touch Reset key. You can check the clock time while cooking is in progress by touching the Clock key.

Example: to set 12:30		
	Steps	Display
1	After power-up, the colon flashes, then press Reset button once or wait for 30sec	
2	Press the button of “ 1”,“ 2”,“ 3”,“ 0”	12:30
3	Press the Clock button to confirm it	

7. SETTING THE OVEN TIMER

1) Touch Timer key.

2) Enter the amount of time you want to count down by touching the number keys. Digit time is in minutes and seconds and set left

to right. Set one digit (a 5 for 5 seconds) or up to four digits (2405 for 24 minutes, 5 seconds). The maximum number can be entered is 99min, 99sec.

3) Touch Start/Stop key confirm it

 **CAUTION**

- a. Time countdown can be seen in display for 3 seconds before clock or cooking time is returned to display.
- b. Touch Timer and then touch Reset to cancel TIMER during timing process.

8. SETTING COOKING TIME AND POWER LEVEL

A. One-stage cooking

1) On standby state or clock state, use the number keys to set a cooking time. You can set a cooking time from one second to 99 minutes and 99 seconds. If you are setting a time greater than one minute, you must enter numbers for both minutes and seconds. For example: to set 20 minutes, enter 2, 0, 0, 0.

2) Press Power and number button to select the desired the power level.

3) Touch Start/Stop to start cooking. USE THESE SINGLE DIGIT TO REPRESENT POWER LEVELS.

Number key	% of power	Microwave instruction
Tap POWER once	100%	P100 and P90 --- High power, 100% and 90% microwave power. Applicable for quick and thorough cooking
9	90%	
8	80%	P100 and P90 --- High power, 100% and 90% microwave power. Applicable for quick and thorough cooking
7	70%	

6	60%	P60 and P50 --- Medium power, 60% and 50% microwave power. Applicable for steaming food
5	50%	
4	40%	P40 and P30 --- Medium Low power, 40% and 30% microwave power. Applicable for defrosting food
3	30%	
2	20%	P20 and P10 --- Low power, 20% and 10% microwave power. Applicable for keeping warm
1	10%	

Example: To Cook At P80 For 10 Minutes.

	Steps	Display
1	After power-up, the colon flashes, then press Reset button once or wait for 30sec	
2	Set cooking time by pressing the number button of “1”“0”“0”“0”	10:00
3	Touch Power once then select the desired microwave power by pressing number“ 8”	80P
4	Press Start/Stop button to start, and LED will count down to show left time	

 **CAUTION**

- a. The max time which can be set is 99'99"
- b. Never operate the oven empty.
- c. If you turn the food during operation, press the Start/Stop button once and the preset cooking procedure will continue.
- d. If you intend to remove the food before the preset time, you must press Reset button once to clear the preset procedure to avoid unintended operation of next time use.
- e. At the maximum microwave power, the oven will automatically lower the power after a certain time of cooking to lengthen the service life.

8. TWO-STAGE COOKING

To obtain best cooking result, some recipes call for different cook mode and time. You may program your personalized menu as follow:

Example: You Want To Cook Food With 100p Microwave For 3 Minutes Then 20p For 9 Minutes.		
	Steps	Display
1	100P microwave for 3min	
1.1	After power-up, the colon flashes, then press Reset once or wait for 30sec	:
1.2	Press “ 3” ,“0”,”0”to set cooking time	3:00
1.3	Touch Power once then select the desired microwave power by pressing number “ 1” “ 0”	100P

1.4	Press Cook button once to confirm	
2	20P for 9min	
2.2	Press “9”“0”“0” to set cooking time	9:00
2.3	Touch Power once then select the desired microwave power by pressing number “ 2”	20P
3	Start cooking by pressing Start/Stop button	

9. SETTING “SPEED DEFROST”

1) On standby state or clock state, touch Speed Defrost key.

2) Enter desired defrosting time by touching correct number keys. Digital timer sets minutes and seconds from left to right so a single digit can be set (5 for 5 seconds) or up to 4 digits (2405 for 24 minutes 5 seconds).

3) Touch Start/Stop key.

Example: To speed defrost 0.2kg poultry With 2min50sec		
	Steps	Display
1	After power-up, the colon flashes, then press Reset button once or wait for 30sec	:

2	Touch Speed Defrost key	:
3	Set defrost time by pressing the number button of “2”, “5”, “0”	2:50
4	Start cooking by pressing Start/Stop, and LED will count down to show running time	

 **CAUTION**

- a. After time has elapsed four beeps sound and END appears in display. Touch Reset key or open the door to clear END before starting another cooking function.
- b. After setting SPEED DEFROST, oven can be programmed to automatically switch to one or two-Stage cooking.
 - For speed defrost and one stage cooking, follow steps above. Before touching Start/Stop key, touch Cook key, and enter time and power level. Then touch Start/Stop key.
 - For speed defrost and two stage cooking, follow steps above. Before touching Start/Stop key, enter two-stage cooking programs.

10. SETTING “COOK BY WEIGHT”

The oven has default cooking menu for simple operation. You set the type and weight of food, and the oven automatically sets the cooking time and power level.

“Cook By Weight” Code Descriptions		
Code	Type	Weight Range

1		0.1, 0.15, 0.2.....2.9, 2.95, 3.0 kg
2		0.1, 0.15, 0.2.....2.9, 2.95, 3.0 kg
3		0.1, 0.15, 0.2.....1.9, 1.95, 2.0 kg

Example: To cook 1.2kg beef		
	Steps	Display
1	After power-up, the colon flashes, then press Reset button once or wait for 30sec	:
2	Touch Cook By Weight button once	
3	Select the food kind by entering code“1”	0.
4	Set food weight by pressing number”1” “2” “0”	1.20
5	The oven start cooking and time will appear automatically.	34:24
During cooking two beeps will be sounded, it reminds you to turn over the food, after finishing turning over food, press Start/Stop to resume cooking		

 CAUTION

- a. Weight must be in Kg.
- b. After total cooking time, 4 beeps sound and END appears in display. Touch Reset or open oven door to clear END before starting another cooking function
- c. Please wait for few minutes before take food out

11. SETTING “DEFROST BY WEIGHT”

You set the type and weight of food, and the oven automatically sets the defrosting time.

Example: To defrost 1.15Kg beef		
	Steps	Display
1	After power-up, the colon flashes, then press Reset button once or wait for 30sec	:
2	Press Defrost By weight button	0.
3	Set defrosting weight by pressing the number button of “1”, “1”, “5”	1.15
4	Start cooking by pressing Start/Stop and LED will count down to show running time.	23:00
During cooking, two beeps will be sound, it reminds you to turn over the food, after finishing turning over food, press Start/Stop to resume cooking		

 **CAUTION**

- a. It is necessary to turn over the food during operation to obtain uniform effect.
- b. Usually defrosting will need longer time than that of cooking the food.
- c. If the food can be cut by knife, the defrosting process can be considered completed.
- d. Microwave penetrates around 4cm into most food
- e. Defrosted food should be consumed as soon as possible, it is not advised to put back to fridge and freeze again
- f. weight must be in kg, you can set the food weight from 0.1, 0.15, 0.2.....2.9, 2.95, 3.0 Kg.

12. ABOUT “QUICK COOK” SETTINGS

“QUICK COOK” allow you to cook or reheat food automatically without entering power level or time. When setting “quick cook”, check visual guide on key for correct setting. These include the “POPCORN”, “BAKED POTATO”, “PIZZA”, “BEVERAGE”, “FROZEN DINNER”, “REHEAT”.

※ **setting “Popcorn”**

- 1) In standby state or clock state, touch Popcorn key which automatically sets the cooking time of microwave popcorn.
- 2) Touch Start/Stop key.

 **CAUTION**

To reset POPCORN time: tap Start/Stop key twice. ENTER TIME appears in display. Touch number keys to enter minutes and seconds. Touch Start/Stop key. This new cooking time will remain whenever you touch the Popcorn key until you reset it.

※ **Setting “Baked potato”**

For potatoes (0.11 to 0.17 kg per entries):

- 1) In standby state or clock state, touch Baked Potato key once.
- 2) Enter number of potatoes by touching number keys from 1 to 4.
- 3) Touch Start/Stop key.

※ **Setting “Pizza”**

Reheating a slice (or two thin ones) of leftover pizza:

- 1) In standby state or clock state, touch Pizza key once.
- 2) Touch Start/Stop key.

※ **Setting “Beverage”**

For coffee cups (0.14 to 0.2kg per share):

- 1) On standby state or clock state, touch Beverage key once.
- 2) Enter number of cups by touching number pads from 1 to 4.
- 3) Touch Start/Stop key.

※ **Setting “Frozen dinner”**

Microwaving one or two small (0.2 to 0.25kg per share) frozen dinner:

- 1) In standby state or clock state, touch Frozen Dinner key once.
- 2) Touch 1 or 2 key to select 1 entree or 2 entrees.
- 3) Touch Start/Stop key.

※ **Setting “Reheat”**

- 1) On standby state or clock state, touch Reheat key.
- 2) Touch Start/Stop key.

 **CAUTION**

This setting lets you reheat a dinner plate of chilled leftovers with good results.

13. SETTING CHILD LOCK

Use this feature to lock the control panel when you are cleaning or so that children can not use the oven unsupervised. All the buttons are rendered inoperable in this mode

Set lock--hold Reset button about 3 seconds.

Cancel lock--hold Reset button about 3 seconds.

UTENSILS GUIDELINE

It is strongly recommended to use the containers which are suitable and safe for microwave cooking. Generally speaking, the containers which are made of heat-resistant ceramic, glass or plastic are suitable for microwave cooking. Never use the metal containers for microwave cooking and combination cooking as spark is likely to occur. You can take the reference of below table.

Material of container	Microwave	Notes
Heat-resistant ceramic	Yes	Never use the ceramics which are decorated with metal rim or glazed
Heat-resistant plastic	Yes	Can not be used for long time microwave cooking
Heat-resistant glass	Yes	
Plastic film	Yes	It should not be used when cooking meat or chops as the over-temperature may do damage to the film
Grill rack	No	
Metal container	No	It should not be used in microwave oven .Microwave can not penetrate through metal.
lacquer	No	Poor heat-resistant. Can not be used for High-temperature cooking
Bamboo wood and paper	No	Poor heat-resistant. Can not be used for High-temperature cooking

COOKING TIPS

The following factors may affect the cooking result:

FOOD ARRANGEMENT

Place thicker areas towards outside of dish, the thinner part towards the centre and spread it evenly. Do not overlap if possible.

COOKING TIME LENGTH

Start cooking with a short time setting, evaluate it after it times out and extend it according to the actual need. Over cooking may result in smoke and burns.

COOKING FOOD EVENLY

Food such as chicken, hamburger or steak should be turned once during cooking.

Depending on the type of food, if applicable, stir it from outside to centre of dish once or twice during cooking

ALLOW STANDING TIME

After cooking times out, leave the food in the oven for an adequate length of time, this allows it to complete its cooking cycle and cooling it down in a gradual manner

WHETHER THE FOOD IS DONE

Color and hardness of food help to determine if it is done, these include:

- Steam coming out from all parts of food, not just the edge
- Joints of poultry can be moved easily
- Pork or poultry shows no signs of blood
- Fish is opaque and can be sliced easily with a fork

BROWNING DISH

When using a browning dish or self-heating container, always place a heat-resistant insulator such as a porcelain plate under it to prevent damage to the turntable and rotating ring.

MICROWAVE SAFE PLASTIC WRAP

When cooking food with high fat content, do not allow the plastic wrap come into contact with food as it may melt

Microwave safe plastic cookware

Some microwave safe plastic cookware might not be suitable for cooking foods with high fat and sugar content. Also, the preheating time specified in the dish instruction manual must not be exceeded

MAINTENANCE

SERVICING

Please check the following before calling for services.

1. Place one cup of water (approx.150ml) in a glass measure in the oven and close the door securely. Oven lamp should go off if the door is closed properly. Let the oven work for 1 min.

2. Does the oven lamp light?

3. Does the cooling fan work?

(Put your hand over the rear ventilation openings.)

4. Does the turntable rotate?

(The turntable can rotate clockwise or counter clockwise. This is quite normal.)

5. Is the water inside the oven hot?

If “NO” is the answer to any of the above questions, please check your wall socket and the fuse in your meter box.

If both the wall socket and the fuse are functioning properly, CONTACT YOUR NEAREST SERVICE CENTER APPROVED.

SERVICING SAFEGUARDS

Caution: MICROWAVE RADIATION

1. The high voltage capacitor remains charge after disconnection; short the negative terminal of H. V capacitor to the oven chassis (use a screwdriver) to discharge before touching.

2. During servicing below listed parts are liable to be removed and give access to potentials above250V to earth.

- Magnetron

- High voltage transformer

- High voltage capacitor
- High voltage diode
- High voltage fuse

3. The following conditions may cause undue microwave exposure during servicing.

Improper fitting of magnetron;

Improper matching of door interlock, door hinge and door;

Improper fitting of switch support;

Door, door seal or enclosure has been damaged.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



decakila



decakila



decakila

Made in China Jiangsu China. 2021.D02

www.decakila.com Global Links Technology Co. Pte. Ltd.