 


decakila

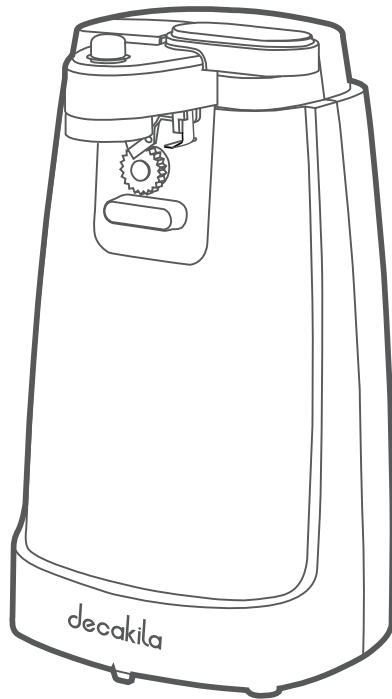

KUTT001W
CAN OPENER



CONTENTS

IMPORTANT SAFEGUARDS	01
NOTES ON THE CORD PLUG	02
KNOW YOUR CAN OPENER	02
USING YOUR CAN OPENER	02
CAN OPENING TIPS	03
TO SHARPEN KNIFE	04
KNIFE SHARPENING TIPS	04
CLEANING AND MAINTENANC	04

IMPORTANT SAFEGUARDS


When using electrical appliances, basic precautions should always be followed, including the following:

- Read all instructions before using.
- To protect against electric shock, do not immerse appliance in water or other liquid.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Close supervision is necessary when appliance is used by or near children.
- Avoid contacting with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or if it has been dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electrical shock or injury.
- Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
- Do not use outdoors or for commercial purposes.
- Do not open pressurized cans.
- Do not use this appliance for other than intended use.
- Do not open cans of flammable liquids such as lighter fluids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Save these instructions.

NOTES ON THE CORD PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

KNOW YOUR CAN OPENER

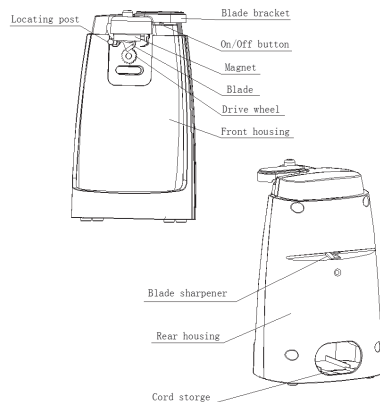

USING YOUR CAN OPENER

Remove the unit and blade bracket from the package before the first time use.

1. To attach blade bracket to the can opener, make the key tabs align with the key slots, push it frontward to fix it (see Fig. 1), then press down the blade bracket to ensure it has been assembled in place (see Fig. 2). Then lift the blade bracket.
2. Connect to the power source.

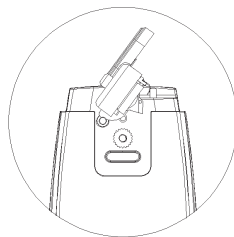


Fig. 1

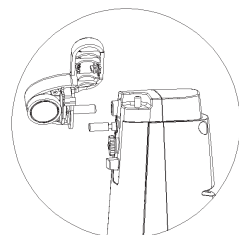


Fig. 2

3. Tip the can so that its rim is under the locating post, the lid of the can will be sucked by magnet, then press down the blade bracket while the On/Off button to the "On" position. Make sure the blade is inside the rim (see Fig. 3). Drive wheel will actuate the can to rotate and the blade will cut the can

open. Because of the hands-free feature, it is not necessary to hold blade bracket down or support the can during cutting.

NOTE: The can required to be opened shall be 50mm to 100mm in diameter and 160mm max in height. In the case total weight of can is over 510g, it is necessary to press and hold the can opener to avoid overturning.

4. When the can is opened, the can opener will stop automatically. To remove the can, hold it with one hand and raise the blade bracket with the other one.

CAUTION: Avoid contacting with the cut edges of the can or lids as they are sharp, carefully remove the lid from the magnet and discard.

Warning: The cans opened with this Can Opener must be less than 0.6kg in weight.

NOTE: The time of opening cans continuously do not exceed 1 minute.

5. The excess cord can be stuffed into cord storage at the back of the unit, and feed the cord through the notch for convenient storage.

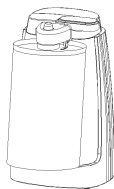


Fig. 3

CAN OPENING TIPS

- This can opener should not be used to open cans designed to open by another method, such as a pull tab, peel-off foil seal, or rolling key. This can opener will not be used to open rimless cans or cans with angled corners.
- If there is a dent in the rim of a can, open the other end or start the cutting action just beyond the dent. Cans with heavy seams, uneven rims or odd shapes may cause the can opener to stall. If this occurs, turn the can slightly by hand to aid the cutting action.
- Frozen juices or foods in cardboard cans should be opened as soon as they are removed from the freezer. Aluminum lids will not be stuck to the magnet.

TO SHARPEN KNIFE

Unplug the power supply firstly, and then place the knife which is intended to be sharpened in the slot of knife sharpener at the back of the unit. For best results, sharpen the entire length carefully to pull the knife through the slot back and forth (see Fig. 4), until desired sharpness achieved. After sharpening, wash and dry the knife. The sharpener also can be used for sharpening stationery scissor (see Fig. 5).

NOTE: Be cautious with knife after sharpening.

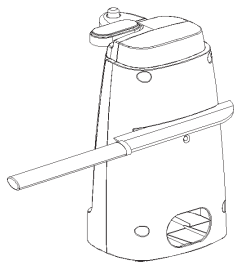


Fig. 4

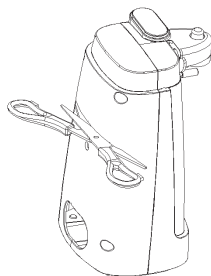


Fig. 5

KNIFE SHARPENING TIPS

- Clean and dry knives before sharpening.
- Do not attempt to sharpen serrated blades, as this will smooth their edges.
- Do not attempt to sharpen scissors.

CLEANING AND MAINTENANC

- Before cleaning any part of the can opener, unplug the cord.
- To remove the blade bracket for easy cleaning, lift the blade bracket up and pull it out. The blade assembly can be cleaned with a damp cloth, then wiped with a sponge and dried thoroughly. It is not dishwasher-safe component. Reverse the procedure to replace the blade bracket.
- Before replacing the blade bracket, wipe the can opener housing, and area around the drive wheel with a slightly damp cloth or sponge. To remove stubborn spots, wipe surfaces with nylon or mesh pad and sudsy water, following with a clean, damp cloth. Do not use abrasive cleaners on any part of the can opener as they can damage the finish.
- Do not immerse main part of can opener into water as this would give rise to electric shock.



decakila

 DECAKILA  DECAKILA

MADE IN CHINA Suzhou China 2021.D01

WWW.DECAKILA.COM DECAKILA CO.,LIMITED