



Benelli

TNT25 USER'S MANUAL

CONTENTS

CONTENTS	2
Special Reminding	5
Preface	6
Safety Notes	7
● Safety Driving Rules	7
● Protection Clothes	9
Serial Number	10
Location of Parts	11
● Meter & Indicator	13
Primary Parts	15
● Key Switch	15
● Left Handle	16
● Right Handle	17
● Fuel Tank	18
● Rear Shock Absorber	19
● Rear Brake Pedal	20



Benelli

PURE PASSION SINCE 1911



CONTENTS

● Shift Pedal	20
● Tool Bag	21
Notice of Use of Fuel and Engine Oil	21
Inspection Before Driving	22
● How to start the engine	24
● Smooth launching	25
Inspection& Maintenance	27
● Maintenance Schedule	27
● Oil Level & Oil Change	30
● Spark Plug	31
● Catalytic Converter.....	31
● Battery	32
● Throttle Cable Adjustment	35
● Clutch Adjustment	36
● Chain Adjustment	37



CONTENTS

● Brake	38
● Maintenance of Air Filter.....	41
● Bulb Replacement	41
● Fuse Replacement	42
● Lubrication Points	43
● Adjustment of Valve Clearance	43
● Tire	44
Storage Guideline	45
Specification & Technical Parameter	47



Benelli

PURE PASSION SINCE 1911



SPECIAL REMINDING

Warning: The vehicle must be equipped with the qualified fuse for a safe driving, any other unqualified specifications of fuses are not allowed to use, especially the electric wires which would result severe damages to other parts, even fire accidents.

Location of fuse: beside the battery;

Fuse specification: 40A for main power fuse.

Burnt fuse is usually caused by the internal circuit fault of the vehicle. Simply estimate the whole situation of the vehicle before changing the spare fuse and if the fuse still burn after changing, send the vehicle to the maintenance service center as soon as possible. It can only be driven after the fault is resolved.

Notes:

Before changing the fuse, switch the key to "  " in case of short circuit;

* Make sure the contact point of fuse is not broken while changing the fuse, which would result bad contact, parts damage, and even fire.

No reconfiguration: Do not reconfigure the vehicle or change the places of the parts and accessories at will, which would have a strong impact on the stability and safety of the vehicle, probably operation faults. All the reconfigurations of the electric system, emission control system, canister and any other systems or parts are against the driving safety and other relative traffic administration regulations. And all the quality problems and consequences resulted by the user's reconfiguration or changing of the parts without authorizations would be taken by the user himself. The user shall obey the specific regulations and rules of the traffic administrative department.



Notes

Running in of Vehicle

The very beginning 1,000km driving-way of the vehicle is the most important part of its service life.

If the running in is carried normally, a longest service life can be assured and the performances of the new vehicle can be fully fulfilled.

PREFACE

Thanks for choosing Benelli vehicle, which is combined with international advanced technologies and would bring you happy and safe driving experience.

Please fully understand the rules and requirements stated in this manual.

This instruction manual covers the maintenance procedures, which would ensure the maximum performances and highest durability of your vehicle if appropriately operated.


Our company is equipped with professional technical maintenance personnel and department, which is able to provide you with high quality technical maintenance services. We make great efforts to develop the products quality and performances so that the appearances and structures can be improved and may have difference than the data in this manual. The picture information here is only for reference, subject to our products.



Benelli

PURE PASSION SINCE 1911





Please carefully read this manual and stand by the key rules. The words of "Alarm", "Caution" and "Note" are used here to indicate the importance degrees, please make sure that you have fully understand the meanings as following:

Alarm----- This is for the important procedures that may endanger safety of the driver and would bring injuries if ignored.

Caution----- This is for the relative operation specifications of the vehicle in case of damages to the vehicle.

Note----- This is for the maintenance

This instruction manual is a daily care issues document of this vehicle, which should be together transferred to a second owner if this vehicle is to be transferred.

SAFETY NOTES

Alarm:

For the safety purpose, the driver should be specifically careful with understanding on the safety notes before driving.



1. Have a complete inspection before starting the engine so as to prevent possible accidents or damages of parts.
2. Many accidents happen due to inexperienced driver. Make sure the driver is qualified before driving the vehicle. Never give it to any people without a driving license.
3. Most of the crashes between cars and vehicles are caused by the car drivers' "not seeing" the vehicle drivers. In order to avoid accidents, the driver shall expose himself/herself by:
 - Wearing bright colored and reflective clothes;
 - Don't drive into the invisible corner of rear-view mirror of the other car drivers.
4. The driver shall obey the national and local laws and rules.
 - Speeding is one of the key reasons of the accidents. So keep the speed in the limit stated.
 - Use signals lights before turning or braking/accelerating to prevent accident.
5. In the driving, the driver should hold the handles and keep both feet on the pedals and the passenger should grab somewhere on the vehicle or the driver with feet on the passenger pedals.
6. Any reconfiguration or disassembly of the parts is illegal, which would affect the safety driving and maintenance.
7. The after-market accessories shall not affect the safety driving and operation performances of the vehicle. Overloading of the electrical systems would result dangers to the vehicle.
8. Do not operate the engine within confined space as the exhaust gas would cause damage to the body.



Benelli

PURE PASSION SINCE 1911





PROTECTION CLOTHES

1. Fatal accidents of vehicle drivers are mostly caused by head injuries. For the purpose of personal safety, the driver should wear a safety helmet, and also vehicle boots, gloves and protection clothes. The passenger shall also wear the same.
2. The exhaust pipe will be very hot during driving and the heat will last after turning off the engine. Never touch the muffler and wear those clothes that can totally cover the legs.
3. Don't wear those loose clothes that may interfere with the control levers, pedals or wheels.



Vehicle identification number (VIN) and the serial number are used for the registration of the vehicle, which can also make sure that the dealer would provide you better services involving accessories purchasing or other services.


Record the numbers for the possible use in the future.

Vehicle identification number (VIN) is printed on the right side of the head tube.


The engine number is printed on lower part of the right case of engine crank case

Please write down the numbers for your reference.

Engine Number:

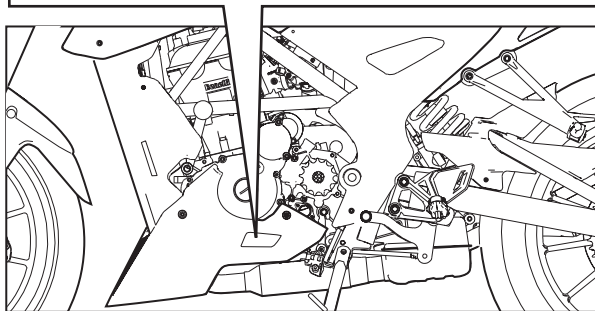

VIN:

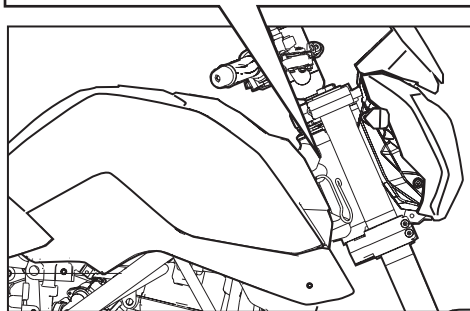



Benelli

PURE PASSION SINCE 1911




1. Clutch lever 2. Left handle switch
3. Meter 4. Key switch
5. Right handle switch
6. Front brake lever 7. Throttle grip

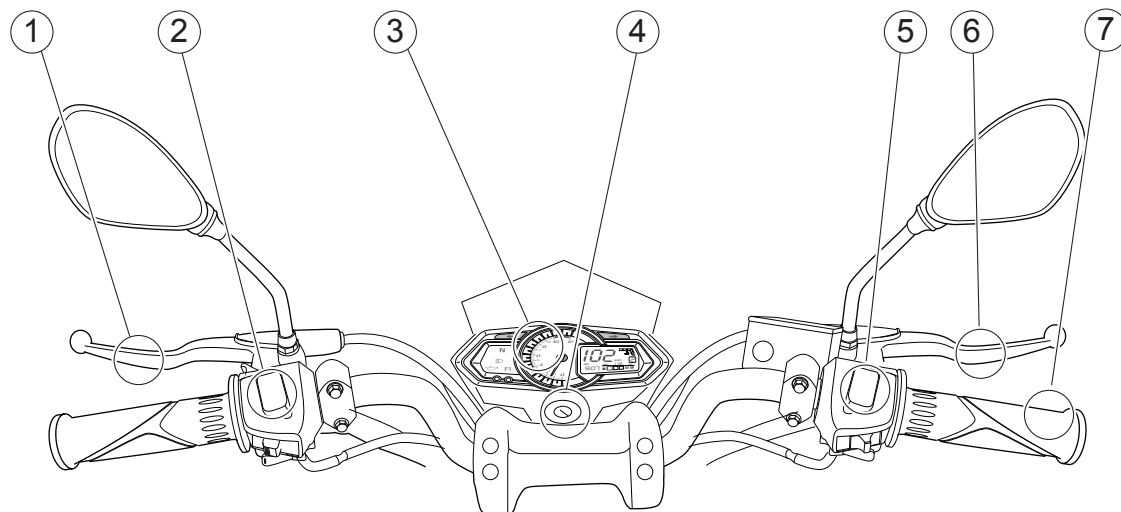

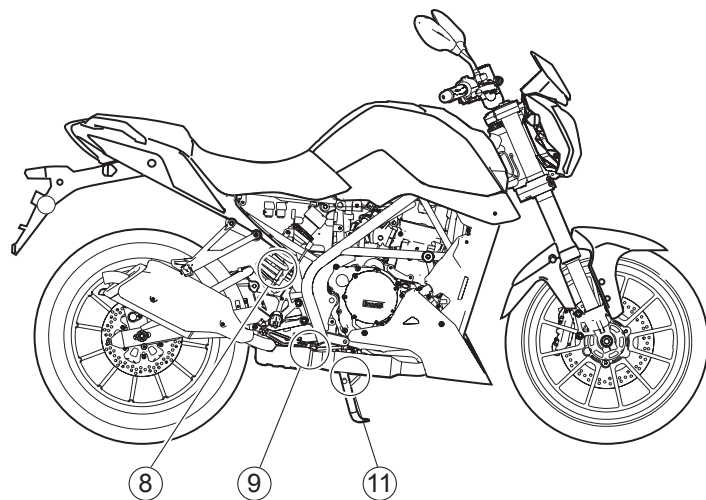


8. Rear shock absorber 9. Rear brake pedal
10. Shift pedal 11. Side stand 12. Tank

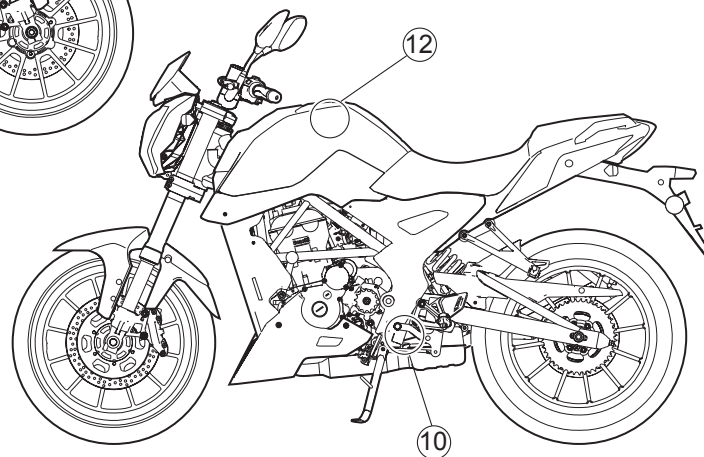


12



Benelli

PURE PASSION SINCE 1911 

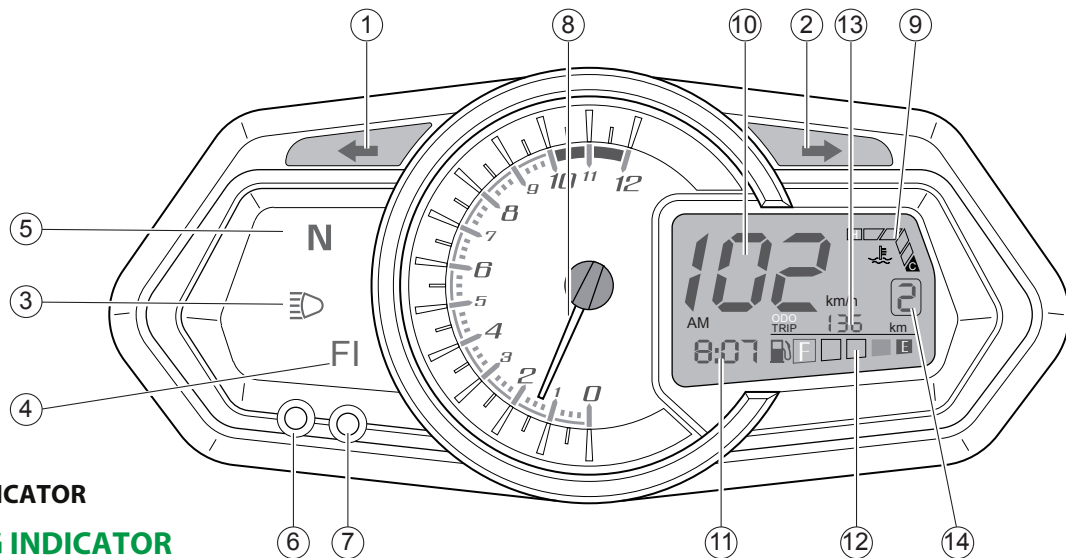

METER & INDICATOR

1. TURNING INDICATOR

The indication lamps would flash with the turning signals.

2. TURNING INDICATOR

The indication lamps would flash with the turning signals.

3. HIGH BEAM INDICATOR LAMP

When the high beam lamp of the headlamp turns on, the high beam indicator lamp would be on.



4. FI INDICATOR

It flashes when EFI system trouble happens and it shows up when performing self-diagnosis.

5. NEUTRAL INDICATOR LAMP

When the transmission is in the neutral, the green indicator lamp would be on.

6. FUNCTION BUTTON A

Short press the button to switch between trip and odometer functions on the meter. Long press the button A to reset the "Trip" mileage.

7. FUNCTION BUTTON B

Long press the button to enter time adjusting mode. Shortly press the button B to select a digit for clock adjustment. Within time adjusting mode, short press function button A to adjust the value of clock; If function button A is long pressed, the value of clock will swiftly change, to reach the desired value easily. If both Function A and Function B are short pressed simultaneously, displaying units of coolant temperature, mileage and speed can be switched between the metric and imperial units.

8. TACHOMETER

Tachometer indicates the revolution per minute of engine.

9. COOLANT TEMPERATURE GAUGE

This gauge shows the temperature of coolant.



Benelli

PURE PASSION SINCE 1911

10. SPEEDOMETER

Speedometer shows the running speed, hours/kilometers.

11. CLOCK

It shows the time.

12. FUEL LEVEL INDICATOR:

It indicates the fuel level in the fuel tank.

13. ODOMETER/ TRIP METER

Odometer records the total mileage driven, and Trip meter can be reset, which records the mileages driven in a specific period.


14. GEAR INDICATOR LAMP

Numbers on the meter indicate the gear positions of the vehicle including 1, 2, 3, 4, 5, and 6.

PRIMARY PARTS

KEY SWITCH

" " (Off) position: All the circuits are off.

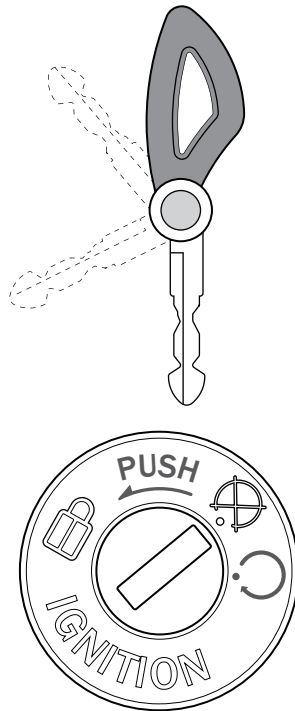

"○" (On) position: The circuits are on

"🔒" Position: turn left to the maximum, press the key to the position of "🔒". Take out the key. In this condition, the vehicle has been locked. If you want to unlock the vehicle, insert the key and turn clockwise.

LEFT HANDLE

1. CLUTCH LEVER


When starting the engine or shifting, pull the clutch lever to cut off driving on the rear wheels.

2. HIGH & LOW BEAM SWITCH

Turn the switch to "≡▷" position, the high beam of headlight turn on and the indicator lamp on the meter would also turn on; push the switch to the "≡▷" position, the low beam of headlight turns on.

3. DIRECTION INDICATOR LAMP SWITCH

Turn the switch to "◀" position, the left direction signal lamp flashes; turn the switch to "▶" position, the right direction signal lamp flashes. And the indicator lamps on the meter would turn on accordingly.

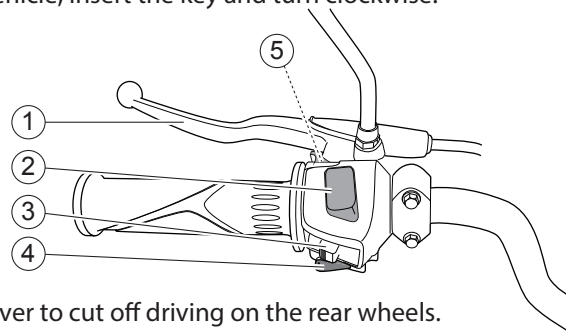

Benelli

PURE PASSION SINCE 1911

Alarm :

Turn on the direction signal lamps in time when changing the driveway or turning a direction and turn off the lamps.

4. HORN BUTTON


Press down on the button, to activate the horn.

5. PASSING SWITCH


When passing other vehicles, press this button so the high beams of the headlamp would flash to alarm the vehicles in front of you.

RIGHT HANDLE


6. ENGINE STOP SWITCH

When the switch is on "  " position and the power is on, the engine runs.

When the switch is on "  " position and the power is off, the engine will not run.

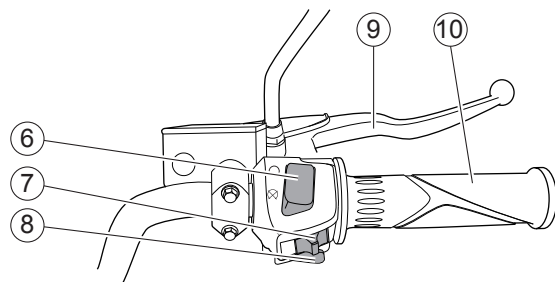

Note :

 Under normal conditions, this switch shall be on "Operate" () position. Use this switch under emergency situation, for example accident or key switch problems.

7. LIGHT SWITCH (IF EQUIPPED)

Turn switch to position of "☀" to light up the front lamp; Turn to "☾☾" to light up meter lamp, city light and tail lamp; turn to "●" for daytime driving.

8. ELECTRIC STARTER BUTTON

Pull the clutch lever or put in Neutral gear and press the button to run the electric motor and start the engine.

9. FRONT BRAKE LEVER

Pull the brake lever properly to use the front brake.


10. THROTTLE GRIP

Throttle grip is to control the speed of engine. Twist the grip toward yourself when revving up or turn it in opposite way to slow down.

FUEL TANK

To open fuel tank cap, please insert the key and turn it clockwise and open the cover. To close the fuel tank, please recap and then press it. Take away the key when you hear the sound of locking.

Recommended fuel:
REGULAR UNLEADED
GASOLINE ONLY
Fuel tank capacity:
17L

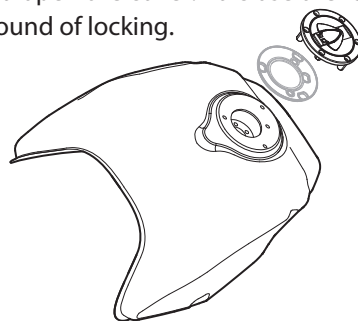


Benelli

PURE PASSION SINCE 1911

Alarm :

Do not over fill the fuel tank. Do not make fuel splashes on hot engine.

Please stop the engine and turn the ignition key to "  " (Off) position when you need to refuel.

Do not forget to lock the fuel tank cover after adding the fuel in case of evaporation to the air, which is waste of energy and would pollute the environment. Don't use fire when refueling.

REAR SHOCK ABSORBER


The vehicle is equipped with one rear shock absorber in the middle of bike.
Spring pre-load adjustment.

The rear shock absorber is equipped with adjustment ring nuts for preload adjustment. Please remove battery(right side cover) and battery bracket before adjustment of rear shock absorber.

Adjust the spring preload as follows:


To increase the preload setting of the spring, turn the adjustment ring nut with special wrench as illustrated A, to make the suspension stiffer.

Please rotate opposite direction to achieve a softer setting. After adjustment, please make sure the lock nut tightened to ensure safety of riding.

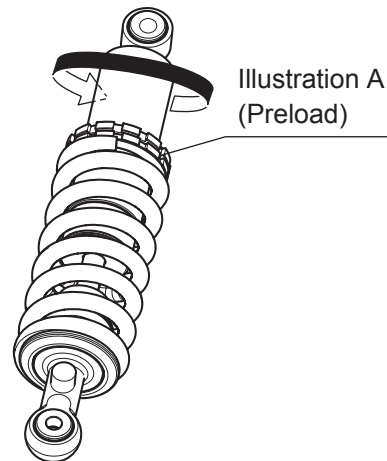



REAR BRAKE PEDAL

Step the rear brake pedal to slow down the rear wheel.
Brake light will turn on while rear brake is in use.

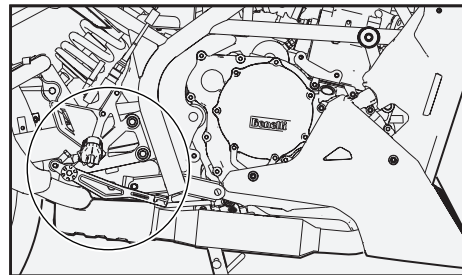

SHIFT PEDAL

This vehicle is equipped with
six-speed constant mesh gearbox.

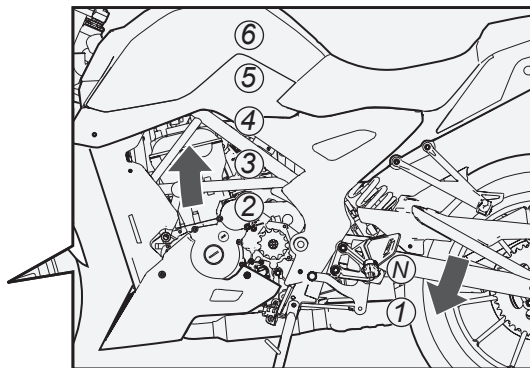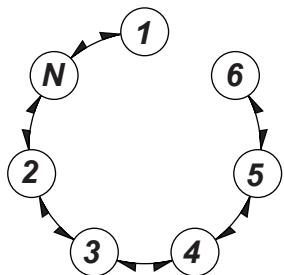

Caution:

When the transmission is on neutral position, the indicator lamp would turn on. Slowly release the clutch lever to make sure the transmission is on the neutral position.

Slow down the vehicle when turning to the low gear. Revving up the engine slightly to shift gears in more smooth way to avoid damaging gears.

TOOL BAG

The tool bag is under the seat cushion. By using tools in the bag, you can do basic repair and adjustment and change some parts when needed.

NOTICE OF USE OF FUEL AND ENGINE OIL

Fuel

It is a must to use lead free gasoline. Use gasoline contains octane number more than $90[(\text{Ron}+\text{Mon})/2]$.

Notice: Use lead free gasoline can extend the working life of spark plug.

Engine Oil

Please use four-stroke engine oil equal or higher than API SAE service grade SJ. The specification is 10W/50.



Benelli

PURE PASSION SINCE 1911

For driving a new vehicle in its first 1,000km way, the engine should not be over revved and all the gears shall not be over 80% of red zone engine rpm; don't operate the throttle under a fully open position; change the gears in time to keep the engine rpm in reasonable range. It is strongly suggested to use the vehicle very carefully during its running in period; also the rider has to be familiar to the performance.

Note: In the first 1000km of break in, you should examine the cleanliness of the engine oil frequently. Check the oil level of engine before driving.

INSPECTION BEFORE DRIVING

Please check on the following contents which are very important before driving,


Content	Comments
Handlebar	1) Stable 2) Turn smoothly 3) No sliding or loose
Braking	1) Right clearance of the lever and brake pedal 2) No sponge feeling



Tire	<ol style="list-style-type: none"> 1) Appropriate air pressure 2) Appropriate tire treads depth 3) No crack or cut
Fuel Level	Sufficient fuel for the driving
Light	Operate all the lamps – headlight, taillight, stoplight, instrument-panel light and city light.
Indicator Lamp	High beams indicator lamp, gear Indicator light, and turning indicator.
Horn & Brake Switch	Normal functioning
Engine Oil	Correct oil level
Throttle	<ol style="list-style-type: none"> 1) Appropriate free play in clutch lever 2) Smooth operation
Clutch	<ol style="list-style-type: none"> 1) Appropriate free play in throttle cable 2) Smooth operation, no stuck when returning to full close position
Driving Chain	<ol style="list-style-type: none"> 1) Appropriate tightness 2) Appropriate lubrication



Benelli

PURE PASSION SINCE 1911 

DRIVING TIPS

HOW TO START THE ENGINE

Insert the ignition key into the ignition lock and to "○". Step on the shift pedal to the neutral. The neutral indicator light lightens up if the gear box is in neutral position. Start the engine by pushing the start switch.

Caution:

Do not run the engine in high speed when you do not drive the vehicle, or it will become overheating and damage its inner parts.

Warning:

Do not start the engine indoor with bad ventilation or without ventilation. Do not leave a starting vehicle when no one else is around.



SMOOTH LAUNCHING

Hold the clutch lever, paused for an instant and step on the shift pedal to the first gear. Twist the throttle grip towards yourself and release the clutch lever slowly and smoothly at the same time. Then the vehicle will begin to move forward smoothly.

Warning:

Put the stands back to retracted position before driving.

Gear box usage

Gear box can ensure a smooth running of engine within normal engine rpm. Driver should choose a proper gear according to driving speed. It is dangerous to drive with clutch disengaged. Lower the gear when you slow down the vehicle to make engine run within normal rpm range.

Drive on slope way

When drive on uphill road, vehicle will slow down and seem to be lack of power. Switch to low gears so that engine can generate normal power. Shift the gear swiftly to prevent vehicle from losing speed.


Turn to low speed gears in order to brake when driving on downhill slope.

Don't over rev the engine.

Brake usage and stopping



Benelli

PURE PASSION SINCE 1911 

Twist the throttle grip in the direction away from yourself to close the throttle. Use front and rear brake evenly. Shift to low speed gear to slow down.

Before stopping the vehicle, hold the clutch and shift to neutral position. Check the neutral position indicator light to check whether it is in neutral position.

Notice:

Inexperienced drivers usually use rear brake only, which will accelerate abrasion of the brake and result in longer stopping distance.

Warning:

It is dangerous only to use either the front brake or rear brake which may causes the vehicle to skid or lose control. Be careful and use brakes properly when you drive on wet road or curved road.

The vehicle should be parked on firm and flat road. If you have to park the vehicle on a slope by the side stand, please shift to the first gear to prevent slipping. Shift to neutral position before starting the engine.

Turn the power key to the position "❌" to stop the engine.

Remove ignition key from the switch after locking for security reason.





MAINTENANCE SCHEDULE

Listed below is the scheduled maintenance time table. Inspection, examination, lubrication and specified maintenance should be taken according to the following chart the inspection and maintenance of the key components, are required to be made by professionals. Better to consult authorized dealers to do inspection and maintenance for safety's sake.

MAINTENANCE SCHEDULE:

I: Inspection, cleaning, adjustment, replacement

C: Cleaning R: Replacement

A: Adjustment L: Lubrication



Benelli

PURE PASSION SINCE 1911



NO		ITEM	ODOMETER READING					
			New 1000km	3 Months 4000km	6 Months 7000km	12 Months 10000km	15 Months 13000km	18 Months 16000km
1	※	Fuel system						
2	※	Throttle Operation						
3	※	Air Filter		Per 6000km: I or R				
4	※	Spark Plug			R		R	
5	※	Valve Clearance	Per 24000km: I or A					
6		Engine Oil		Per 6000km: R				
7	※	Oil Filter		Per 6000km: R				
8	※	Fuel Injection						
9		Drive Chain	Per 1 month or 1000km: I/L/A					
10		Battery						



NO	ITEM	ODOMETER READING					
		New 1000km	3 Months 4000km	6 Months 7000km	12 Months 10000km	15 Months 13000km	18 Months 16000km
11		Wear of Brake pads					
12		Brake System					
13	※	Braking Hydraulic Tube					
14	※		Replace every two years				
15	※	Braking Hydraulic Fluid					
16	※		Replace every two years				
17		Clutch					
18		Hanger Bracket					
19	※	Nut/Bolt/Fastener					
20	※	Wheel/Rim					
21	※	Steering Bearing					
22	※	Cooling System					



Benelli

PURE PASSION SINCE 1911

※ Be repaired by authorized dealers: with qualified tools and inspection materials provided by the owner; by persons with mechanical repair certification; required to be followed the maintenance manual for self-inspection. Examination and repair are suggested to be taken by authorized dealers for the sake of safety, in cases of these items

Notes:

1. Make more inspections for driving in dusty areas.
2. Repeat the shown regular inspection, if the odometer reading exceeds the fixed value.
3. Take more maintenance to keep good performance for frequent driving in heavy conditions as rugged roads.


OIL LEVEL & OIL CHANGE

Check the oil level before starting the engine.

Put the vehicle on side stand. Pull the handle bar and let the bike stand vertical to the flat ground. Check if the oil level is between the maximum and minimum level. If not, fill the qualified engine oil to the proper amount.

Oil Change & Oil Filter Replacing

1. Take down the oil filter with the special tool and oil drain bolt before oil draining.
2. Replace the oil filter with a new one if needed.

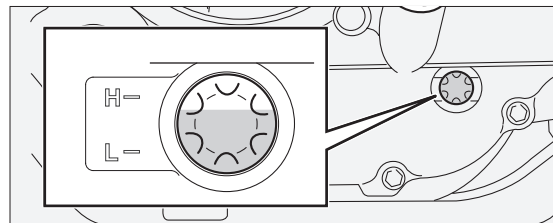

3. Install the oil filter with the special tool and oil drain bolt.
4. Fill the engine with qualified engine oil.
5. Make the engine runs in idling for several minutes and turn off.
6. Make sure the oil reaches the upper limit mark without any oil leakage.

SPARK PLUG


Clear away carbon deposit on the spark plug with small metal wire brush or spark plug cleaner during inspection period noted in the maintenance schedule. Readjust the electrode gap of spark plug with feeler gauge and keep the gap between 0.6~0.7mm.

Replace the sparking plug according to periodic maintenance chart.

Do not screw the spark plug too tight to avoid damaging the threads of cylinder cover.
Don't let the foreign objects fall into the engine through spark plug hole during dismounting.

Type
API SH, SAE10W50, JASO MA
Capacity
1.2L ± 0.05L

Type
NGK CR8E
Gap
0.6 - 0.7mm
Torque
17Nm

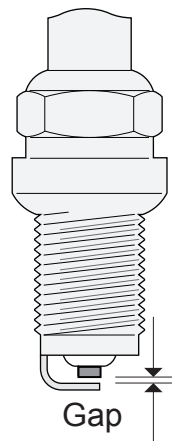

CATALYTIC CONVERTER

In order to meet the requirements of environmental emission, the muffler of the



Benelli

PURE PASSION SINCE 1911



The catalytic converter contains precious metals as the catalyst, which will transform the hazardous substances in the exhaust gas, including carbon monoxide, hydrocarbon and nitrogen oxide into non-toxic carbon dioxide, water and nitrogen through chemical reaction.

Since the catalytic converter is very important, the defective catalytic converter will pollute the air and damage the performance of the engine, if the replacement is needed, please use the genuine parts or entrust the dealers to replace.

Caution:

The catalytic converter is at high temperature area, please do not touch.


BATTERY

Battery is in the right guard board. The battery for the vehicle is maintenance free type. For the new vehicle, please ask the dealer of the company to fill electrolyte into the battery for you. It is not necessary to refill electrolyte in the future.

If you have to take out the battery for inspection, please follow these steps:

- a. Shut off power switch of the vehicle;
- b. Remove the seat cushion;

12V 6AH
MAINTENANCE-FREE

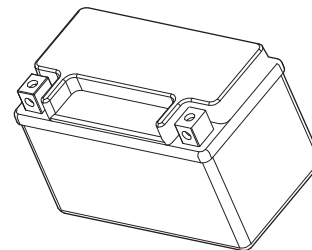

- d. Take down the negative terminal (—) first, and then the positive terminal (+) ;
 - e. Take out the battery gently.
- Install the battery in the reverse order of removal.

Attention :

Connect correctly the battery wires when the battery is re-installed. The red wire shall be connected with the positive terminal (+) ; and black wire shall be connected to the negative terminal (—) . If the wires are wrongly connected, it may damage the electrical system and the battery.
Power switch (key) shall be shut off while inspecting or replacing battery.

Please operate on the following requirements for the first use :

Remove the sealing paper on the battery. Inject specially supplied electrolyte into the battery and put on the battery sealing plug. Leave it for 30 minutes for full chemical reaction and then you can use the battery. For the new battery, initial charge after electrolyte filling will extend its service life. This operation shall be performed by your local dealers.

Connect the wire polarities correctly. Positive wire (red) shall be connected with the positive terminal (+) ; and negative wire (black) to the negative terminal (—) . Tighten terminal bolts. Clean frequently the erosive substances on the terminals with a wire brush while in use.

Please operate according to the following requirements while filling electrolyte into the maintenance-free battery:



Benelli

PURE PASSION SINCE 1911

- a. Place vertically the battery on a horizontal plane and remove the sealing tape.
- b. Take out the electrolyte from the plastic bag. Open its cover strip and use it as filling plug for the battery.

Attention: Please do not tear or puncture the sealing tape on the filling port.
The cover strip can be kept as filling plug for the battery.

c. Lift the electrolyte container upside down vertically and align the six filling ports of the container with the six filling ports on the battery. Pull downward hard the electrolyte container so as to puncture the sealing tape on the filling ports of electrolyte container. Electrolyte thus flows from the container to the battery. Check the three filling pipes on both sides. At least there is one pipe that has bubbles coming out on each side, which means that electrolyte filling begins normally. Attention: Please be sure not to tilt the container, or electrolyte filling may be interrupted.

d. When you are sure that there is at least one pipe that has bubbles coming out on each side (three pipes on each side), leave it there and keep the filling process over 20minutes.
If there is no pipe that has bubbles coming out on each side, tap slightly two to three times the bottom of the electrolyte container and check again if there is at least one pipe that has bubbles coming out on each side (The electrolyte cannot be taken down now).

e. When the electrolyte has completely flowed through, tap the container bottom several times to drain residual electrolyte; and then slowly pull out the electrolyte container.



f. The six sealing plugs on the cover strip align respectively to the six filling ports on the battery. Make sure the ends of the six sealing plug has inserted into the filling ports on the battery; press them hard into the ports till the cover strip is flat to the top surface of the upper part of the battery.

After completion of electrolyte filling, please do not pull out the cover strip or fill water, electrolyte or other liquid. Pay attention to the following matters while replacing the battery.

Before replacing the battery, please first determine the model of vehicle and check if both batteries are of the same type. During vehicle design, the battery specifications are considered as the best choice. If a battery of a different model is used, it may affect performance and life time of the vehicle, and possibly causes electrical failure.

If the vehicle will not be used for a long time, please remove the battery and charge it once a month.

Warning : Battery will produce explosive gases when chemical reaction occurs in the battery.
Keep the battery away from fire, spark and high temperature places.
The battery is filled with sulfuric acid (electrolyte). Electrolyte is poisonous substance.
Please keep it out of reach of children.

THROTTLE CABLE ADJUSTMENT

1. Screw off the lock nut.
2. Turn the adjustor to make the cable clearance within 10-20mm.
3. Retighten the lock nut after adjustment of cable clearance.




Benelli

PURE PASSION SINCE 1911

CLUTCH ADJUSTMENT

The free play of clutch is measured from the free status of the lever, to the engagement point of the clutch. the standard should be 10-20mm. Adjust in following methods, if anything abnormal.

- (1) Loose the locknut.
- (2) Screw in or out adjusting bolt and adjusting screw to make required free play.
- (3) Tighten locknut.

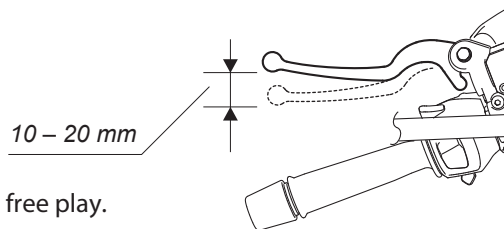

CHAIN ADJUSTMENT

Adjust the tightness of drive chain for driving each 1000km's in following methods to reach the free play of 10~25mm. Make regular adjustment of the chain according to your driving condition.

Warning : Suggestions here are for regular maintenance schedule it's recommended for inspection and adjustment of the chain before each driving. Accident as chain detaching or serious damage on engine can be caused by excessively slack chain.

Adjust the chain in following methods:

1. Support the vehicle with side stand.
2. Loosen rear axle nut.
3. Loosen locknut.
4. Turn adjusting nut to adjust the tightness of the chain. Reference marks are adopted on left and right swing arm and should reach the same grid after adjustment. Retighten the rear axle nut after adjust the chain tightness to 15~25 mm and confirm again.

Type
19mm head
14mm thread
Torque
90~100Nm

Notice:

When use new chain, check both front and rear sprockets if they are still in service limit and replace them, if necessary

During regular maintenance, check the following conditions of the chain:

- | | |
|-------------------------|-----------------------------|
| (1) Loose pin | (2) Damaged roller |
| (3) Rusty chain link | (4) Twisted or snarled link |
| (5) Excessive free play | (6) Loose chain |

The sprocket is probably damaged, if any above-mentioned problems on the chain are found.

Check the following items for sprocket:

- (1) Over worn sprocket tooth (2) Broken or damaged sprocket tooth (3) Loosened sprocket fixing nuts




Benelli

PURE PASSION SINCE 1911

CHECKING THE FRONT BRAKE LEVER AND REAR BRAKE PEDAL FREE PLAY


For the brake lever and brake pedal free play, please refer to the following parameters as shown. Periodically check the brake lever free play and, if necessary, have a dealer check the brake system.

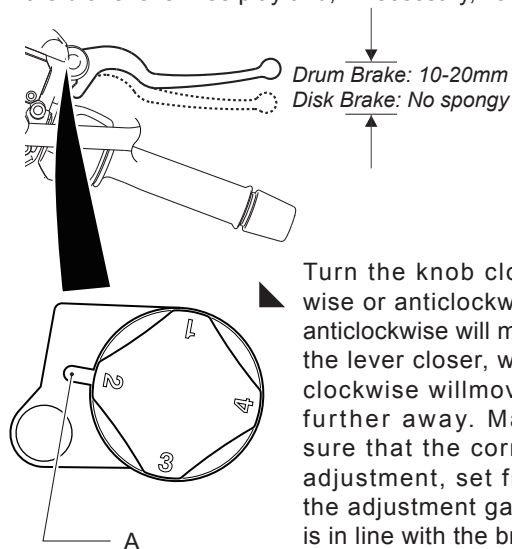

CHECKING THE BRAKE PADS

The front and rear brake pads(if equipped) must be checked for wear at the intervals specified in the periodic maintenance and lubrication chart.

Each brake pad is provided with wear indicator grooves, which allow you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the wear indicator grooves. If a brake pad has worn to the point that the wear indicator grooves were mostly disappeared, have a dealer replace the brake pads as a set.

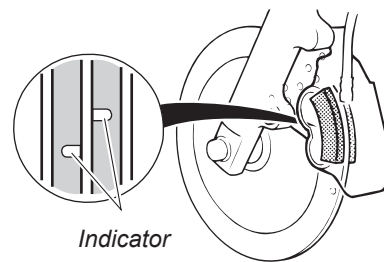

BRAKE FLUID



The vehicle uses the disc brake . Adjustment is finished before delivery. Contact dealer if any problem.

Recommended brake fluid
DOT 4

WARNING

In case of drinking the brake fluid by mistake or contacting with eye or skin, wash with a large amount of water, and seek medical advice immediately if in a serious condition.

Don't forget to check the amount level in the brake fluid reservoir. Add appropriate brake fluid if necessary.

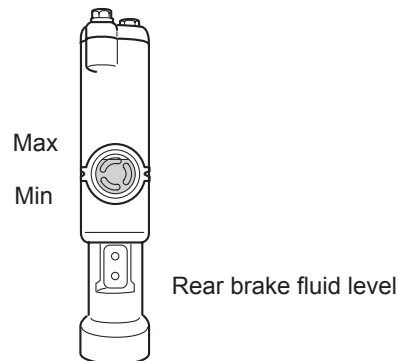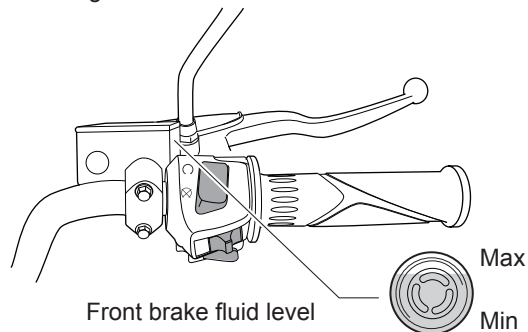

Benelli

PURE PASSION SINCE 1911



Warning :

Maintenance of braking system or brake pads should be taken by the authorized dealer which is equipped with necessary tools and can assure the quality of the service.

Caution:


The disk braking system has high pressure in the pipe require periodical maintenance in the manual.

Check the braking system everyday as follows:

1. Whether leak on the front and rear wheel braking system.
2. Whether leak, crack on the brake fluid tubes.
3. Check the feedback feeling on brake lever.
4. Check abrasion condition of the front and rear wheel brake pads.

Rear Brake

To adjust the stroke of rear brake pedal, screw or turn the adjusting bolt of rear brake, the free play be adjusted to 20~30mm.

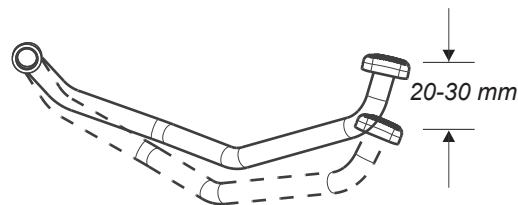

Benelli

PURE PASSION SINCE 1911


MAINTENANCE OF AIR FILTER

Air filter should be regularly maintained, especially when driving in areas full of dust and sand.

1. Dismount the seat, fuel tank and the side cover.
2. Remove the screw, open the cover of air filter and take out the filter element.
3. Immerse the filter element in clean solution and take out after cleaning for complete drying.
4. Immerse the filter element in clean engine oil again, after saturation, take out and squeeze off excessive oil.
5. Install the components back in the reverse order of dismount.

Caution :

Those highly flammable liquid like gasoline and organic solvent cannot be used for cleaning the filter element.

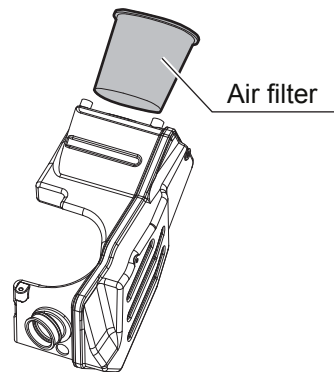

BULB REPLACEMENT

Replacing of Head Lamp Bulb


Take off the cover, replace the old bulb with the same specification one, and finally set up in the reversed orders.

Notice:

The new bulb installed must in the same specification with the old one. High-power bulb will increase load to circuit system which will cause faults such like battery power shortage.

FUSE REPLACEMENT

The fuse is beside the battery. Frequent blowing of fuse indicates short circuit or over loading. Contact with the authorized dealer for proper repairing. Use the fuses for the same specification as indicated.

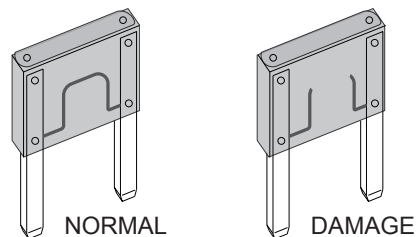

Main Fuse	25A
EFI System Fuse	15A

Warning:

It's dangerous to use other specifications of fuse, which would result severe failures like burning, firing.



Benelli

PURE PASSION SINCE 1911



LUBRICATION POINTS

Appropriate lubrication is important to keep every part of your vehicle in normal running and lengthen its working life and to ensure safe driving. Lubricate your vehicle after you have driven it for a long mileage or the vehicle is wet due to raining or washing. Detail lubrication points are shown in the figure below:

Vehicle lubricant

Lubricant grease

1. Rear brake pedal shaft
2. Side stand and its spring
3. Throttle cable
4. Pivot of front brake lever
5. Pivot of clutch lever

ADJUSTMENT OF VALVE CLEARANCE

Check and adjust the valve clearance when the engine is cold.

The Standard Valve Clearance: Intake Valve: 0.13-0.19mm, Exhaust Valve: 0.19-0.25mm



Notice:


Adjustment of valve clearance will have direct influence on the performance of engine, thus requiring strict accordance with the time interval required in "Maintenance Schedule". Adjustment should be done with professional technicians corresponding tools. In order to keep the valve clearance in good condition, we strongly recommend you to leave it up to consult to authorized dealers about this maintenance.

TIRE

Inflation pressure and tire tread should be regularly checked. In order to ensure maximum safety and longer service life, inflation pressure requires more frequent routine check.

Tire Pressure

Insufficient tire pressure will not only accelerate wearing, but also have bad impact on driving stability such as making turning difficult. However, too high pressure will reduce the contact area between tire and ground, thus causing slipping or even getting out of control. Tire pressure should be kept in the standard range. Adjust the tire pressure under a "cold" condition.

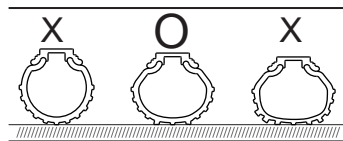

Front Wheel	250 kpa
Rear Wheel	250 kpa



Benelli

PURE PASSION SINCE 1911



Tire Tread

Driving a vehicle with tires excessively worn will reduce driving stability or even get out of control. When the tire tread of front wheel is less than 1.6mm, and the rear wheel's tread is less than 2mm or even less, replacement is strongly recommended.

STORAGE GUIDELINE

STORAGE

If you need to keep your vehicle for a long time without using, it's suggested to following these instructions:

1. Change engine oil.
2. Lubricate drive chain
3. Remove the battery. Keep the battery in proper place which can avoid freezing and the direct sunlight.
4. Clean and dry the vehicle. Wax the surface of the paint.
5. Inflate tire to the required pressure. Put the vehicle on a block to make two tires off the ground.
6. Cover the vehicle (no plastic or coating material) and keep it in the place with consistent temperature and low humidity. Do not keep your vehicle under direct sunlight.





USE THE VEHICLE AFTER STORAGE

1. Take off the cover and clean the vehicle. Change engine oil if you keep your vehicle for more than four months.
2. Install the battery and do charging as needed.
3. Wash away the anti-rust agent in fuel tank, and add new petrol into fuel tank.



Benelli

PURE PASSION SINCE 1911



SIZE AND WEIGHT

Length.....	2080mm
Width.....	810mm
Height.....	1125mm
Wheelbase.....	1400mm
Dry Weight.....	143kg

ENGINE

Type	One-cylinder, Four-stroke, Liquid-cooled
Model.....	BJ172MM-A
Bore × Stroke.....	ø72×61.2mm
Displacement.....	249ml
Maximum Power.....	18.5KW/9000r/min
Maximum Torque.....	21.5N.m/7500r/min
Ignition System Type.....	TLI
Compression Ratio.....	11.2:1
Start Type.....	Electric Starting
Transmission System.....	Chain
Clutch.....	Wet, Multi-plate

Front Brake Type	disc brake
Rear Brake Type	disc brake
Front Tire Specification	110/70ZR17MC
Rear Tire Specification	140/60ZR17MC

CAPACITY

Fuel Tank (include reserve tank).....	17L
Fuel Type.....	93 & above

ELECTRICAL SYSTEM

Battery.....	12V 6Ah
Magneto.....	Fly-wheel Magneto
Headlamp.....	12V 55/55W
Tail/Brake Lamp.....	12V LED
Turn Signal Lamp.....	12V LED
Meter Lamp.....	12V 2W
Neutral Position Indicator Lamp.....	12V 2W
High beam indicator lamp.....	12V 2W
Turning indicator	12V 3W
Horn Specification.....	12V 3A

