
decakila

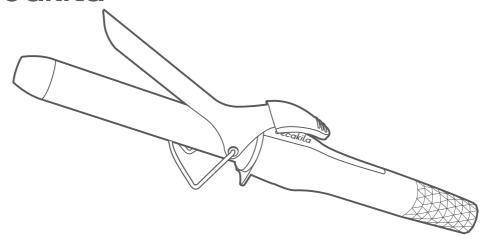

KUHS015W CURLING TONG



CONTENTS

GENERAL CAUTION	0.
OPERATION	02
HINT	03
CLEANING AND CARE	03
RATING	03
DISPOSAL AND THE ENVIRONMENT	03

GENERAL CAUTION

To reduce the risk of fire, burns, electric shock or other injury, before using your curling iron a careful study of the following important safety precautions is strongly recommended:

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- Warning this appliance must not be taken into the bathroom.
- Do not immerse in water or any other liquid.
- Do not use with wet hands. Such situations above constitute a danger to life through electric shock.
- Do not wrap the mains cord around the barrel or handle when hot, or when storing.
- The unit is hot when in use. Take care to avoid contact between the hot surface of the barrel and bare skin, particularly at the face and neck.
- This appliance should nerve be stored while hot or while still connected to the power, always ensure the appliance is switched off, unplugged from the power and that it has cooled down before storing.
- The appliance must never be left unattended when plugged in.
- This appliance is intended for household use only. It is not intended for commercial use. Use the appliance only for its intended use as described in this manual.
- The barrel will become hot during operation so care should be taken not to touch this part of the appliance when it is switched on or just after it has been turned off.
- · Close supervision is necessary when this appliance is used near or by children or disabled people. Always keep in a safe place.
- Never continue to use this appliance if it is not working properly, or has been dropped, or if it has been dropped in water or any other liquid, or if it has a damaged plug or lead.
- Keep the mains lead away from heated surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

OPERATION

For best results, wash, comb and dry hair until just damp to touch – although the curling iron can be used for touch ups at any time.

- Fully unwind the mains cable.
- Plug the curling iron into the power and switch on at the socket.
- Wait for a couple of minutes to allow the appliance to reach its working temperature.
- Your hair should be dry or very nearly dry when using curling iron. Separate the strands of hair to be curled and gently brush it free of tangles.
- Grip the hair using the clamp and wind it towards the scalp. Do not allow the barrel to come into contact with your skin as it is very hot
- Hold the curling iron in this position for around 10-20 seconds and then gently unwind.
- Holding the curling iron in position for 5-10 seconds will create gentle hair waves.
- Fine hair requires less time than coarse hair to create effects.

HINT

Always experiment on a small area of hair first to ensure you achieve the results you want.

CLEANING AND CARE

- The appliance must be unplugged before cleaning.
- Let the appliance cool down before touching or cleaning the body.
- Clean the housing with a soft dry cloth.
- Do not use any harsh detergents, abrasives, solvents or cleaners. Never immerse in water to clean.

RATING

Voltage: :120V~ 60Hz

Power consumption: 32W

DISPOSAL AND THE ENVIRONMENT

If your electrical appliance requires replacement or is of no further use, please think of protecting the environment. Contact your local authority for advice as many have facilities for environmentally safe disposal.









Made in China Jiangsu China. 1221.D02 www.decakila.com Global Links Technology Co. Pte. Ltd.