


OPERATING INSTRUCTIONS



FOLLOW THESE SAFETY RULES BEFORE OPERATING THE TANK



A PERSONAL PROTECTION EQUIPMENT

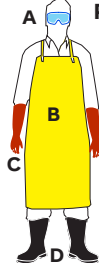

The following equipment **MUST** be worn when operating the SUPERCLEAN TANK:

- A** Safety goggles
 - B** Waterproof apron
 - C** Elbow length PVC gloves
 - D** Non slip safety boots/footwear
- Remove all rings and jewellery

POWER CONNECTION



Inspect the power cable for any signs of damage or wear. DO NOT use the Tank if the power cable appears damaged. Call our service team to replace/repair the cable. The cable must be plugged directly into an ordinary 240V wall socket.

DO NOT USE A DISTRIBUTION BOARD.



When disconnecting the power supply, ensure power cord is wrapped neatly around the cable holder on the side of the tank


MOVING THE TANK

When moving the Super Clean Tank, make sure the **lid is closed**, the machine is **OFF** and the wheel castors are unlocked. Do not move the machine if the lid is open to prevent injury. Ensure to relock the wheels once the tank is repositioned



CLEARANCE

Ensure there is sufficient space around the tank for ventilation and to allow the lid to open fully

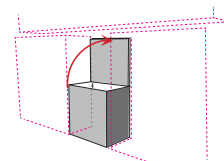


LOADING THE CLEANING TANK Follow each step in order

1



The **AUTO LID/AUTO LIFT** feature allows effortless operation of your tank by simply pressing buttons

2

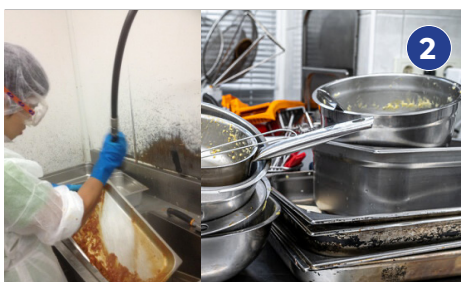

Remove all scraps from items **BEFORE** loading the basket. **NO FOOD SCRAPS TO GO INTO THE BASKET**

3



Press the **UP** button to open the lid and raise the internal basket.

4



Carefully place items in the basket. Best results are achieved by placing items loosely stacked

MAX LOAD Do not stack items above the **MAX LOAD** line

5



Press the **DOWN** button to lower the basket and close the lid.

6



Consult the **SOAKING TIME GUIDE** to determine the ideal soaking time to clean items

SOAKING TIME GUIDE			
	1	2	2
	2	3	2
	1	3	1


UNLOADING THE CLEANING TANK Follow each step in order

7



When the soaking time is complete, using the **UP** button, open the lid and raise the basket to unload.

8

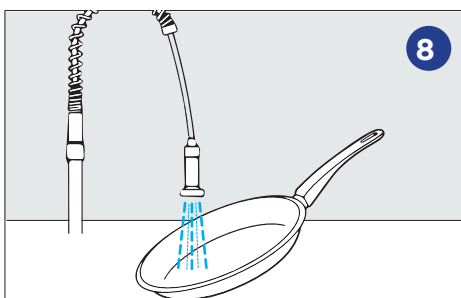

Remove all items and rinse them off thoroughly with clean water

9



Lower the basket and close the lid with the **DOWN** button or reload with dirty items and repeat steps 2-8



SUPERCLEAN TANK

IN DIRTY ► OUT CLEAN




MAINTENANCE AND GENERAL INSTRUCTIONS

Follow these guidelines to ensure an efficient working of your SUPERCLEAN TANK

DRAINING THE TANK






Ensure the tank is unplugged and the power is OFF

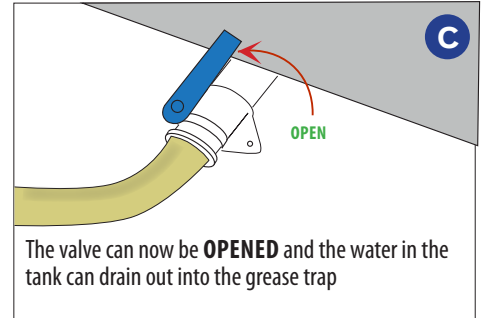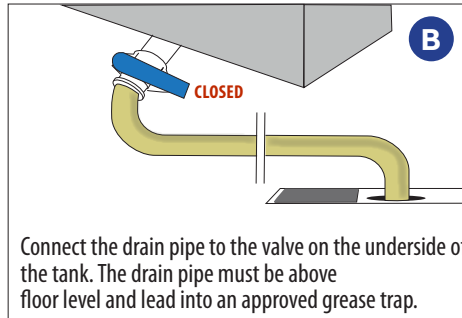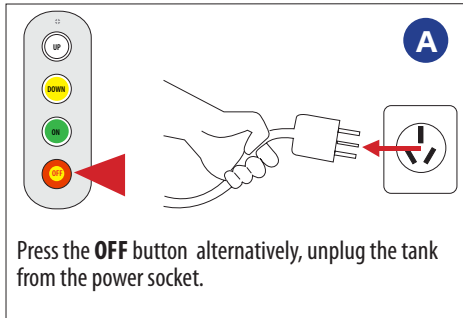




CLEANING THE TANK





Ensure the tank is unplugged and the power is OFF

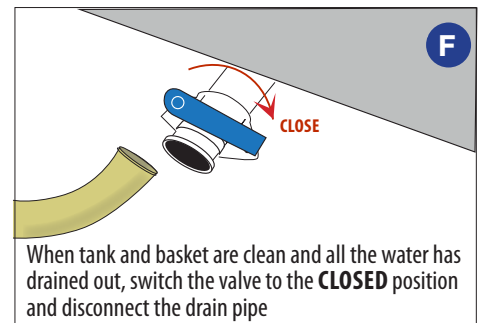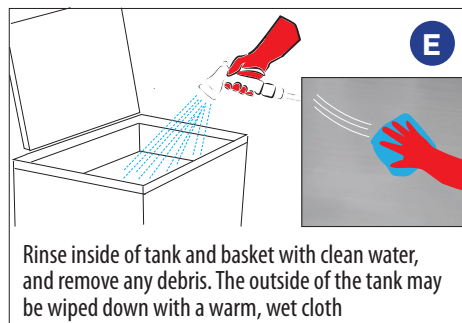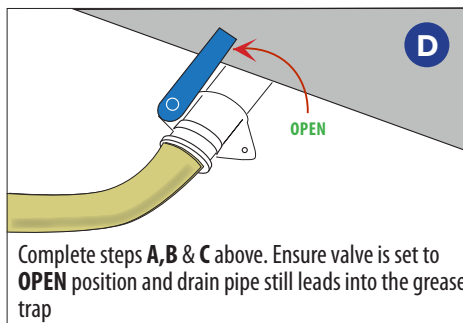

REFRESHING THE TANK

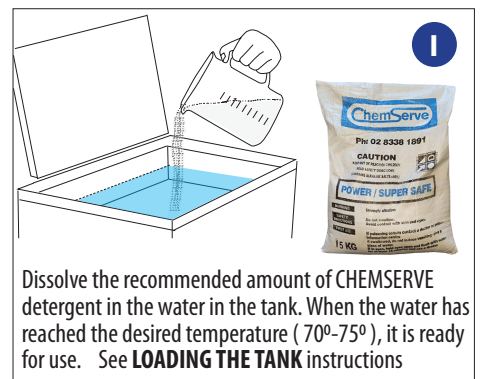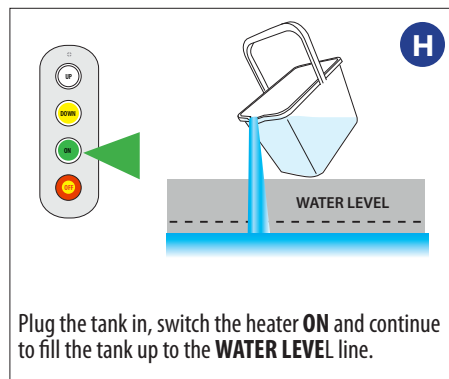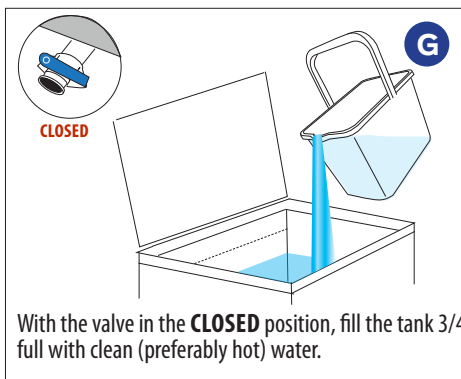

WHEN TANK IS NOT IN USE

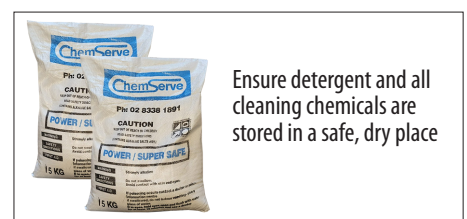
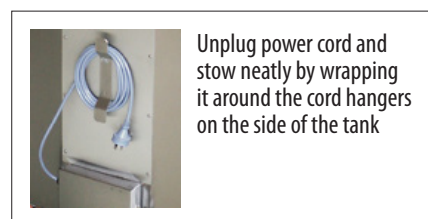


Alert your supervisor immediately if your tank is not functioning correctly




SOAKING TIME GUIDE

The water and detergent in the tank **need only be changed every 30 days**. Keep a diary of when each change takes place

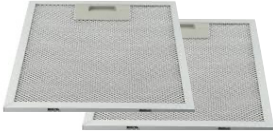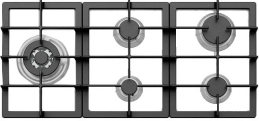ITEM	CONDITION		
	GREASY	LIGHT	HEAVY
 Trolleys	3 hours	8 hours	12 hours
 Pots and pans	1 hour	1 hour	1 hour
 Frying pans	15 minutes	1 hour	1 hour
 Filters	30 minutes	1 hour	1 hour
 Large trays	30 minutes	1 hour	6 hours
 Fryer baskets	2 hours	4 hours	12 hours
 Grills and grates	2 hours	6 hours	12 hours
 Baking tins	15 minutes	1 hour	1 hour



SUPERCLEANTANK
IN DIRTY ► OUT CLEAN

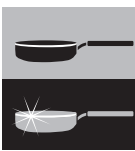

INCIDENT HANDLING - AUTO LIFT TANK

CHEMICAL HANDLING 	Irritation to eyes or skin	Wear all proper PPE. Flush eyes thoroughly with water for 15 minutes. Seek urgent medical attention
	Swallowing/ingestion	Rinse mouth with fresh, clean water. Do not induce vomiting Seek urgent medical attention
	Spills and splashes	Mop up any floor spills immediately to prevent falls


RISK ASSESSMENT - AUTO LIFT TANK



The operation of a SUPERCLEAN TANK possesses certain dangers and risks. It is important that all operators familiarise themselves with these risks and dangers and are alert to possible sources of injury.

ESSENTIAL SAFETY PRACTICES

PERSONAL PROTECTION EQUIPMENT (PPE)

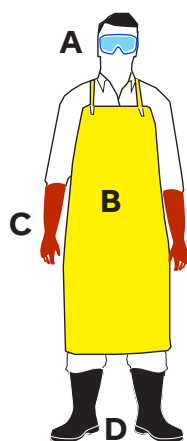

The following equipment **MUST** be worn when operating the SUPERCLEAN TANK:

- A** Safety goggles
- B** Waterproof apron
- C** Elbow length PVC gloves
- D** Non slip safety boots/footwear

Remove rings and jewellery

POWER CONNECTION



Inspect the power cable for any signs of damage or wear. **DO NOT** use the Tank if the power cable appears damaged. Call our service team to replace/repair the cable.

The cable must be plugged directly into an ordinary 240V wall socket.

DO NOT USE A DISTRIBUTION BOARD.




When the tank is not in use, unplug the power cord and stow it neatly on the hooks on the side of the tank

STABILITY

Ensure all 4 caster wheels are **LOCKED** when operating the SUPERCLEAN TANK



CLEARANCE

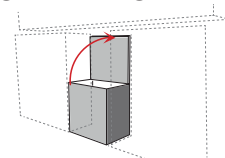

Ensure there is sufficient space around the tank for ventilation and to allow the lid to open fully

TASK	HAZARD	RISK FACTOR	SAFETY MEASURES
Loading the tank	Electrocution	Medium	Check power cabling is not damaged and not lying in any water
	Burns to hands or body	Medium	Wear all proper PPE
	Crushing fingers	Medium	Use auto UP/DOWN buttons and keep fingers away from the lid
	Spills and splashes	Medium	Mop up any floor spills immediately to prevent falls
Unloading the tank	Burns to hands or body	Low	Wear all proper PPE
	Chemical irritation	Low	Wear all proper PPE
	Crushing fingers	Low	Use auto UP/DOWN buttons and keep keep fingers away from lid
	Spills and splashes	Medium	Mop up any floor spills immediately to prevent falls
Chemical handling	Irritation to eyes or skin	Low	Wear all proper PPE. Flush eyes thoroughly with water for 15 minutes. Seek urgent medical attention
	Swallowing/ingestion	Low	Rinse mouth with fresh, clean water. Do not induce vomiting Seek urgent medical attention
	Spills and splashes	Medium	Mop up any floor spills immediately to prevent falls